

[manuals.plus](#) /› [Craig](#) /› [Craig Electronics E-Digital CMP798 7.0" 8 GB Tablet User Manual](#)**Craig CMP798**

# Craig Electronics E-Digital CMP798 7.0" 8 GB Tablet User Manual

Model: CMP798

## 1. INTRODUCTION

This manual provides essential instructions for setting up, operating, and maintaining your Craig Electronics E-Digital CMP798 7.0" 8 GB Tablet. Please read this manual thoroughly before using your device to ensure proper functionality and to prevent damage.

## 2. SAFETY INFORMATION

- Do not expose the tablet to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the tablet to severe impact.
- Use only manufacturer-approved chargers and accessories.
- Do not attempt to disassemble or repair the tablet yourself. Refer to qualified service personnel.
- Keep the tablet away from water and other liquids.


## 3. PACKAGE CONTENTS

Verify that all items are present in your product package:

- Craig E-Digital CMP798 Tablet
- USB Cable
- Keyboard Case
- AC/USB Adaptor
- USB OTG Cable

## 4. DEVICE OVERVIEW

The Craig E-Digital CMP798 tablet is designed for portable computing and entertainment. It features a 7-inch high-definition capacitive touch screen and runs on Android Lollipop 5.1. The included keyboard case enhances productivity.

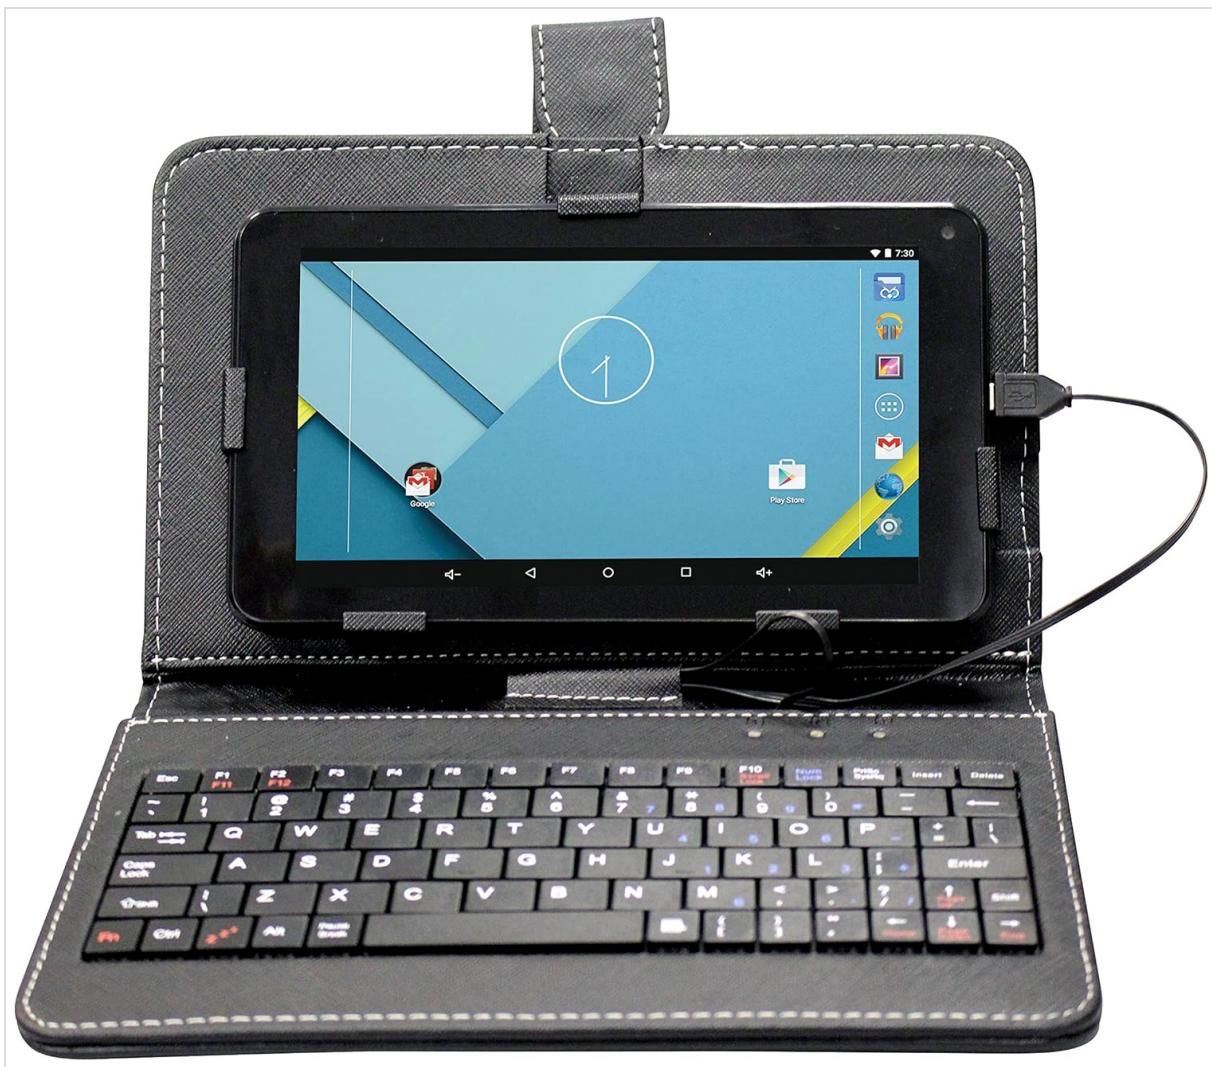

This image shows the Craig E-Digital CMP798 tablet securely placed within its dedicated keyboard case. The tablet screen displays the Android home interface with various app icons. The keyboard is integrated into the case, connected to the tablet via a USB cable visible on the right side. This setup allows for a laptop-like experience.

## Key Features:

- 7-inch High Definition Digital Capacitive Touch Screen (1024 x 600)
- Quad Core Processor (1.2 GHz A\_Series\_Qual\_Core\_A6)
- Android Lollipop 5.1 Operating System
- 8 GB Built-in Flash Memory
- Built-in Front Camera
- Built-in Wi-Fi (802.11b/g/n)
- Micro SD Card Slot (Supports Max. 32GB)
- USB On-The-Go (OTG) functionality

## 5. SETUP

### 5.1 Initial Charging

1. Connect the AC/USB Adaptor to the tablet's Micro USB port.
2. Plug the adaptor into a standard wall outlet.
3. Allow the tablet to charge completely before first use. The battery indicator on the screen will show charging status.

## 5.2 Powering On/Off

- **To Power On:** Press and hold the Power button until the screen lights up.
- **To Power Off:** Press and hold the Power button until a menu appears. Select "Power off" and confirm.
- **To Restart:** From the Power menu, select "Restart".

## 5.3 Connecting the Keyboard Case

The included keyboard case connects to the tablet via a USB cable. Simply plug the USB connector from the keyboard case into the tablet's Micro USB port. The tablet should automatically recognize the keyboard.

## 5.4 Initial Android Setup

Upon first power-on, the tablet will guide you through the initial setup process. Follow the on-screen prompts to:

- Select your language.
- Connect to a Wi-Fi network.
- Set up your Google account (optional, but recommended for app downloads).
- Configure date and time.

# 6. OPERATING YOUR TABLET

---

## 6.1 Touchscreen Navigation

The tablet's 7-inch screen is a multi-point capacitive touch screen. Use the following gestures:

- **Tap:** To select an item or open an application.
- **Tap & Hold:** To access contextual menus or move icons.
- **Swipe:** To scroll through lists or switch between home screens.
- **Pinch:** To zoom in or out on images and web pages.

## 6.2 Wi-Fi Connection

1. Go to **Settings > Wi-Fi**.
2. Toggle Wi-Fi to **On**.
3. Select your desired network from the list.
4. Enter the password if prompted, then tap **Connect**.

## 6.3 Google Play Store

The tablet supports the Google Play Store, allowing you to download and install a wide variety of applications, games, movies, and books. Ensure you have a Google account set up to access the Play Store.

## 6.4 Using the Micro SD Card Slot

The tablet includes a Micro SD card slot, supporting cards up to 32GB. This allows for expanded storage for photos, videos, and other files.

1. Carefully insert the Micro SD card into the designated slot until it clicks into place.
2. To remove, gently push the card in until it springs out.

## 6.5 USB On-The-Go (OTG)

The Micro USB port supports USB OTG, allowing the tablet to act as a host for connecting external USB devices like flash drives. Use the included USB OTG cable for this functionality.

## 7. MAINTENANCE

---

### 7.1 Cleaning the Tablet

- Use a soft, lint-free cloth to clean the screen and body of the tablet.
- Do not use abrasive cleaners, alcohol, or chemical solvents.
- Ensure the tablet is powered off before cleaning.

### 7.2 Battery Care

- Avoid fully discharging the battery frequently.
- Do not leave the tablet connected to the charger for extended periods after it is fully charged.
- Store the tablet in a cool, dry place if not used for a long time.

## 8. TROUBLESHOOTING

---

### 8.1 Tablet Does Not Power On

- Ensure the battery is charged. Connect the tablet to the AC adaptor and allow it to charge for at least 30 minutes before attempting to power on again.
- Try holding the Power button for 10-15 seconds to force a restart.

### 8.2 Wi-Fi Connection Issues

- Check if Wi-Fi is enabled in Settings.
- Ensure you are within range of a Wi-Fi network.
- Verify the Wi-Fi password is correct.
- Restart your Wi-Fi router and the tablet.

### 8.3 Slow Performance

- Close unnecessary applications running in the background.
- Clear cached data from apps in Settings > Apps.
- Consider uninstalling unused applications to free up storage space.
- Restart the tablet periodically.

## 9. SPECIFICATIONS

---

<b>Model Number</b>	CMP798
<b>Operating System</b>	Android 5.1 Lollipop
<b>Processor</b>	VIA A-Series Quad-Core A6 1.2 GHz
<b>Display</b>	7.0 inches, 1024 x 600 Pixels (HD Digital Capacitive Touch Screen)
<b>RAM</b>	8 GB SDRAM
<b>Internal Storage</b>	8 GB Flash Memory

<b>Expandable Storage</b>	Micro SD Card Slot (Supports up to 32GB)
<b>Wireless Connectivity</b>	Wi-Fi 802.11b/g/n
<b>Camera</b>	Built-in Front Camera
<b>Ports</b>	Micro USB (OTG compatible), 3.5mm Stereo Headphone Jack
<b>Power Source</b>	Built-in Rechargeable Battery, Corded Electric
<b>Dimensions (LxWxH)</b>	8 x 0.79 x 5.31 inches
<b>Item Weight</b>	1.6 pounds

## 10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official Craig Electronics website. Keep your proof of purchase for warranty claims. For further assistance, you may contact Craig Electronics customer support directly.

© 2023 Craig Electronics. All rights reserved.