

[Manuals.plus](#) /

> [Nerf](#) /

> NERF Zombie Strike Brainsaw Blaster B3569 User Manual

Nerf B3569

NERF Zombie Strike Brainsaw Blaster B3569 User Manual

Model: B3569

PRODUCT OVERVIEW

The NERF Zombie Strike Brainsaw Blaster is a foam dart blaster designed for manual operation. It features a unique spinning saw blade mechanism in addition to its dart firing capability. This manual provides instructions for safe assembly, operation, and maintenance of your blaster.

Included Components:

- 1 x NERF Zombie Strike Brainsaw Blaster
- 1 x Handle
- 8 x Zombie Strike Darts
- Instructions (This manual is in English. French instructions may be included separately.)



Figure 1: The NERF Zombie Strike Brainsaw Blaster.

SETUP

1. Attaching the Handle

Locate the handle included in the package. Align the handle with the designated slot on the blaster body. Push firmly until it clicks

into place, ensuring it is securely attached.

2. Loading Darts

The blaster holds multiple darts. To load, insert one Zombie Strike dart into each of the dart ports located on the side of the blaster. Ensure darts are fully seated but not forced.



Figure 2: Loading a foam dart into the blaster.

OPERATING

1. Firing Darts

1. Ensure darts are loaded into the blaster.
2. Pull back the priming handle (if applicable, typically located near the trigger or at the rear of the blaster) until it locks into place.
3. Aim the blaster at your target.
4. Press the trigger to fire one dart at a time.

2. Activating the Spinning Saw Blade

The blaster features a manual spinning saw blade. To activate, locate the pull-string mechanism, typically on the side or top of the blaster. Pull the string firmly and quickly to make the saw blade spin. Release the string after activation.



Figure 3: Activating the spinning saw blade.

Safety Precautions:

- Do not aim at eyes or face.
- Use only official NERF darts. Other darts may not meet safety standards.
- Do not modify darts or blaster.

MAINTENANCE

1. Cleaning

Wipe the blaster with a damp cloth to remove dust and dirt. Do not submerge the blaster in water or use harsh cleaning chemicals.

2. Dart Care

Inspect darts regularly for damage. Discard bent, torn, or otherwise compromised darts as they may affect performance or cause jamming. Store darts in a clean, dry place.

TROUBLESHOOTING

Dart Not Firing or Jamming:

- Ensure the blaster is fully primed.
- Check if a dart is properly loaded in the firing chamber.
- Inspect darts for damage or deformation. Replace any damaged darts.
- Ensure no foreign objects are obstructing the dart path.

Saw Blade Not Spinning:

- Ensure the pull-string is fully extended and released with sufficient force.
- Check for any obstructions around the saw blade.

SPECIFICATIONS

Feature	Detail
Model Number	B3569
Product Dimensions	7.9 x 63.5 x 27.89 cm
Item Weight	1 kg
Manufacturer	NERF
Material Type	Foam
Operation Mode	Manual
Power Source	Manual
Batteries Required	No
Recommended Age	8 - 10 years

WARRANTY INFORMATION

This product is sold without a manufacturer's warranty. Please refer to the retailer's return policy for any issues upon purchase.

CUSTOMER SUPPORT

For further assistance or inquiries regarding your NERF Zombie Strike Brainsaw Blaster, please contact the manufacturer:
Manufacturer: NERF
Contact Address: MISSISSAUGA, ON, L4W 5A4 CA
Please have your product model number (B3569) available when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question