

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [TP-Link](#) /

› [TP-LINK Archer C7 AC1750 Dual Band Wireless AC Gigabit Router User Manual](#)

## TP-Link Archer C7

# TP-LINK Archer C7 AC1750 Dual Band Wireless AC Gigabit Router User Manual

Model: Archer C7

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

## INTRODUCTION

---

This manual provides instructions for setting up, operating, and maintaining your TP-LINK Archer C7 AC1750 Dual Band Wireless AC Gigabit Router. The Archer C7 is designed to deliver high-speed wireless connectivity using the 802.11ac standard, offering enhanced performance for various home and office devices.

J.D. Power ranked TP-Link  
"Highest in Customer  
Satisfaction for  
Wireless Routers."\*



\*TP-Link received the highest numerical score among 6 companies in the J.D. Power 2017 U.S. Wireless Router Satisfaction Report, based on 980 total responses, measuring the opinions of customers who purchased a wireless router in the previous 12 months, surveyed October 2017. Your experiences may vary. Visit [jdpower.com](http://jdpower.com)

Image: Front view of the TP-LINK Archer C7 AC1750 router, showcasing its sleek black design and three external antennas.

## SETUP GUIDE

---

Setting up your Archer C7 router is designed to be straightforward. Follow these steps for initial installation and configuration.

### Initial Hardware Connection

1. **Power Connection:** Connect the provided power adapter to the router's power port and then to a power outlet.
2. **Internet Connection:** Connect your modem's Ethernet cable to the blue WAN/Internet port on the back of the Archer C7 router.
3. **Wired Devices (Optional):** For wired connections, connect Ethernet cables from your devices (e.g., computer, gaming console) to any of the yellow LAN ports (1-4) on the router.
4. **Power On:** Press the Power On/Off button. Ensure the wireless switch (located near the power button) is in the 'On' position for Wi-Fi functionality.



Image: Rear view of the Archer C7 router, showing the power input, On/Off switch, two USB ports, one blue WAN port, and four yellow LAN ports.

## Software Configuration using TP-LINK Tether App

The TP-LINK Tether app provides an easy way to set up and manage your router from your mobile device.

1. **Download the App:** Download the TP-LINK Tether app from your device's app store.
2. **Connect to Wi-Fi:** Connect your mobile device to the router's default Wi-Fi network (SSID and password are usually printed on a label on the router).
3. **Launch and Configure:** Open the Tether app and follow the on-screen instructions to configure your internet connection, Wi-Fi settings, and other router features.

## Special Setup for CenturyLink Fiber Optic Customers

If you are a CenturyLink customer with fiber optic internet services and use a separate modem (e.g., Calix fiber optic box and Technicolor C1100T router), you may need to configure your existing modem into Bridge Mode before connecting the Archer C7. This ensures optimal performance and avoids double NAT issues.

1. **Keep Existing Setup:** Leave all existing CenturyLink equipment plugged in and connected initially.
2. **Access CenturyLink Support:** Open a web browser and navigate to [centurylink.com/support](https://centurylink.com/support).
3. **Search for Bridge Mode:** Use the search function to find instructions for "bridge mode".
4. **Locate Your Model:** Find your specific CenturyLink router model and click the corresponding link.
5. **Advanced Setup:** Scroll down and click on "Advanced setup".

6. **WAN Settings:** Under "WAN Settings", click "WAN Settings" again.
7. **Transparent Bridging:** Click "Transparent Bridging" and follow the steps to put your CenturyLink router into Bridge Mode.
8. **Connect Archer C7:** After configuring Bridge Mode, connect the power cord to the Archer C7. Then, connect an Ethernet cable from the Internet port on the Archer C7 to one of the Ethernet ports on your OLD CenturyLink router. Finally, follow the standard setup steps for the Archer C7.

## OPERATION AND FEATURES

---

The Archer C7 offers advanced features for a robust and reliable home network.

### Dual Band Wireless AC Technology

- **802.11ac Standard:** The router supports the next-generation Wi-Fi standard, 802.11ac, which is up to three times faster than previous wireless N speeds.
- **Combined Speeds:** It provides a total data transfer speed of up to 1.75 Gbps, with 1.3 Gbps over the 5 GHz band and 450 Mbps over the 2.4 GHz band. This allows for smooth streaming, gaming, and browsing across multiple devices.
- **Backward Compatibility:** The Archer C7 is backward compatible with 802.11b/g/n devices, ensuring all your existing wireless devices can connect.

### Enhanced Wireless Coverage

Equipped with six antennas (three external and three internal), the Archer C7 provides extensive wireless coverage and reliable connections throughout your home or office.

### USB Ports for Sharing

The router includes two USB ports, enabling you to share printers, movies, or music with devices on your home network or even remotely across the internet via an FTP server.

### Guest Network

Utilize the Guest Network feature to provide secure Wi-Fi access for visitors without compromising the security of your main network.

### IP-based Bandwidth Control

Manage the bandwidth allocated to individual devices connected to your router, ensuring fair usage and optimal performance for critical applications.

### Official Product Video Overview

Your browser does not support the video tag.

Video: An overview of the TP-Link AC1750 Wireless Dual Band Gigabit Router (Archer C7), highlighting its 802.11ac Wi-Fi standard, dual-band speeds (1.3Gbps on 5GHz and 450Mbps on 2.4GHz), six antennas for wide coverage, two USB ports for sharing, and easy setup via the TP-LINK Tether app. It also mentions Guest Network and Parental Control features.

## MAINTENANCE

---

To ensure optimal performance and longevity of your TP-LINK Archer C7 router, consider the following maintenance tips:

- **Firmware Updates:** Regularly check for and install the latest firmware updates from the TP-Link official website. Firmware updates often include performance improvements, security patches, and new features.
- **Physical Cleaning:** Keep the router in a clean, dust-free environment. Periodically wipe the exterior with a soft, dry cloth. Ensure ventilation openings are not blocked to prevent overheating.
- **Optimal Placement:** Place the router in a central location in your home or office, away from obstructions and devices that may cause interference (e.g., microwaves, cordless phones).
- **Security Practices:** Regularly change your Wi-Fi password and router login credentials. Use strong, unique passwords.
- **Rebooting:** Occasionally rebooting your router (power cycling it) can help resolve minor network issues and improve performance.

## TROUBLESHOOTING

---

If you encounter issues with your Archer C7 router, try the following troubleshooting steps:

- **No Internet Connection:**
  - Check all cable connections, especially the Ethernet cable from your modem to the router's WAN port.
  - Power cycle both your modem and router. Unplug them from power, wait 30 seconds, then plug the modem back in. Once the modem is fully online, plug the router back in.
  - Verify that your modem is working correctly by connecting a computer directly to it (bypassing the router).
  - Ensure the wireless switch on the router is turned on.
- **Slow Wi-Fi Speed:**
  - Ensure your devices are connected to the appropriate band (5GHz for faster speeds, 2.4GHz for wider coverage).
  - Reduce interference by moving the router away from other electronic devices.
  - Check for firmware updates for your router.
  - Use the TP-LINK Tether app to monitor connected devices and manage bandwidth.
- **Cannot Access Router Settings:**
  - Ensure your device is connected to the router's network (either wired or wirelessly).
  - Try accessing the router's web interface using the default IP address (e.g., 192.168.0.1 or 192.168.1.1) or the domain name (e.g., tplinkwifi.net).
  - If you forgot your login password, you may need to perform a factory reset (see the reset button on the back of the router).
- **Guest Network Issues:**
  - Ensure the Guest Network feature is enabled in the router settings via the Tether app or web interface.
  - Verify the Guest Network SSID and password are correct.

## SPECIFICATIONS

---

Feature	Detail
Brand	TP-Link
Model Name	Archer C7
Item Model Number	Archer C7 CRFB

Feature	Detail
Product Dimensions	9.57 x 6.32 x 1.28 inches
Item Weight	1.12 pounds
Manufacturer	TP-LINK
Connectivity Technology	Wi-Fi
Wireless Communication Standard	802.11ac
Frequency Band Class	Dual-Band (2.4GHz and 5GHz)
Special Feature	WPS (Wi-Fi Protected Setup)
Compatible Devices	Computers, Mobile Devices
Recommended Uses	Home, Office
Color	Black
Antenna Type	Internal (3 internal, 3 external)

## WARRANTY AND SUPPORT

---

This TP-LINK Archer C7 router is a renewed product. As such, it is covered by the [Amazon Renewed Guarantee](#), which ensures eligibility for replacement or refund if you are not satisfied with your purchase.

For technical assistance or further inquiries, you can:

- **TP-LINK Tether App:** Use the TP-LINK Tether app for easy management and configuration, which can often resolve common issues.
- **Online Resources:** Visit the official TP-Link support website for FAQs, troubleshooting guides, and firmware downloads.
- **Customer Service:** Contact TP-Link customer support for direct assistance.