

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Kärcher](#) /

› [Kärcher Multi Purpose Pressure Washer Detergent User Manual](#)

Kärcher 9.558-144.0

Kärcher Multi Purpose Pressure Washer Detergent User Manual

Brand: Kärcher | Model: 9.558-144.0

1. INTRODUCTION

The Kärcher Multi Purpose Pressure Washer Detergent is a highly concentrated cleaning solution designed to work effectively with pressure washers. This formula helps to quickly and thoroughly clean various outdoor surfaces, reducing the effort and time required for maintenance tasks. It is compatible with all Kärcher Home & Garden pressure washers, as well as consumer pressure washers from other brands.

2. PRODUCT FEATURES

- **Universal Compatibility:** Formulated to work in tandem with your pressure washer, and compatible with most consumer gas & electric power pressure washers.
- **The Kärcher Promise - Cleaner. Quicker:** Kärcher's Multi-Purpose Pressure Washer Soap is perfect for cleaning concrete, pavement, driveways, patios, decks, sidewalks, RVs, cars, boats, homes, fencing, and more.
- **Highly Concentrated:** Make up to 20 gallons of detergent from a single gallon of Kärcher's Multi-Purpose Concentrate.
- **Specially Made for Pressure Washers:** Optimized for effective use with pressure washing equipment.
- **Made in the USA:** Proudly manufactured in the United States.

3. USAGE INSTRUCTIONS

3.1. Dilution

This detergent is highly concentrated. One gallon of concentrate can make up to 20 gallons of ready-to-use cleaning solution. Always refer to your pressure washer's manual for specific detergent tank instructions and recommended dilution ratios. For general use, dilute as needed based on the severity of the dirt and the surface being cleaned.

3.2. Application with Pressure Washer

1. **Prepare the Solution:** Pour the concentrated detergent into your pressure washer's detergent tank. If your pressure washer does not have a detergent tank, you may need a separate detergent injector or foam cannon.
2. **Connect Water Supply:** Ensure your pressure washer is connected to a clean water source.
3. **Apply Detergent:** Set your pressure washer to the detergent application setting (usually a low-pressure setting). Apply the detergent solution evenly to the surface you wish to clean. Allow the detergent to soak for a few minutes to break down dirt and grime, but do not let it dry on the surface.
4. **Rinse Thoroughly:** Switch your pressure washer to a high-pressure rinse setting. Rinse the treated surface thoroughly from top to bottom, ensuring all detergent residue is removed.

3.3. Recommended Surfaces

This multi-purpose cleaner is suitable for a wide range of outdoor surfaces, including but not limited to:

- Concrete and Pavement
- Driveways and Sidewalks
- Patios and Decks
- Home Siding (vinyl, aluminum, wood)
- Fences (wood, vinyl)
- RV's, Cars, and Boats
- Lawn Mowers and Garden Tools
- Patio Furniture

4. CARE AND STORAGE

Store the Kärcher Multi Purpose Pressure Washer Detergent in its original container in a cool, dry place, away from direct sunlight and extreme temperatures. Ensure the cap is tightly sealed after each use to prevent evaporation and contamination. Keep out of reach of children and pets.

5. SAFETY INFORMATION

CAUTION: This product is an irritant. Avoid contact with eyes and prolonged contact with skin. In case of contact, rinse thoroughly with water. If irritation persists, seek medical attention. Do not ingest. If swallowed, do not induce vomiting; call a poison control center or doctor immediately. Use in a well-ventilated area. Keep container closed when not in use.

6. PRODUCT SPECIFICATIONS

Specification	Detail
Product Dimensions	7.25 x 11 x 4 inches
Item Weight	8.25 pounds
Manufacturer	Kärcher
ASIN	B01BMB4C86
Country of Origin	USA

Item Model Number	9.558-144.0
Item Form	Liquid
Scent	Fresh
Specific Uses	All-Purpose Cleaning, Car Washing, Fence Cleaning, Siding Washing, Driveway Cleaning, & More
Material Feature	Eco-Friendly

7. VISUAL GUIDE AND DEMONSTRATIONS

Product Overview



Image 1: The Kärcher Multi Purpose Pressure Washer Detergent in its original packaging. This concentrated formula is designed for various outdoor cleaning tasks.

Key Features at a Glance



AT A GLANCE

- Multipurpose cleaning detergent
- Highly concentrated: 1 gal makes up to 20 gal of detergent
- Great on concrete, homes, fences, vehicles, decks, and more
- Kärcher promise: Our detergents are the best match for our equipment to offer you the best possible cleaning result
- Formulated to work in tandem with your pressure washer

Image 2: A visual summary of the detergent's key features, including its multi-purpose nature, high concentration (1 gallon makes 20 gallons), and suitability for various surfaces.

Effective Foam Application



Creates a thick foam for quicker, more effective cleaning.

Image 3: Demonstrates the detergent creating a thick foam when applied with a pressure washer, ensuring effective and quicker cleaning of surfaces like garage doors.

Cleaning Driveways and Sidewalks



Ideal for use on driveways, siding, sidewalks, and more.

Image 4: Illustrates the detergent's effectiveness on hard surfaces such as driveways and sidewalks, ideal for removing stubborn dirt and grime.

Versatile Cleaning Applications



Also cleans lawn mowers, garden tools, and patio furniture.

Image 5: Shows the detergent being used to clean a lawn mower, highlighting its versatility for various outdoor equipment and furniture.

Video Demonstration

Kärcher Multipurpose Cleaner Review: The Smell & How I Use It

Your browser does not support the video tag.
Video 1: A detailed review and demonstration of the Kärcher Multi Purpose Cleaner, covering its scent and various application methods with a pressure washer. This video provides practical insights into using the product effectively.

8. TROUBLESHOOTING

While the Kärcher Multi Purpose Pressure Washer Detergent is designed for optimal performance, here are some common issues and solutions:

- **Issue: Detergent not dispensing from pressure washer.**
 - *Solution:* Ensure the detergent tank is filled and the pressure washer is set to the correct low-pressure or detergent application setting. Check for clogs in the detergent intake tube or nozzle.
- **Issue: Poor cleaning performance.**
 - *Solution:* Verify the correct dilution ratio. For heavily soiled areas, a stronger concentration or pre-treatment may be necessary. Ensure adequate soaking time before rinsing.
- **Issue: Residue left on surface after rinsing.**
 - *Solution:* Rinse the surface more thoroughly with clean water. Ensure all detergent is completely washed away. Avoid letting the detergent dry on the surface before rinsing.

9. WARRANTY AND SUPPORT

For specific warranty information or technical support regarding your Kärcher Multi Purpose Pressure Washer Detergent, please refer to the contact information provided on the product packaging or visit the official Kärcher website. Keep your purchase receipt as proof of purchase.

You can visit the official Kärcher Store for more products and support: [Kärcher Amazon Store](#)