

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [TAURUS ALPATEC](#) /

› [Taurus Alpatec R750 Air Cooler User Manual](#)

TAURUS ALPATEC R 750

Taurus Alpatec R750 Air Cooler User Manual

Model: R 750

IMPORTANT SAFETY INFORMATION

Please read this manual carefully before operating the appliance and retain it for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the appliance is connected to a power supply matching the specifications (230V AC, 65W).
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Unplug the appliance from the power outlet when not in use, before filling or emptying the water tank, and before cleaning.
- Keep the appliance out of reach of children and pets.
- Do not block the air inlets or outlets.
- Use only clean tap water in the water tank.
- Do not operate the appliance if the cord or plug is damaged, or if the appliance malfunctions or has been dropped.
- This appliance is for indoor household use only.

PRODUCT OVERVIEW

The Taurus Alpatec R750 is a versatile air cooler designed to provide cooling, ventilation, purification, and humidification. It features a compact tower design with a visible water tank and an intuitive control panel.



Figure 1: Front view of the Taurus Alpatec R750 Air Cooler, showing its white tower design, front grille, and base with wheels.

Components:

- **Control Panel:** Located on the top, with touch buttons and indicator lights.
- **Air Outlet Grille:** Front grille with automatic vertical oscillation.
- **Water Tank:** Visible 4-liter capacity tank at the bottom.
- **Dust Filter:** Located at the rear, washable.
- **Wheels:** For easy mobility.
- **Remote Control:** For convenient operation.
- **Ice Packs:** Two included for enhanced cooling.



Figure 2: Top view of the control panel, showing various function buttons and indicator lights for speed, timer, and modes.

SETUP

- 1. Unpacking:** Carefully remove the air cooler and all accessories from the packaging. Retain packaging for future storage or transport.
- 2. Placement:** Place the air cooler on a flat, stable surface. Ensure there is adequate space around the unit for proper airflow (at least 20 cm from walls or furniture).
- 3. Filling the Water Tank:**
 - Pull out the water tank from the bottom rear of the unit.
 - Fill the tank with clean tap water. Do not exceed the "MAX" fill line (4-liter capacity).
 - For enhanced cooling, place the included ice packs in the freezer until frozen. Once frozen, add them directly into the water tank.
 - Carefully slide the water tank back into the unit until it clicks into place.

4. **Power Connection:** Plug the power cord into a standard electrical outlet (230V AC).

OPERATING INSTRUCTIONS

Control Panel and Remote Control:

The air cooler can be operated using the touch buttons on the control panel or the provided remote control. Ensure the remote control has working batteries (not included).

Functions:

- **Power On/Off:** Press the **Power button** (🔌) to turn the unit on or off.
- **Speed Adjustment:** Press the **Speed button** (🌀) repeatedly to cycle through 3 ventilation speeds: Low, Medium, High.
- **Mode Selection:** The unit offers 4 functions:
 - **Cooling (Humidification):** Activates the water pump to circulate water and provide evaporative cooling. Ensure the water tank is filled.
 - **Ventilation:** Operates as a fan without water circulation.
 - **Purification:** Utilizes the dust filter to clean the air.
 - **Humidification:** Adds moisture to the air.

Refer to the control panel icons for specific mode selection (e.g., water droplet for cooling/humidification, fan for ventilation).

- **Oscillation:** Press the **Oscillation button** (🌀) to activate or deactivate the automatic vertical oscillation of the air outlet grille, distributing air more widely.
- **Timer Function:** Press the **Timer button** (🕒) repeatedly to set the operating time from 0.5 hours up to 7.5 hours. The unit will automatically turn off after the set time.

MAINTENANCE

Regular cleaning and maintenance will ensure optimal performance and extend the lifespan of your air cooler. Always unplug the unit before cleaning.

1. Cleaning the Dust Filter:

- Locate the dust filter at the rear of the unit.
- Carefully remove the filter.
- Wash the filter under running water to remove accumulated dust. A soft brush can be used for stubborn dirt.
- Allow the filter to air dry completely before reinserting it into the unit. Clean the filter at least once a month, or more frequently depending on usage and air quality.

2. Cleaning the Water Tank:

- Empty any remaining water from the tank.
- Wipe the inside of the tank with a soft cloth and mild detergent. Rinse thoroughly with clean water.
- To prevent mold and mildew, ensure the tank is dry before storing the unit or if it will not be used for an extended period.

3. Exterior Cleaning:

- Wipe the exterior surfaces of the air cooler with a soft, damp cloth.

- Do not use abrasive cleaners, solvents, or harsh chemicals, as these may damage the plastic surfaces.

TROUBLESHOOTING

Before contacting customer service, please refer to the following troubleshooting guide for common issues.

Problem	Possible Cause	Solution
Unit does not turn on.	No power supply; Power cord not properly plugged in; Power button not pressed.	Check if the unit is plugged into a working outlet. Ensure the power button is pressed.
No cooling effect.	Water tank is empty; Cooling/Humidification mode not activated; Ice packs not used.	Fill the water tank. Activate the cooling/humidification mode. Add frozen ice packs to the water tank.
Weak airflow.	Air inlets/outlets blocked; Dust filter is dirty; Fan speed set too low.	Ensure no obstructions. Clean the dust filter. Increase the fan speed.
Unusual noise.	Unit not on a flat surface; Obstruction in fan; Water pump issue.	Place the unit on a flat surface. Check for any foreign objects. If noise persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	TAURUS ALPATEC
Model Number	R 750
Power Consumption	65 Watts
Water Tank Capacity	4 Liters
Number of Speeds	3
Functions	Cool, Ventilate, Purify, Humidify
Timer	Up to 7.5 hours (programmable)
Oscillation	Automatic Vertical
Noise Level	56 dB
Filter Type	Washable Dust Filter
Dimensions (L x W x H)	28 x 29.5 x 61 cm
Weight	4 Kilograms
Voltage	230 Volts (AC)
Included Components	Air Cooler, 2 Ice Packs

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the warranty card included with your product or visit the official Taurus Alpatec website. Keep your purchase receipt as proof of purchase for any warranty claims.

Contact information for support is typically found on the manufacturer's website or in the full product manual.