

[Manuals.plus](#) /

› [TELEPROMPTER PAD](#) /

› iLight PRO 12" Autocue Teleprompter iPad Tablet - Kit teleprompter for video with Remote Control, APP & Carry Bag, Beam Splitter Prompter DSLR, iPhone, APP for Apple Android Mac Win User Manual

## TELEPROMPTER PAD TP-IP-1001BK

# iLight PRO 12" Autocue Teleprompter User Manual

Model: TP-IP-1001BK

## 1. INTRODUCTION

The iLight PRO 12" Autocue Teleprompter is designed to facilitate smooth and professional video recordings by displaying scripts directly in front of your camera lens. This manual provides essential information for assembling, operating, maintaining, and troubleshooting your teleprompter, ensuring optimal performance and ease of use. Its robust aluminum construction and high-quality beamsplitter glass offer clear reflections and durability for various recording environments.

## 2. WHAT'S INCLUDED

Verify that all components are present in your package:

- iLight PRO 12" Teleprompter Unit (main frame, beamsplitter glass, hood)
- Bluetooth Remote Control
- Smartphone Adapter
- Carry Bag
- Cleaning Cloth



Image: All components included with the iLight PRO 12" Teleprompter.

### 3. SETUP

#### 3.1 Assembling the Teleprompter

1. Unfold the main teleprompter frame.
2. Carefully insert the beamsplitter glass into its designated slot. Ensure it is securely seated.
3. Attach the fabric hood to the top of the teleprompter frame, ensuring it covers the glass and prevents light leakage.
4. Mount the teleprompter onto a standard video or photo tripod using the 1/4" screw thread at the base.

# EASY & CONVENIENT

Make your recordings effortless with the ultimate teleprompter technology, born after years of experience and customer feedback



**100% Aluminum**  
4mm thickness



**Beamsplitter glass**  
4mm thickness  
Sharpest & brightest



**No assembly required**  
Simple and ready to use



**90° range**  
Get the perfect framing

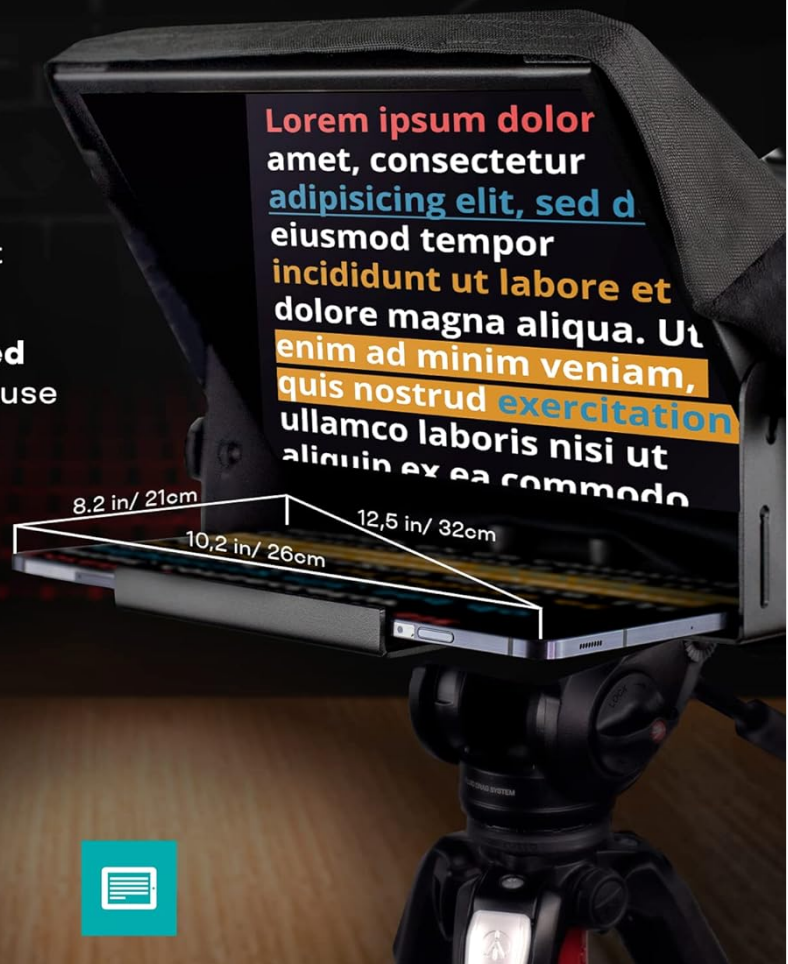


Image: Teleprompter assembly diagram.

Your browser does not support the video tag.

Video: Instructions on how to attach your Teleprompter PAD iLight PRO to a tripod.

## 3.2 Inserting Your Device (Tablet/Smartphone)

1. Extend the sliding tray at the front of the teleprompter.
2. Place your tablet or smartphone onto the tray. For smartphones, use the provided smartphone adapter to secure the device.
3. Ensure the device is centered and stable on the tray.

# DOWNLOAD OUR course

A Comprehensive Teleprompter Guide



## Video & eBook content:

- Setting Up Your Teleprompter
- Lighting Tips for Better Video Quality
- Optimizing Audio for Clear Recordings
- Preparing Your Script
- Using the Teleprompter – 5 Step Workflow
- Troubleshooting Common Issues



DOWNLOAD NOW!

Unlock immediate access to our exclusive, complimentary teleprompter course! A wealth of valuable VIDEO content and a comprehensive guide in eBook format.

Image: Inserting a tablet into the teleprompter tray.

## 3.3 Connecting Your Camera

1. Slide your DSLR or video camera onto the camera platform at the rear of the teleprompter.
2. Secure the camera using the universal 1/4" screw. Adjust the camera's position to ensure the lens is centered with the beamsplitter glass.
3. Adjust the teleprompter's angle using the exclusive angle adjusting system to achieve optimal framing and reflection clarity.

**NO ASSEMBLY REQUIRED**

**100% ALUMINUM**

**4mm THICKNESS**



**USE ANY CAMERA**



**SLIDING  
TRAY**  
ADAPTS TO  
YOUR TABLET



**EASY  
ACCESS  
SLOTS**



**SLOTS  
TO ADD  
ACCESSORIES:  
MICROPHONES,  
LIGHTS, ETC.**



**NEW  
IMPROVED  
HOOD**

Image: Camera mounted on the teleprompter.

## 4. OPERATING INSTRUCTIONS

### 4.1 TeleprompterPAD App

The TeleprompterPAD app is essential for displaying your script. It is compatible with iOS, Android, Windows, and Mac devices.

- **Download:** Search for "TeleprompterPAD" on the App Store (Apple), Play Store (Android), Mac App Store, or Microsoft Store. Alternatively, visit [app.teleprompterpad.com](http://app.teleprompterpad.com).
- **Import Scripts:** The app allows you to import scripts from various cloud services (e.g., Google Drive, iCloud, OneDrive) and supports multiple file formats (PDF, DOCS, RTF, ODT, TXT).
- **Features:** Customize text size, speed, margins, and activate mirror mode. Use script position markers for quick navigation.



# REMOTE CONTROL

A Bluetooth Remote Control for your teleprompter APP. **Control your presentations** without the need for an assistant.

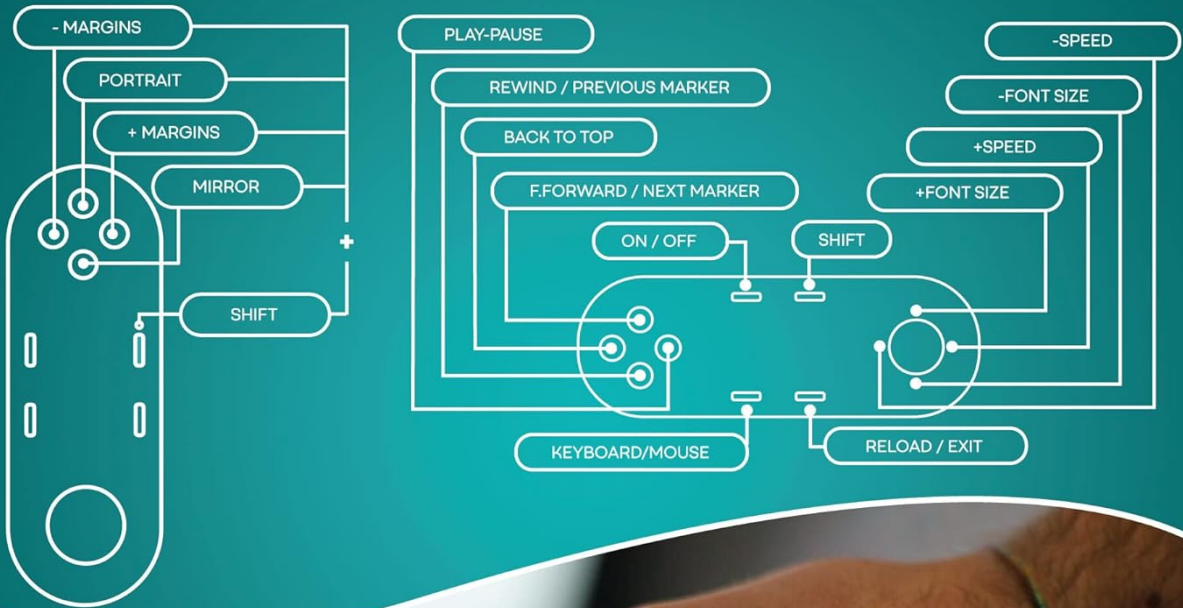


Image: Remote control button functions.

Your browser does not support the video tag.

Video: Demonstration on how to read from a teleprompter PAD iLight PRO.

## 5. MAINTENANCE

Proper maintenance ensures the longevity and performance of your teleprompter.

- **Cleaning the Glass:** Use the provided cleaning cloth or a soft, lint-free cloth with a specialized glass cleaning solution. Avoid abrasive materials that could scratch the beamsplitter glass.
- **Storage:** When not in use, disassemble the teleprompter and store it in the included carry bag. This protects the components, especially the glass, from dust and damage. The teleprompter folds up in approximately 4 seconds for easy transport.

# COMPATIBLE WITH ANY DEVICE



Scan me to download the APP



Download on the Mac App Store

Download on the App Store

GET IT ON Google Play

Get it from Microsoft



Image: Teleprompter in its carry bag, demonstrating portability.

## 6. TROUBLESHOOTING

Refer to the table below for common issues and their solutions.

Issue	Possible Cause	Solution
Text appears blurry or has double reflection.	Incorrect angle of glass; external light interference.	Adjust the angle of the beamsplitter glass. Ensure the hood is properly installed to block ambient light. Check lighting conditions in your recording environment.
Remote control not connecting or unresponsive.	Low battery; not paired correctly; interference.	Check remote battery and replace if necessary. Re-pair the remote control via the app's Bluetooth settings. Ensure no other devices are interfering with the Bluetooth signal.

Issue	Possible Cause	Solution
App not importing scripts.	Unsupported file format; cloud service connectivity issues.	Ensure the script is in a supported format (PDF, DOCS, RTF, ODT, TXT). Verify your internet connection and cloud service login. Try restarting the app.
Camera not fitting or unstable.	Incorrect mounting; tripod instability.	Ensure the camera is properly secured with the 1/4" screw. Verify your tripod is stable and capable of supporting the combined weight of the teleprompter and camera.

If you encounter issues not listed here, please refer to the Warranty and Support section for assistance.

## 7. SPECIFICATIONS

- **Product Dimensions:** 18.9 x 10.24 x 9.06 inches (L x W x H)
- **Item Weight:** 3.74 pounds (1.7 Kilograms)
- **Display Compatibility:** Compatible with all Tablets/Smartphones with dimensions up to 7.8" x 10.20" (20cm x 26cm), including iPad 10", iPad 10.2", iPad Air 10.5", iPad Pro 11", iPad mini.
- **Camera Compatibility:** Compatible with all handheld cameras (DSLR, HDVCAM, XDCAM, NXCAM) and with video and photo tripods.
- **Materials:** 100% Aluminum frame, 4mm thick HD 60/40 beamsplitter glass.
- **Model Number:** TP-IP-1001BK

## 8. WARRANTY AND SUPPORT

TELEPROMPTER PAD is committed to providing high-quality products and customer satisfaction. Your iLight PRO teleprompter comes with lifetime technical support from The Pixel Discovery USA.

For detailed video tutorials and a comprehensive guide, please visit the official TeleprompterPAD Help Center or access their free teleprompter course:

[TeleprompterPAD Free Teleprompter Course](#)

If you require further assistance or have technical questions, please contact our support team directly through the TeleprompterPAD Help Center. We are dedicated to providing prompt and effective solutions.