

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Philips](#) /

> [Philips CR7D5BB10/17 CD-R Discs User Manual](#)

## Philips CR7D5BB10/17

# Philips CR7D5BB10/17 CD-R Discs User Manual

Model: CR7D5BB10/17

## INTRODUCTION

This manual provides essential instructions for the proper use, handling, and care of your Philips CR7D5BB10/17 CD-R discs. These discs are designed for recording digital data, including audio, video, and computer files, and are compatible with most CD-R/RW drives and players. Each disc offers a storage capacity of 700 MB or 80 minutes of audio recording.

## SETUP

### Unpacking and Inspection

Carefully remove the CD-R discs from their packaging. Inspect each disc for any visible damage, such as scratches or cracks, before use. Do not use damaged discs as they may harm your drive or result in data loss.

### Handling Precautions

- Always hold the disc by its edges or by the center hole.
- Avoid touching the shiny recording surface of the disc, as fingerprints and smudges can interfere with data recording and playback.
- Keep discs away from direct sunlight, high temperatures, and excessive humidity.

*Image Description: A hand holding a CD-R disc by its edges, illustrating proper handling to avoid touching the recording surface.*

## OPERATING INSTRUCTIONS

### Inserting the Disc

1. Open the disc tray of your CD burner or computer drive.
2. Place the Philips CD-R disc onto the tray with the label side facing up.
3. Gently close the disc tray.

### Recording Data or Audio

The process of recording data or audio to a CD-R disc is primarily managed by your computer's operating system or third-

party burning software. Refer to the instructions provided with your specific software for detailed steps.

- **Select Files:** Choose the files (audio, video, documents) you wish to burn to the disc.
- **Start Burning Process:** Initiate the burning process through your software. Ensure your computer remains undisturbed during this operation.
- **Disc Finalization:** For most applications, especially audio CDs or discs intended for playback on other devices, it is crucial to finalize the disc. Finalization makes the disc readable on standard CD players and drives. Your burning software will typically offer this option.

**Important:** CD-R discs are write-once media. Once data is recorded and the disc is finalized, it cannot be erased or overwritten. Ensure all desired content is selected before burning.

*Image Description: A computer screen displaying a typical CD burning software interface, showing options for selecting files and initiating the burn process.*

## MAINTENANCE

---

### Cleaning Discs

If a disc becomes dirty or smudged, clean it gently with a soft, lint-free cloth. Wipe from the center of the disc outwards in a straight line, rather than in a circular motion. Do not use abrasive cleaners or solvents.

### Storage

Store discs in their original packaging, jewel cases, or protective sleeves to prevent scratches and exposure to dust. Keep them in a cool, dry place away from direct sunlight and extreme temperatures, which can degrade the recording layer over time.

### Labeling Discs

Use a soft, felt-tip marker specifically designed for CDs/DVDs to label the non-recording side of the disc. Avoid using ballpoint pens or other sharp instruments, as they can damage the disc's data layer.

*Image Description: A close-up of a CD-R disc being cleaned with a soft cloth, demonstrating the correct wiping motion from the center to the edge.*

## TROUBLESHOOTING

---

### Disc Not Recognized by Drive:

Ensure the disc is inserted correctly with the label side up. Check if your drive supports CD-R media. Clean the disc if it appears dirty. If the issue persists, try another disc or consult your drive's manual.

### Burning Errors Occur:

Verify that your burning software settings are correct. Ensure there is sufficient free space on the disc. Try burning at a slower speed. Check for any background processes on your computer that might be interfering. A defective disc can also cause errors; try a new disc.

### Disc Does Not Play Back:

Confirm that the disc was finalized after burning. Clean the disc for any smudges or dust. Ensure your playback device (e.g., car stereo, home CD player) is compatible with CD-R media. Some older players may not support CD-R discs.

## SPECIFICATIONS

---

<b>Product Name</b>	Philips CD-R Discs
<b>Model Number</b>	CR7D5BB10/17
<b>Storage Capacity</b>	700 MB / 80 Minutes
<b>Disc Type</b>	CD-R (Compact Disc Recordable)

<b>Quantity</b>	10 Discs per pack
<b>UPC / GTIN</b>	889446005790

## WARRANTY INFORMATION

---

Philips CR7D5BB10/17 CD-R discs come with a lifetime warranty. This warranty covers manufacturing defects that prevent the disc from being recorded or played back correctly under normal use conditions. It does not cover damage caused by improper handling, storage, or misuse. For warranty claims, please retain your proof of purchase and contact Philips customer support.

## SUPPORT

---

For further assistance or technical support regarding your Philips CD-R discs, please visit the official Philips support website or refer to the contact information provided with your product packaging. When contacting support, please have your product model number (CR7D5BB10/17) and any relevant purchase details available.