

[Manuals.plus](#) /

› [Solac](#) /

› Solac PC1500 Niagara Vertical Garment Steamer User Manual

Solac PC1500 Niagara

Solac PC1500 Niagara Vertical Garment Steamer

Model: PC1500 Niagara

INTRODUCTION

The Solac PC1500 Niagara is a powerful 1200W vertical garment steamer designed for quick and efficient wrinkle removal. Its compact size and rapid heating make it ideal for daily use and travel. Featuring a 260cc water tank, anti-drip system, and anti-calc technology, this steamer ensures optimal performance and garment care. It is perfect for refreshing clothes directly on the hanger and tackling stubborn creases.

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always unplug the steamer from the electrical outlet when filling with water, emptying, or when not in use.
- Do not immerse the steamer in water or other liquids.
- Use only distilled or demineralized water to prevent mineral buildup and extend the life of the appliance.
- Keep the steamer and its cord out of reach of children.
- Do not direct steam at people, pets, or electrical appliances. Steam is hot and can cause burns.
- Ensure the voltage indicated on the appliance matches your local power supply before connecting.
- Do not operate the steamer with a damaged cord or plug, or if the appliance has been dropped or damaged.
- Allow the steamer to cool completely before storing.

PRODUCT COMPONENTS



Main Unit: The core of the steamer, housing the heating element and controls.



Removable Water Tank: With a 260cc capacity, it provides ample water for extended steaming sessions. Features clear MIN/MAX indicators.



Fabric Brush Attachment: Ideal for thicker fabrics, helping to open weaves for deeper steam penetration and wrinkle removal.

Lint Brush Attachment: Designed to remove lint, pet hair, and debris from garments while steaming.

Water Filling Cup: A small cup provided for easy and precise filling of the water tank.

SETUP

1. **Unpack the Steamer:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Fill the Water Tank:** Ensure the steamer is unplugged. Remove the water tank by pressing the release buttons on the sides and pulling it out. Open the silicone cap and fill the tank with distilled or demineralized water up to the "MAX" line using the provided filling cup. Close the cap securely and reinsert the tank into the main unit until it clicks into place.



Image: Hand inserting the water tank into the steamer. The tank is transparent red with a visible water level.

3. **Attach Desired Accessory (Optional):** If needed, attach the fabric brush or lint brush to the steamer head by aligning it and pressing firmly until it clicks into position.
4. **Connect to Power:** Plug the steamer's power cord into a suitable electrical outlet. The indicator light will illuminate, signaling that the steamer is heating up.

OPERATING INSTRUCTIONS

1. **Pre-heating:** After plugging in, the steamer will heat up rapidly. The indicator light will change (e.g., stop blinking or turn solid) when it is ready for use, typically within seconds.
2. **Steaming Garments:** Hold the garment taut with one hand. With the other hand, hold the steamer vertically and press the steam trigger to release steam. Move the steamer head slowly over the fabric, from top to bottom, allowing the steam to penetrate and relax the fibers. For stubborn wrinkles, pass over the area multiple times.



Image: A person using the Solac PC1500 Niagara to steam a blue denim shirt hanging on a clothes rack.

3. Using Attachments:

- **Fabric Brush:** Use on heavier fabrics like coats, suits, or upholstery. The bristles help to lift fibers for more

effective steaming and can also remove light lint.

- **Lint Brush:** Glide this attachment over garments to remove lint, dust, and pet hair while steaming.



Image: A person using the Solac PC1500 Niagara to steam a blue jacket, demonstrating the steam output.

4. **Finishing:** Once steaming is complete, release the steam trigger and unplug the appliance. Allow garments to cool and dry completely before wearing or storing.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your Solac PC1500 Niagara steamer.

1. **Emptying the Water Tank:** After each use, or when the steamer is not in use for an extended period, unplug the steamer and allow it to cool. Remove the water tank and empty any remaining water. This prevents stagnant water and potential mineral buildup.
2. **Cleaning the Exterior:** Wipe the exterior of the steamer with a soft, damp cloth. Do not use abrasive cleaners or solvents.
3. **Descaling (Anti-Calc System):** The Solac PC1500 Niagara features an anti-calc system to reduce mineral buildup. However, periodic descaling is still recommended, especially in areas with hard water. Refer to the full product manual for specific descaling instructions, which typically involve using a descaling solution or a vinegar-water mixture.
4. **Storage:** Ensure the steamer is completely cool and dry before storing. Store it in a cool, dry place, preferably in its original packaging, away from direct sunlight and moisture.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam or low steam output.	Water tank empty. Steamer not heated sufficiently. Mineral buildup (calcification). Steam vents blocked.	Refill water tank. Wait for the indicator light to signal readiness. Perform descaling procedure. Clean steam vents with a soft brush.

Problem	Possible Cause	Solution
Water leaking from the steamer head.	Steamer not hot enough. Overfilling the water tank. Using tap water with high mineral content.	Allow steamer to fully heat up before use. Do not fill past the "MAX" line. Use distilled or demineralized water.
Steamer not turning on.	Not plugged in correctly. Power outlet issue. Appliance malfunction.	Ensure plug is fully inserted. Test the outlet with another appliance. Contact customer support if problem persists.

SPECIFICATIONS

- **Model:** PC1500 Niagara
- **Brand:** Solac
- **Power:** 1200 Watts
- **Voltage:** 240 Volts
- **Water Tank Capacity:** 260 cc
- **Product Dimensions (L x W x H):** 10 x 14 x 27 cm
- **Item Weight:** 1 Kilogram
- **Cable Length:** Approximately 2 meters
- **Material:** Stainless Steel (steam head)
- **Features:** Quick Heating, Anti-Drip System, Anti-Calc System, Vertical Steaming capability.

WARRANTY AND SUPPORT

Solac products are manufactured to high-quality standards. For information regarding warranty coverage, product registration, or technical support, please refer to the warranty card included with your purchase or visit the official Solac website. Keep your proof of purchase for warranty claims.

For further assistance, please contact Solac Customer Support.

Note: Specific warranty terms may vary by region.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question