

TIMEX TWEG14904

Timex E-Class Analog Blue Dial Men's Watch - TWEG14904 User Manual

Model: TWEG14904 | Brand: TIMEX

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Timex E-Class Analog Blue Dial Men's Watch, model TWEG14904. Please read this manual thoroughly to ensure proper use and longevity of your timepiece.

PRODUCT OVERVIEW

The Timex E-Class Analog Blue Dial Men's Watch (TWEG14904) is a sophisticated timepiece featuring an analog display, quartz movement, and a durable stainless steel band. It is designed for everyday wear and offers water resistance up to 50 meters.

Figure 1: Front view of the Timex E-Class Analog Blue Dial Men's Watch, showcasing its blue dial, silver-tone hands, and stainless steel bracelet.

Key Features:

- Dial Color: Blue, Case Shape: Round
- Band Color: Silver, Band Material: Stainless Steel
- Watch Movement Type: Quartz, Watch Display Type: Analog
- Water resistance depth: 50 meters
- Case diameter: 44 millimeters
- Scratch Resistant Dial Glass Material: Mineral Glass
- Date Display Available

SETUP

Unboxing and Initial Inspection:

Carefully remove the watch from its packaging. Inspect the watch for any visible damage or defects. Ensure all protective films are removed from the crystal and case back.


Figure 2: The Timex watch is typically packaged in a black box with the Timex logo, ensuring protection during transit.

Setting the Time and Date:

- Pull out the Crown:** Locate the crown on the right side of the watch case. Gently pull the crown out to the first or second click position.

- Setting the Date (First Click):** If your watch has a date function, pull the crown out to the first click. Turn the crown clockwise or counter-clockwise to adjust the date. Avoid setting the date between 9 PM and 3 AM, as this can damage the movement.
- Setting the Time (Second Click):** Pull the crown out to the second click. Turn the crown to move the hour and minute hands to the correct time. For accurate time setting, it is recommended to set the time a few minutes ahead and then push the crown back in when a time signal (e.g., from a radio or phone) reaches the exact time.
- Push in the Crown:** Once the time and date are set, push the crown back into its normal position against the watch case. This also ensures water resistance.

Adjusting the Bracelet:

The stainless steel bracelet may need adjustment for a comfortable fit. This typically involves removing or adding links. It is recommended to have this done by a professional jeweler or watch repair service to avoid damaging the bracelet or clasp.


Figure 4: Rear view of the watch, showing the stainless steel case back and the open clasp of the bracelet, which can be adjusted for wrist size.


Figure 5: The Timex watch displayed on a wrist, illustrating its size and fit when worn.

OPERATING THE WATCH

Timekeeping:

Your Timex E-Class watch uses a precise quartz movement for accurate timekeeping. The hour, minute, and second hands continuously display the current time.

Date Display:

The watch features a date window on the dial. The date automatically advances once every 24 hours. If the date changes during the day, it indicates that the AM/PM setting is incorrect. To correct this, advance the time by 12 hours.

Water Resistance:

This watch is water resistant up to 50 meters (5 ATM). This means it is suitable for short periods of recreational swimming, but not for diving or snorkeling. Avoid operating the crown or pushers when the watch is wet or submerged, as this can compromise its water resistance.

30 meters (3 ATM): Splash resistant. Suitable for daily use.

50 meters (5 ATM): Suitable for short periods of recreational swimming.

100 meters (10 ATM): Suitable for swimming and snorkeling.

200 meters (20 ATM) or more: Suitable for diving.

MAINTENANCE

Cleaning Your Watch:

To maintain the appearance of your watch, wipe the case and bracelet regularly with a soft, dry cloth. For stainless steel parts, a slightly damp cloth can be used, followed by a dry cloth. Avoid using chemical cleaners, solvents, or abrasive materials, as these can damage the watch's finish.

Battery Replacement:

Your quartz watch is powered by a battery (1 AA battery required, included). When the watch stops or the second hand begins to jump erratically (if applicable), it indicates a low battery. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and maintain water resistance.

Storage:

When not wearing your watch for extended periods, store it in a cool, dry place away from direct sunlight, extreme temperatures, and strong magnetic fields. The original watch box is ideal for storage.

TROUBLESHOOTING

- **Watch is not running:**

- Check if the crown is pushed all the way in.
- The battery may be depleted. Refer to the "Battery Replacement" section under Maintenance.

- **Date changes at noon:**

- The AM/PM setting is incorrect. Pull the crown out to the time-setting position and advance the time by 12 hours.

- **Condensation under the crystal:**

- This may indicate a loss of water resistance. Avoid further exposure to water and have the watch inspected by a professional service center immediately.

SPECIFICATIONS

Feature	Specification
Model Number	TWEG14904
Brand	TIMEX
Dial Color	Blue
Case Shape	Round
Case Diameter	44 Millimeters
Band Color	Silver

Feature	Specification
Band Material	Stainless Steel
Movement Type	Quartz
Display Type	Analog
Water Resistance Depth	50 meters
Dial Glass Material	Mineral Glass (Scratch Resistant)
Item Weight	300 g (0.3 Kilograms)
Batteries	1 AA batteries required (included)

WARRANTY AND SUPPORT

Warranty Information:

Your Timex E-Class Analog Blue Dial Men's Watch comes with a **1 Year Manufacturer Warranty**. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims.

Customer Support:

For warranty service, technical assistance, or any other inquiries, please contact Timex customer support. Visit the official Timex website for contact details and service center locations.

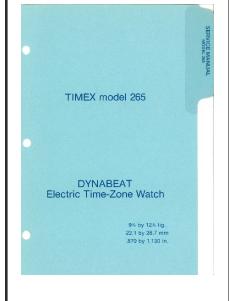
You can also visit the [TIMEX Store on Amazon](#) for more product information and support resources.

© 2023 TIMEX. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

Related Documents

	<p>Timex W217 Analog Watch User Manual and Operating Instructions</p> <p>Comprehensive user manual for the Timex W217 Analog watch, covering setup, water resistance, Indiglo night-light, and detailed instructions for setting time, date, day, moon phase, and alarms.</p>
	<p>Timex W217 Analog Watch User Manual: Features, Setup, and Care</p> <p>Comprehensive user manual for the Timex W217 Analog watch. Learn how to set the time, date, alarms, and understand features like INDIGLO® Night-Light, water resistance, and more. Includes setup guides and maintenance tips.</p>

	<p>Timex Kids Digital Watch User Guide - Operation and Features</p> <p>Comprehensive user guide for the Timex Kids digital watch (model 791-095007). Covers features, basic operations, setting time and date, chronograph, alarm, timer, INDIGLO night light, water resistance, strap adjustments, battery information, and warranty details.</p>
	<p>Timex Model 265 Dynabeat Electric Time-Zone Watch Service Manual</p> <p>Detailed service manual for the Timex Model 265 Dynabeat Electric Time-Zone Watch, covering movement description, disassembly, cleaning, lubrication, and reassembly procedures.</p>