

[Manuals.plus](#) /

› [KidKraft](#) /

› KidKraft Children's Double Outdoor Chaise Lounge with Canopy and Cushions, Model 00524

KidKraft 00524

KidKraft Children's Double Outdoor Chaise Lounge

Model: 00524 | Brand: KidKraft

PRODUCT OVERVIEW

The KidKraft Children's Double Outdoor Chaise Lounge, Model 00524, is designed to provide a comfortable and shaded outdoor seating area for children. This durable wooden chaise lounge features a three-sided canopy for sun protection, two integrated cup holders for beverages, and weather-resistant cushions for enhanced comfort. It is suitable for family use in outdoor environments.



Image: The KidKraft Double Outdoor Chaise Lounge in use, showing a child comfortably seated with a book and drink, highlighting its design and functionality.

SAFETY INFORMATION

- This product is intended for family use by children. Adult supervision is recommended at all times.
- Ensure all assembly hardware is securely tightened before use. Regularly check for loose fasteners.
- Do not allow children to stand on the canopy or climb on the structure.
- Place the chaise lounge on a flat, stable surface to prevent tipping.
- Keep small parts away from young children during assembly to prevent choking hazards.
- Periodically inspect the product for any damage or wear. Discontinue use if any structural damage is observed.

PARTS LIST

Before beginning assembly, ensure all components are present and undamaged. Refer to the included assembly instructions for a detailed list of parts and hardware.

- Wooden frame components (legs, side panels, backrests, middle console)
- Canopy fabric and support rods
- Cushions (seat and backrest)
- Assembly hardware (screws, bolts, nuts, washers)

- Tie-back curtains



Image: An illustration highlighting the premium wood frame construction and key dimensions of the chaise lounge, including height, width, and depth.

SETUP AND ASSEMBLY

Assembly of the KidKraft Double Outdoor Chaise Lounge is designed to be straightforward. Follow the step-by-step instructions provided in the packaging. Typically, assembly can be completed within one hour.

1. Unpack all components and verify against the parts list.
2. Assemble the main wooden frame structure using the provided hardware. Ensure all connections are secure.
3. Attach the backrests and the middle console with cup holders.
4. Install the canopy support rods and secure the three-sided canopy fabric.
5. Place the cushions onto the seat and backrest areas.
6. Attach the tie-back curtains to the canopy frame.

Tie-back curtains



Image: A graphic highlighting the quick assembly time, stating "Assembly in 1 hour or less," and emphasizing the use of premium materials for durability.

OPERATING INSTRUCTIONS

The chaise lounge is designed for simple and comfortable use.

- **Seating:** The lounge accommodates two children comfortably.
- **Canopy:** The three-sided canopy provides shade and protection from direct sunlight.
- **Cup Holders:** Utilize the two integrated cup holders in the middle console to keep drinks secure and within reach.
- **Curtains:** The tie-back curtains can be used for additional shade or privacy, or tied back for an open feel.
- **Storage:** A hidden storage compartment is located beneath the middle console for small items.



**Assembly in
1 hour or less**



**Crafted of premium
materials for
long-lasting play**



Image: A view of the chaise lounge showcasing its three-sided canopy, designed to provide ample shade for children during outdoor play.

3-sided canopy provides shade



Image: A close-up view of the wooden middle console, clearly showing the two integrated cup holders designed to hold beverages.

Hidden storage compartment



Image: A detailed shot of the middle console revealing a hidden storage compartment, suitable for small toys or personal items.

MAINTENANCE

Proper maintenance will extend the life of your chaise lounge.

- **Cleaning:** Wipe the wooden frame with a damp cloth and mild soap. Rinse thoroughly and dry immediately.
- **Cushions:** The outdoor-rated canvas cushion covers can be spot cleaned with mild soap and water. Allow to air dry completely.
- **Canopy:** Clean the canopy fabric with a damp cloth. Avoid harsh chemicals.
- **Storage:** During periods of non-use or inclement weather, store the chaise lounge in a dry, protected area to prevent damage from moisture and extreme temperatures.
- **Inspection:** Periodically check all screws and bolts for tightness and re-tighten as needed.

Two cupholders



Image: A close-up shot of the chaise lounge cushions, highlighting their outdoor-rated canvas material, designed for durability and weather resistance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Chaise lounge feels unstable.	Loose assembly hardware or uneven surface.	Ensure all screws and bolts are tightened. Move the lounge to a flat, level surface.
Canopy does not stay in place.	Canopy support rods not properly secured.	Check that the canopy rods are fully inserted and secured according to assembly instructions.
Cushions appear dirty or stained.	Normal outdoor use.	Spot clean with mild soap and water. For stubborn stains, consult a fabric cleaning guide for outdoor materials.

SPECIFICATIONS

- **Model Number:** 00524

- **Brand:** KidKraft
- **Dimensions (L x W x H):** 92.71 x 85.09 x 89.54 cm (36.5 x 33.5 x 35.25 inches)
- **Item Weight:** 11.5 Kilograms (25.35 lbs)
- **Material:** Sanmu Wood, Fabric (Polyester/Polyurethane)
- **Color:** Navy Blue and White Striped
- **Capacity:** Designed for 2 children
- **Special Features:** Three-sided canopy, two integrated cup holders, hidden storage compartment, outdoor-rated cushions.
- **Assembly Required:** Yes
- **GTIN/UPC:** 706943005248

WARRANTY AND SUPPORT

KidKraft products are manufactured to high-quality standards. For specific warranty information, please refer to the documentation included with your purchase or visit the official KidKraft website. For customer support, replacement parts, or further assistance, please contact KidKraft customer service through their official channels.
KidKraft Official Website: www.kidkraft.com

© 2024 KidKraft. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

