

[Manuals.plus](#) /

› [John Deere](#) /

› John Deere 4010 Tractor Operator's Manual (JD-O-OMR32129)

John Deere 4010

John Deere 4010 Tractor Operator's Manual

Model: 4010 (JD-O-OMR32129)

INTRODUCTION

This operator's manual provides essential information for the safe and efficient operation, maintenance, and care of your John Deere 4010 Tractor. Familiarize yourself with all instructions and warnings before operating the tractor. Proper use and maintenance will ensure optimal performance and extend the life of your equipment.

This manual is a reproduction of the original manufacturer-issued document, enhanced for clarity and durability. It includes valuable tractor data, serial information, measurements, capacities, and specifications.

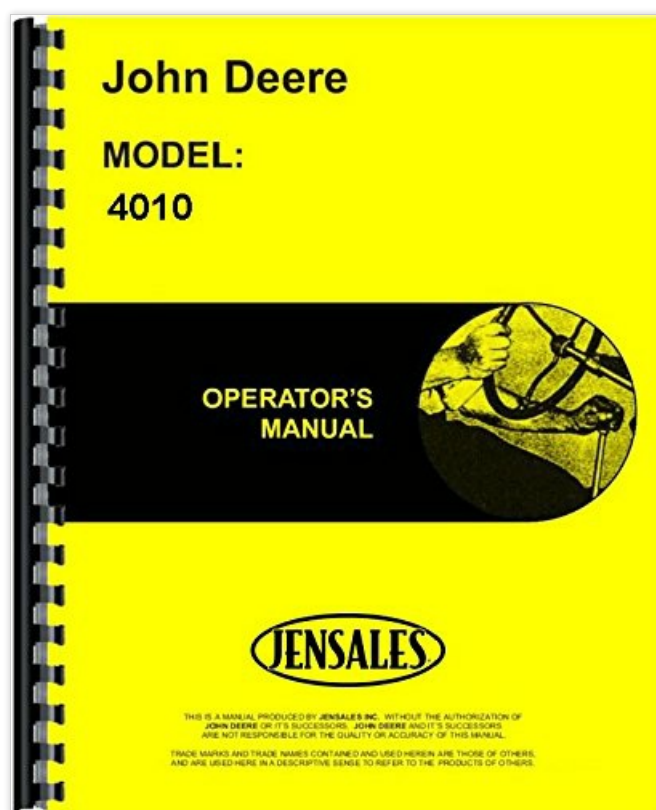


Image: Cover of the John Deere 4010 Tractor Operator's Manual. This image displays the front cover of the instruction manual for the John Deere 4010 Tractor, indicating its purpose as a guide for operation and maintenance.

SAFETY INFORMATION

Always prioritize safety when operating or maintaining the John Deere 4010 Tractor. Failure to follow safety instructions can result

in serious injury or death.

General Safety Rules:

- Read and understand the entire manual before operation.
- Ensure all safety decals are in place and legible.
- Never allow unauthorized personnel to operate the tractor.
- Wear appropriate personal protective equipment (PPE).
- Keep children and bystanders away from the operating area.
- Always engage the parking brake and shut off the engine before leaving the operator's seat.
- Do not operate the tractor under the influence of alcohol or drugs.

Rollover Protection Structure (ROPS):

The John Deere 4010 Tractor may be equipped with a Rollover Protection Structure (ROPS). Always use the seat belt when the ROPS is in the upright position. Do not modify or remove the ROPS.

SETUP AND PRE-OPERATION CHECKS

Before each operation, perform the following checks to ensure the tractor is in safe working condition.

Fluid Levels:

- **Engine Oil:** Check oil level using the dipstick. Add recommended oil if low.
- **Coolant:** Verify coolant level in the radiator and overflow tank.
- **Hydraulic Fluid:** Inspect hydraulic fluid level.
- **Fuel:** Ensure adequate fuel for the planned operation.

Tire Pressure:

Check tire pressure on all four tires. Refer to the specifications section for correct pressure values.

Brake and Clutch Adjustment:

Verify proper free play and engagement of the brake and clutch pedals. Adjust as necessary according to the maintenance section.

Safety Devices:

Confirm that all lights, horn, and safety switches are functional.

OPERATING INSTRUCTIONS

This section outlines the basic procedures for starting, operating, and stopping the John Deere 4010 Tractor.

Starting the Engine:

1. Ensure the transmission is in neutral and the parking brake is engaged.
2. Turn the ignition key to the "ON" position.
3. If equipped, engage the glow plugs for cold starts.
4. Turn the ignition key to the "START" position. Release when the engine starts.
5. Allow the engine to warm up for a few minutes before operating.

Shift Patterns:

The John Deere 4010 features a specific shift pattern. Consult the decal near the gear shift lever for the exact pattern. Always depress the clutch fully when shifting gears.

Stopping the Engine:

1. Bring the tractor to a complete stop.
2. Engage the parking brake.
3. Place the transmission in neutral.
4. Turn the ignition key to the "OFF" position.
5. Remove the key to prevent unauthorized use.

MAINTENANCE

Regular maintenance is crucial for the longevity and reliable operation of your John Deere 4010 Tractor. Adhere to the recommended service intervals.

Service Intervals:

- **Every 10 Hours / Daily:** Check fluid levels, inspect tires, clean debris.
- **Every 50 Hours:** Lubricate grease points, check battery terminals.
- **Every 200 Hours:** Change engine oil and filter, inspect air filter.
- **Every 500 Hours:** Change hydraulic fluid and filter, check fuel filter.
- **Annually:** Inspect all belts and hoses, check brake system.

Capacities:

Fluid Type	Capacity	Recommended Fluid
Engine Crankcase	Approx. 10 Quarts	John Deere Plus-50 II
Cooling System	Approx. 20 Quarts	John Deere Cool-Gard II
Hydraulic System	Approx. 25 Quarts	John Deere Hy-Gard
Fuel Tank	Approx. 25 Gallons	Diesel Fuel

Note: Capacities are approximate. Always refer to the dipstick or sight glass for accurate levels.

TROUBLESHOOTING

This section provides solutions to common operational issues. For complex problems, consult a qualified John Deere service technician.

Engine Does Not Start:

- **Check Fuel Level:** Ensure the fuel tank is not empty.
- **Battery:** Verify battery charge and connections.
- **Neutral Safety Switch:** Confirm transmission is in neutral.
- **Fuel System:** Check for clogged fuel filter or air in the fuel lines.

Loss of Hydraulic Power:

- **Hydraulic Fluid Level:** Check and replenish if low.
- **Hydraulic Filter:** Inspect for clogging and replace if necessary.
- **Pump Issues:** If fluid levels and filters are good, a hydraulic pump issue may be present.

SPECIFICATIONS

Key technical specifications for the John Deere 4010 Tractor.

Feature	Detail
Model	John Deere 4010
Engine Type	John Deere 6-cylinder Diesel
Horsepower (PTO)	Approx. 80 HP
Transmission	Syncro-Range (8 forward, 2 reverse)
Weight (approx.)	7,000 - 8,000 lbs (depending on configuration)
Fuel Capacity	25 Gallons (94.6 Liters)
Hydraulic Capacity	25 Quarts (23.6 Liters)
Coolant Capacity	20 Quarts (18.9 Liters)
Oil Capacity	10 Quarts (9.4 Liters)
Serial Number Range	Refer to tractor identification plate

Note: Specifications may vary slightly based on year of manufacture and specific configurations.

WARRANTY INFORMATION

This manual is a reproduction and does not include specific warranty information for the John Deere 4010 Tractor itself. For details regarding the original manufacturer's warranty, please refer to the documentation provided at the time of the tractor's purchase or contact an authorized John Deere dealer.

For information regarding the warranty of this specific manual reproduction, please contact the manual's publisher directly.

SUPPORT AND CONTACT INFORMATION

For technical assistance, parts inquiries, or service, please contact your nearest authorized John Deere dealer. You can find dealer locations and contact information on the official John Deere website.

Official John Deere Website: www.deere.com

When contacting support, please have your tractor's model number (4010) and serial number readily available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01BQUTEA4>

More documents and user manuals: **<https://manuals.plus/>**