

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Garland](#) /

› [Garland CK4601247 S680 Oven Conversion Switch Kit User Manual](#)

Garland CK4601247

Garland CK4601247 S680 Oven Conversion Switch Kit User Manual

Model: CK4601247 | Brand: Garland

1. INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of the Garland CK4601247 S680 Oven Conversion Switch Kit. This kit is designed as a genuine OEM replacement part for Garland and US Range commercial kitchen equipment, specifically for ovens, grills, and griddles. Adherence to these instructions ensures safe and reliable performance of your equipment.

2. SAFETY INFORMATION

Always prioritize safety during installation and operation. Failure to follow safety guidelines can result in injury or equipment damage.

- **Qualified Personnel:** Installation and service should only be performed by qualified, authorized personnel.
- **Power Disconnection:** Ensure the appliance is completely disconnected from the power supply before beginning any installation, maintenance, or repair work.
- **Genuine Parts:** Use only genuine OEM parts for safety, reliability, and performance. Non-OEM parts may compromise the integrity and safety of the appliance.
- **Electrical Safety:** Observe all local and national electrical codes. Ensure proper grounding.
- **Inspection:** Before and after installation, inspect all components for damage. Do not install damaged parts.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged upon opening the package.



Image 1: Components of the Garland CK4601247 S680 Oven Conversion Switch Kit. This image displays the various parts included in the kit, which typically consist of a push-button switch, a micro switch, a mounting bracket, and a securing nut. These parts are essential for the conversion or replacement process in commercial oven systems.

- Push-button switch assembly
- Micro switch (SPA-P38-1, if visible on image)
- Mounting bracket
- Securing nut
- Instruction sheet (this document)

4. SETUP AND INSTALLATION

This kit is intended for converting or replacing existing switch mechanisms in compatible Garland and US Range commercial ovens. Refer to your specific appliance's service manual for detailed wiring diagrams and access procedures.

1. **Disconnect Power:** Ensure the oven is completely disconnected from all power sources. Verify with a voltage tester.
2. **Access Switch Area:** Carefully open the oven's control panel or access area where the switch is located.
3. **Remove Old Switch:** Disconnect wiring from the old switch, noting the position and color of each wire. Remove the old switch and mounting hardware.
4. **Install Mounting Bracket:** Secure the new mounting bracket (if applicable) in the designated position using appropriate fasteners.

- Mount New Switches:** Attach the push-button switch and micro switch to the mounting bracket or panel as per the original configuration or conversion requirements. Ensure they are securely fastened.
- Connect Wiring:** Reconnect the electrical wiring to the new switches. Double-check all connections against the appliance's wiring diagram to ensure correct polarity and function.
- Secure Components:** Ensure all components are firmly in place and no wires are pinched or exposed.
- Close Access Panel:** Carefully close and secure the oven's control panel or access area.
- Test Functionality:** Reconnect power to the oven and test the functionality of the new switch. Ensure it operates correctly and safely.

5. OPERATION

The Garland CK4601247 S680 Oven Conversion Switch Kit functions as an integral part of your commercial oven's control system. Its operation is directly tied to the specific function it replaces or converts within the oven. Typically, these switches are used for temperature control, door interlocks, or other operational modes.

- Temperature Control:** If the switch is part of the temperature control system, its activation or deactivation will correspond to the oven reaching or maintaining a set temperature.
- Door Interlock:** In some configurations, the micro switch may act as a safety interlock, preventing oven operation when the door is open.
- Mode Selection:** The push-button switch might be used to select different cooking modes or initiate specific oven functions.

Refer to your oven's primary user manual for specific operational details related to the function controlled by this switch kit.

6. MAINTENANCE

The Garland CK4601247 S680 Oven Conversion Switch Kit is designed for durability and minimal maintenance. However, periodic inspection is recommended to ensure continued reliable operation.

- Visual Inspection:** Regularly inspect the switch and its connections for any signs of wear, corrosion, or damage.
- Cleaning:** Keep the area around the switch clean and free from grease, dust, or debris. Use a dry, soft cloth for cleaning. Do not use abrasive cleaners or solvents.
- Functionality Check:** Periodically test the switch's operation to ensure it engages and disengages smoothly and consistently.
- Professional Service:** If any issues are detected, or if the switch is not functioning correctly, contact a qualified service technician for inspection and repair. Do not attempt unauthorized repairs.

7. TROUBLESHOOTING

This section provides basic troubleshooting steps for common issues related to the switch kit. For complex problems, consult a qualified technician.

Problem	Possible Cause	Solution
Switch does not activate/deactivate	Loose wiring connection Damaged switch component Incorrect installation	Check all wiring connections for security. Inspect switch for physical damage; replace if necessary. Review installation steps and appliance wiring diagram.

Problem	Possible Cause	Solution
Intermittent switch function	Corrosion on contacts Worn internal mechanism Loose mounting	Disconnect power and inspect contacts for corrosion; clean if possible. Replace the switch if internal wear is suspected. Ensure switch is securely mounted.
Oven not responding to switch input	Switch not properly installed Issue with oven's control board Incorrect switch type	Verify correct switch installation and wiring. Consult oven's service manual for control board diagnostics. Ensure the correct OEM part (CK4601247) was used.

If troubleshooting steps do not resolve the issue, contact Garland customer support or a certified service technician.

8. SPECIFICATIONS

Feature	Detail
Model Number	CK4601247 (Manufacturer's internal: GLCK4601247)
Brand	Garland
Part Type	Oven Conversion Switch Kit
Special Feature	Temperature Control (as part of oven system)
Item Weight	3.2 ounces
Package Dimensions	6.18 x 3.58 x 0.94 inches
Manufacturer	GARLAND
ASIN	B01BS4W2TS
UPC	046843375783, 254219515170

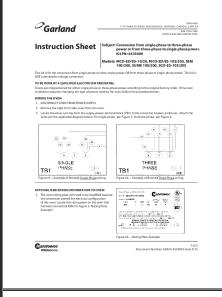
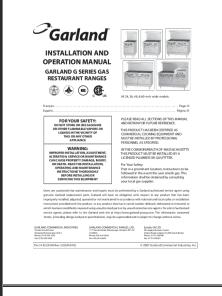
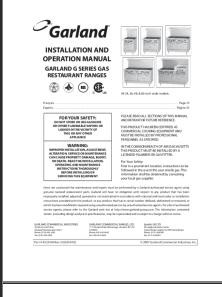
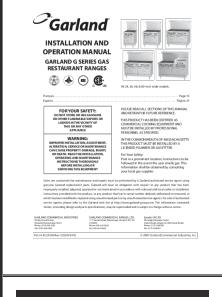
9. WARRANTY AND SUPPORT

As a genuine OEM replacement part, this kit is typically covered under the warranty terms provided by Garland for their commercial kitchen equipment. Specific warranty details may vary based on purchase location and regional policies.

- Warranty Claims:** For warranty inquiries or claims, please contact your original point of purchase or an authorized Garland service center.
- Technical Support:** For technical assistance or service, contact Garland customer support. Ensure you have your appliance model number and the part number (CK4601247) available when contacting support.

Using non-genuine parts or unauthorized modifications may void your appliance's warranty.

Related Documents - CK4601247

	<p>Garland Oven Single-Phase to Three-Phase Conversion Instructions Detailed instructions for qualified electricians to convert Garland commercial ovens (MCO-ED/ES, SEM, SUME, SCO-ES series) between single-phase and three-phase power using kit PN 4533009.</p>
	<p>Garland G Series Gas Restaurant Ranges Installation and Operation Manual Comprehensive guide for installing, operating, and maintaining Garland G Series Gas Restaurant Ranges, designed for commercial kitchens. Includes specifications, safety, and maintenance procedures.</p>
	<p>Garland G Series Gas Restaurant Ranges Installation and Operation Manual This manual provides comprehensive instructions for the installation, operation, testing, and maintenance of Garland G Series Gas Restaurant Ranges. It includes safety warnings, technical specifications, and operational guidance for commercial kitchen environments.</p>
	<p>Garland GT Series Heavy Duty Gas Counter Equipment Installation and Operation Manual Comprehensive Installation and Operation Manual for Garland GT Series Heavy Duty Gas Counter Equipment, covering hot plates, griddles, and char-broilers. Includes safety, specifications, installation, operation, and maintenance.</p>
	<p>Garland G Series Gas Restaurant Ranges Installation and Operation Manual Comprehensive guide for installing, operating, and maintaining Garland G Series Gas Restaurant Ranges. Covers safety, dimensions, specifications, operational procedures, and maintenance for commercial kitchens.</p>
	<p>Garland Geiser 421 QG Water Pump Manual Comprehensive user manual for the Garland Geiser 421 QG water pump, covering safety, operation, maintenance, and troubleshooting.</p>