

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Smoby](#) /

› [Smoby Mini Tefal Perfect Cook Kitchen Toy Instruction Manual](#)

Smoby B01BU77UMM

Smoby Mini Tefal Perfect Cook Kitchen Toy Instruction Manual

Model: B01BU77UMM

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Keep this manual for future reference.

- **Adult Supervision:** This toy is intended for children aged 3 years and older. Adult supervision is recommended during play.
- **Small Parts:** Contains small parts that may pose a choking hazard for children under 3 years. Keep all components out of reach of infants.
- **Assembly:** Adult assembly is required. Ensure all parts are securely fastened before allowing children to play.
- **Water Use:** If the toy includes a water feature, use only clean tap water. Do not immerse electrical components in water.
- **Cleaning:** Clean the toy with a damp cloth only. Do not use abrasive cleaners or solvents.

PACKAGE CONTENTS

Carefully unpack all components and verify that all items listed below are present and undamaged. If any parts are missing or damaged, do not proceed with assembly and contact customer support.

- Main Kitchen Unit (base, counter, back panel)
- Oven Door
- Stove Top Burners (x2)
- Sink and Faucet
- Assorted Play Food (e.g., egg, pancake, carrot)
- Cooking Utensils (e.g., spatula, ladle)
- Pot with Lid
- Pan
- Salt and Pepper Shakers
- Assembly Hardware (screws, connectors)
- Instruction Manual

SETUP INSTRUCTIONS

Follow these steps for proper assembly of your Smoby Mini Tefal Perfect Cook Kitchen Toy.

- 1. Unpack Components:** Remove all parts from the packaging and lay them out on a clean, flat surface. Ensure all packaging materials are discarded safely.
- 2. Assemble Base Unit:** Connect the side panels to the main base using the provided screws. Ensure they are firmly attached.
- 3. Attach Back Panel:** Slide or snap the back panel into the designated slots on the base unit.
- 4. Install Countertop:** Place the countertop onto the assembled base, securing it with screws if indicated.
- 5. Mount Oven Door:** Attach the oven door to the main unit using the hinge pins. Test the door to ensure it opens and closes smoothly.
- 6. Place Stove Top Burners:** Insert the stove top burners into their respective openings on the countertop.
- 7. Install Sink and Faucet:** Place the sink basin into the countertop cutout and attach the faucet.
- 8. Add Accessories:** Arrange the play food, utensils, pot, and pan as desired.
- 9. Final Check:** Before play, ensure all connections are secure and there are no loose parts.

OPERATING YOUR KITCHEN TOY

The Smoby Mini Tefal Perfect Cook Kitchen Toy is designed for imaginative role-play. Encourage children to explore various cooking scenarios.

Using the Stove Top

Place the pot or pan on the stove top burners. Children can pretend to cook by moving the play food around with the utensils. Some models may feature clicking knobs to simulate turning on the burners.

Using the Oven

Open the oven door and place play food inside. Close the door to simulate baking. The oven provides storage for play food when not in use.

Water Feature (if applicable)

If your model includes a water feature, fill the sink with a small amount of clean tap water. Children can use the faucet to pretend to wash dishes or fill the pot. *Always empty the water after play and dry the sink thoroughly to prevent mold or mildew.*

MAINTENANCE AND CARE

Proper care will extend the life of your kitchen toy.

- Cleaning:** Wipe down all surfaces with a soft, damp cloth. For stubborn marks, a mild soap solution can be used, followed by wiping with a clean, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- Drying:** Ensure all parts, especially those that come into contact with water, are completely dry before storage to prevent mildew.
- Storage:** Store the toy in a clean, dry place away from direct sunlight and extreme temperatures.
- Inspection:** Periodically check all screws and connections to ensure they remain tight. Tighten if necessary.

TROUBLESHOOTING

Refer to the table below for common issues and their solutions.

Problem	Possible Cause	Solution
Parts do not fit together during assembly.	Incorrect orientation or wrong parts being used.	Refer to the assembly diagrams in this manual. Ensure parts are oriented correctly and you are using the designated components for each step.
Toy feels wobbly after assembly.	Screws or connectors are not fully tightened.	Check all assembly points and tighten screws or connectors firmly. Do not overtighten.
Water feature (if present) is not working.	No water in the sink or blockage in the pump/faucet.	Ensure there is sufficient water in the sink. Check for any visible blockages in the faucet or pump mechanism.

If you encounter issues not listed here or if the problem persists, please contact Smoby customer support for assistance.

PRODUCT SPECIFICATIONS

- Model Number:** B01BU77UMM
- Brand:** Smoby
- Product Type:** Pretend Play Kitchen Toy
- Recommended Age:** 3 years and up
- Material:** Durable Plastic
- Approximate Dimensions (Assembled):** (Specific dimensions are not provided in the product data, please refer to product packaging for exact measurements)
- Manufacturer:** SMOBY

WARRANTY AND CUSTOMER SUPPORT

This Smoby product is covered by a limited manufacturer's warranty against defects in materials and workmanship under normal use. The warranty period typically begins from the date of purchase.

For specific warranty details, claims, or technical support, please refer to the warranty card included with your product or visit the official Smoby website. You may also contact the retailer where the product was purchased.

Contact Information:

(Specific contact details are not provided in the product data. Please refer to the product packaging or manufacturer's website for the most current customer service information.)