

[manuals.plus](#) /

- › [Chicco](#) /
- › [Chicco Baby Rodeo Ride-On Toy Instruction Manual](#)

**Chicco 00007907000000**

## Chicco Baby Rodeo Ride-On Toy

Model: 00007907000000

Brand: Chicco

### 1. PRODUCT OVERVIEW

The Chicco Baby Rodeo is an innovative 3-in-1 electronic toy designed to grow with your child, supporting their motor development and interactive skills. It seamlessly transforms between a rocking horse, a ride-on toy, and an engaging electronic activity center.

This versatile toy features sensors that respond to your child's interaction, such as feeding the horse with its carrot or petting it, triggering realistic neighing sounds and other playful responses. Its robust design ensures durability, while its lightweight nature makes it easy to handle and clean.



Image 1.1: The Chicco Baby Rodeo in its ride-on configuration, showcasing its vibrant colors and interactive carrot accessory.

## 2. SAFETY INFORMATION

Please read and understand all safety instructions before allowing a child to use the Chicco Baby Rodeo. Failure to follow these instructions may result in injury.

- **Adult Supervision Required:** Always supervise children during play. Never leave a child unattended with the toy.
- **Age and Weight Limits:** Suitable for children aged 1 to 3 years. Maximum weight capacity is 25 kg (approximately 55 lbs). Do not exceed this weight limit.
- **Battery Safety:** Batteries should only be installed and replaced by an adult. Do not mix old and new batteries, or different types of batteries. Remove batteries if the toy is not used for an extended period. Dispose of batteries responsibly.
- **Surface Use:** Use the ride-on toy on flat, level surfaces free from obstacles. Avoid sloped or uneven terrain.
- **Assembly:** Ensure all parts are correctly assembled and securely fastened before use. Regularly check for loose parts or damage.

## 3. SETUP AND ASSEMBLY

The Chicco Baby Rodeo is designed for easy assembly. Follow these steps to prepare the toy for use:

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify that all components are

present according to the packing list (refer to the diagram in the separate assembly guide, if provided).

2. **Battery Installation:** Locate the battery compartment, typically on the underside or within the electronic activity center. Using a screwdriver, open the compartment. Insert 2 AAA batteries and 2 AA batteries, ensuring correct polarity (+/-). Close the compartment securely.
3. **Attach Handlebars and Saddle:** Follow the specific instructions in the assembly guide to securely attach the handlebars and saddle components. Ensure they click into place or are tightened as indicated.
4. **Configure for Use:** Decide whether to use the toy as a rocker or a ride-on.
  - **Rocker Mode:** Attach the rocking base securely to the main body of the horse. Ensure the wheels are lifted off the ground or locked into position as per the design.
  - **Ride-On Mode:** Ensure the wheels are properly attached and free to roll. If a rocking base was previously attached, remove it.
5. **Final Check:** Before first use, double-check all connections and ensure the toy is stable and safe for play.

## 4. OPERATING INSTRUCTIONS

The Chicco Baby Rodeo offers three modes of play to engage your child:

### 4.1. Rocker Mode

- Ensure the rocking base is securely attached and the toy is stable on a flat surface.
- Help your child safely mount the horse.
- Encourage gentle rocking motions.

### 4.2. Ride-On Mode

- Ensure the rocking base is removed and the wheels are free to roll.
- Help your child safely mount the horse.
- Children can propel themselves forward using their feet.

### 4.3. Electronic Activity Center

- **Interactive Carrot:** Place the included carrot accessory near the horse's mouth to activate chewing sounds and other playful responses.
- **Petting Sensors:** Gently pet the horse's head or neck (specific areas may vary, refer to visual cues on the toy) to trigger neighing sounds and other interactive effects.
- **Music and Sounds:** The toy features various melodies and sound effects that activate through interaction.

## 5. MAINTENANCE AND CARE

Proper maintenance will extend the life of your Chicco Baby Rodeo:

- **Cleaning:** Wipe the toy clean with a damp cloth and mild soap. Do not immerse the electronic parts in water. Avoid harsh chemicals or abrasive cleaners.
- **Battery Replacement:** When sounds or lights become faint or stop working, it's time to replace the batteries. Refer to Section 3.2 for battery installation instructions.
- **Storage:** Store the toy in a cool, dry place away from direct sunlight and extreme temperatures.

- **Inspection:** Periodically inspect the toy for any signs of wear, damage, or loose parts. Discontinue use if any damage is found and contact customer support.

## 6. TROUBLESHOOTING

If you encounter issues with your Chicco Baby Rodeo, try the following solutions:

- **No Sound/Lights:**

- Check if the batteries are correctly installed with the proper polarity.
- Replace old or depleted batteries with new ones.
- Ensure the battery compartment is securely closed.

- **Toy Not Rocking/Rolling Smoothly:**

- For rocker mode, ensure the rocking base is properly attached and on a flat, stable surface.
- For ride-on mode, check that the wheels are free from obstructions and rotate smoothly. Ensure the rocking base is removed.
- Verify that the toy is being used on an appropriate surface (flat, hard floor).

- **Interactive Features Not Responding:**

- Ensure batteries are fresh and correctly installed.
- Make sure the carrot is placed directly in front of the sensor area (usually the mouth).
- Ensure petting is done on the designated sensor areas.

If problems persist after attempting these solutions, please contact Chicco customer support.

## 7. SPECIFICATIONS

Feature	Specification
Model Number	00007907000000
Target Gender	Unisex
Minimum Weight Recommendation	1 lbs
Maximum Weight Recommendation	25 kg
Material Type	Plastic
Number of Products	1
Power Source Type	Battery
Batteries Required	Yes
Battery Type	2 AAA and 2 AA batteries
Product Dimensions	30 x 64 x 58 cm; 4.59 kg
ASIN	B01BV7M724
Release Date	January 25, 2017

## 8. WARRANTY AND SUPPORT

Chicco products are manufactured to high-quality standards. For information regarding warranty coverage, product registration, or customer support, please refer to the official Chicco website or contact their customer service department.

You can also visit the official Chicco store on Amazon for more product information and support:

Visit Chicco Store on  
Amazon

© 2024 Chicco. All rights reserved.