

Memorex MHBT0545W

Memorex MHBT0545W Bluetooth Headphones User Manual

Model: MHBT0545W

1. INTRODUCTION

This manual provides instructions for the proper use and maintenance of your Memorex MHBT0545W Bluetooth Headphones. These headphones are designed for private listening enjoyment, offering wireless connectivity to Bluetooth-enabled audio sources. They feature a built-in microphone for hands-free calls and integrated controls for media playback.

2. PRODUCT OVERVIEW

The Memorex MHBT0545W headphones feature an on-ear design with adjustable components for comfort. Key controls and ports are located on the earcups for easy access.



Figure 2.1: Main view of the Memorex MHBT0545W Bluetooth Headphones. This image displays the white headphones with black earcups and an adjustable headband, showing the overall design and the location of the charging port and indicator light on one earcup.



Figure 2.2: Front view of the Memorex MHBT0545W Bluetooth Headphones. This image shows the headphones from the front, highlighting the comfortable ear cushions and the adjustable headband.

Components:

- **Adjustable Headband:** For a comfortable and secure fit.
- **Earcups:** Padded for comfort and sound isolation.
- **Control Buttons:** Located on the rear of the right earcup for power, volume, track control, and call management.
- **Microphone:** Integrated for hands-free communication.
- **USB Charging Port:** For recharging the internal battery.
- **LED Indicator Light:** Displays charging and pairing status.

3. SETUP

3.1 Charging the Headphones

1. Locate the USB charging port on the earcup.
2. Connect the provided USB charging cable to the headphones and a compatible USB power source (e.g., computer USB port, USB wall adapter).

3. The LED indicator light will illuminate to show charging status. It will change or turn off once charging is complete.
4. A full charge provides approximately 8 hours of music listening or gaming audio.

3.2 Pairing with a Bluetooth Device

1. Ensure the headphones are sufficiently charged.
2. Press and hold the Power button (located on the right earcup) until the LED indicator light begins to flash, indicating pairing mode.
3. On your Bluetooth-enabled audio source (smartphone, tablet, computer), navigate to the Bluetooth settings.
4. Search for available devices. The headphones should appear as "Memorex MHBT0545W" or a similar name.
5. Select the headphones from the list to initiate pairing.
6. Once successfully paired, the LED indicator light will change to a steady blue or turn off, depending on the model.
7. The headphones will automatically connect to the last paired device when powered on. To connect to a different previously paired device, you may need to manually select the headphones from your device's Bluetooth settings.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- **To Power On:** Press and hold the Power button until the LED indicator light illuminates.
- **To Power Off:** Press and hold the Power button until the LED indicator light turns off.
- **Auto-Off Feature:** The headphones are equipped with a 10-minute auto-off feature to conserve battery if no audio is playing.

4.2 Music Playback

- **Play/Pause:** Press the Play/Pause button once.
- **Volume Up/Down:** Use the Volume + and Volume - buttons.
- **Next Track:** Press and hold the Volume + button (or a dedicated 'Next' button if present).
- **Previous Track:** Press and hold the Volume - button (or a dedicated 'Previous' button if present).

4.3 Call Management

- **Answer/End Call:** Press the Play/Pause button once during an incoming call or to end an active call.
- **Reject Call:** Press and hold the Play/Pause button during an incoming call.
- **Voice Assistant (SIRI/Google Assistant):** Double-clicking the Play/Pause button may activate your device's voice assistant. Performance may vary.

4.4 Equalizer Modes

The headphones offer three equalizer modes to customize your audio experience. Refer to the specific button on your headphones (often labeled 'EQ' or integrated with another control) to cycle through these modes: Standard, Bass Boost, and Treble Boost.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the headphones. Do not use liquid cleaners or solvents.
- **Storage:** Store the headphones in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the headphones regularly, even if not in use for extended periods.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Headphones do not power on.	Low battery; Power button malfunction.	Charge the headphones fully. If the issue persists, the power button may be faulty.
Cannot pair with device.	Headphones not in pairing mode; Device Bluetooth off; Out of range.	Ensure headphones are in pairing mode (flashing LED). Turn Bluetooth off and on on your device. Move headphones closer to the device.
No sound or poor sound quality.	Volume too low; Incorrect audio source; Interference.	Increase volume on both headphones and connected device. Ensure correct audio output is selected on your device. Move away from other wireless devices.
Call quality is poor.	Microphone obstruction; Weak signal.	Ensure microphone is not covered. Move to an area with better signal strength.

7. SPECIFICATIONS

- **Model:** MHBT0545W
- **Brand:** Memorex
- **Connectivity Technology:** Wireless
- **Wireless Communication Technology:** Bluetooth
- **Form Factor:** On Ear
- **Color:** White
- **Material:** Plastic
- **Product Dimensions:** 7.09 x 3.54 x 3.54 inches
- **Item Weight:** 14.1 ounces (400 Grams)
- **Frequency Response:** 20000 Hz
- **Special Features:** Bluetooth Enabled, Auto Off, Call Function, Enhanced Bass, Foldable Design, Hands-Free Use, Adjustable Headband
- **Control Type:** Media Control
- **Headphones Jack:** USB (for charging)
- **UPC:** 811922020409

8. WARRANTY AND SUPPORT

These Memorex headphones typically come with a 90-day warranty from the date of purchase. Please refer to the warranty card included in your product packaging for specific terms and conditions. For technical support or warranty claims, please contact Memorex customer service through their official website or the contact information provided in your product documentation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question