



Manuals.plus /

› Orbegozo /

› Orbegozo FO 2700 Double Butane Gas Stove User Manual

Orbegozo FO 2700

Orbegozo FO 2700 Double Butane Gas Stove User Manual

Model: FO 2700

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your Orbegozo FO 2700 Double Butane Gas Stove. Please read all instructions carefully before assembly, installation, and operation. Keep this manual for future reference.

2. SAFETY INFORMATION

WARNING: Failure to follow these instructions may result in fire, explosion, property damage, personal injury, or death.

- **Outdoor Use Only:** This appliance is designed for outdoor use only. Do not operate indoors or in enclosed spaces.
- **Ventilation:** Ensure adequate ventilation during operation to prevent carbon monoxide buildup.
- **Gas Leaks:** Check for gas leaks regularly using a soapy water solution. Never use an open flame to check for leaks.
- **Flammable Materials:** Keep the stove clear of flammable materials, gasoline, and other combustible vapors and liquids.
- **Children and Pets:** Keep children and pets away from the stove during operation and while it is cooling down.
- **Stable Surface:** Always place the stove on a stable, level, non-combustible surface.
- **Gas Cylinder:** Use only approved butane or propane gas cylinders and regulators. Ensure the gas cylinder is placed in a well-ventilated area and away from heat sources.
- **Hot Surfaces:** The stove and its components become very hot during use. Allow sufficient time for cooling before handling.

3. PRODUCT OVERVIEW

The Orbegozo FO 2700 is a double gas stove designed for outdoor cooking, featuring a durable stainless steel body and powerful burners.



Image 3.1: Front view of the Orbegozo FO 2700 double gas stove, showcasing its stainless steel finish and two burners with control knobs.

Key Features:

- **Power:** 7700 W total output for efficient cooking.
- **Construction:** Durable stainless steel body.
- **Ignition:** Integrated piezoelectric ignition for easy startup.
- **Burners:** Two triple crown burners for even heat distribution.
- **Fuel Compatibility:** Suitable for use with butane and propane gas.
- **Stability:** Equipped with an anti-slip base for secure placement.



Image 3.2: Close-up view of one of the triple crown burners, highlighting its design for optimal flame distribution.



Image 3.3: Side view showing the control knobs, used for ignition and flame adjustment.

4. SETUP

4.1 Unpacking

1. Carefully remove the stove from its packaging.
2. Check for any damage during transit. If damaged, do not use and contact your retailer.
3. Ensure all components are present: stove unit, pan supports, and any included accessories.

4.2 Placement

- Place the stove on a firm, level, non-combustible surface outdoors.
- Maintain a safe distance from walls, curtains, and other flammable materials (minimum 1 meter clearance recommended).
- Ensure the area is well-ventilated and protected from strong winds that could extinguish the flame.

4.3 Gas Connection



Image 4.1: Icon indicating compatibility with G-30 (butane) and G-31 (propane) gas types.

1. Ensure the gas control knobs on the stove are in the 'OFF' position.
2. Connect a suitable gas regulator (not included) to your butane or propane gas cylinder. Ensure the regulator is appropriate for the gas type and pressure required by the stove.
3. Attach the gas hose from the regulator to the stove's gas inlet connection. Secure all connections

tightly with appropriate clamps.

4. Perform a leak test: Open the gas cylinder valve. Apply a soapy water solution to all gas connections. If bubbles appear, there is a leak. Close the gas valve immediately and tighten connections. Repeat until no bubbles are observed. Never use an open flame to check for leaks.

5. OPERATING INSTRUCTIONS

5.1 Ignition

1. Ensure the gas cylinder valve is open.
2. Press and turn one of the control knobs counter-clockwise to the 'HIGH' flame position. You should hear a clicking sound from the piezoelectric igniter.
3. If the burner does not light within 5 seconds, turn the knob to 'OFF', wait 1 minute, and repeat the ignition process.
4. Once lit, hold the knob for a few seconds before releasing to ensure the flame is stable.

5.2 Flame Adjustment

- To adjust the flame intensity, rotate the control knob between the 'HIGH' and 'LOW' positions.
- A stable blue flame indicates proper combustion. Yellow or flickering flames may indicate an issue with gas flow or ventilation.



Image 5.1: The stove in use with a moka pot, demonstrating the included adapter for smaller cookware.

5.3 Turning Off

1. Turn all control knobs on the stove clockwise to the 'OFF' position.
2. Close the valve on the gas cylinder.
3. Allow the stove to cool completely before moving or cleaning.

6. MAINTENANCE AND CLEANING

6.1 Cleaning

- Always ensure the stove is cool and the gas supply is disconnected before cleaning.
- Wipe the stainless steel body with a damp cloth and mild detergent. Avoid abrasive cleaners that could scratch the surface.
- Remove pan supports and burner caps for separate cleaning. Wash them with warm soapy water and dry thoroughly.
- Ensure burner ports are clear of food debris or blockages. Use a soft brush if necessary.
- Do not immerse the entire stove unit in water.

6.2 Storage

- Store the stove in a dry, well-ventilated area, away from direct sunlight and extreme temperatures.
- Disconnect the gas cylinder and store it separately in a safe, well-ventilated location.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Burner does not light.	Gas cylinder empty or valve closed. Gas hose or regulator faulty. Igniter not sparking. Burner ports blocked.	Check gas level and open valve. Inspect hose/regulator for damage; replace if necessary. Ensure igniter is clean and positioned correctly. Clean burner ports.
Weak or yellow flame.	Low gas pressure. Burner ports partially blocked. Insufficient air mixture.	Check gas cylinder level and regulator. Clean burner ports. Ensure proper ventilation and air intake.
Gas smell detected.	Gas leak.	Immediately turn off gas supply. Perform leak test with soapy water. Tighten connections or replace faulty components. Do not operate if leak persists.

If you are unable to resolve an issue, contact qualified service personnel or your retailer.

8. SPECIFICATIONS

Feature	Specification
Model	FO 2700
Brand	Orbegozo
Power Output	7700 W
Number of Burners	2 (Triple Crown)
Fuel Type	Butane (G-30), Propane (G-31)
Material	Stainless Steel
Dimensions (L x W x H)	45 x 50 x 10 cm
Weight	3 kg
Ignition	Piezoelectric

9. WARRANTY AND SUPPORT

This product is covered by a standard manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical support, spare parts, or warranty claims, please contact your retailer or the Orbegozo customer service department.