

[Manuals.plus](#) /

› [Prixtion](#) /

› Prixtion P110 Portable Sewing Machine User Manual

Prixtion P110

Prixtion P110 Portable Sewing Machine User Manual

Model: P110 | Brand: Prixtion

1. INTRODUCTION

Thank you for choosing the Prixtion P110 Portable Sewing Machine. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new sewing machine. Please read this manual thoroughly before first use and keep it for future reference.



The Prixton P110 Portable Sewing Machine, showcasing its compact design and user-friendly controls.

2. SAFETY INSTRUCTIONS

- Always unplug the sewing machine from the power outlet when not in use, before cleaning, or when changing parts.
- Keep fingers away from the needle, presser foot, and handwheel during operation.
- Do not operate the machine if the power cord is damaged or if the machine is not working properly.
- Use only the recommended accessories and attachments provided by the manufacturer.
- Ensure the machine is placed on a stable, flat surface during use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

3. PACKAGE CONTENTS

Your Prixton P110 Portable Sewing Machine package should include the following items:

- Prixton P110 Portable Sewing Machine

- Foot Pedal
- AC Power Adapter
- Needles
- Bobbins
- Thread Spools
- Needle Threader
- User Manual

4. PRODUCT OVERVIEW

Familiarize yourself with the main components of your sewing machine:



Front view of the sewing machine, showing the stitch selector dial and main controls.



The automatic bobbin winder, located on the top of the machine for convenient thread preparation.



Close-up of the needle and presser foot area, crucial for precise stitching.



The presser foot lifter, used to raise and lower the presser foot for fabric placement.



The convenient hidden accessory drawer for storing small sewing essentials like needles and bobbins.



The integrated LED light illuminates the sewing area for improved visibility during operation.

5. SETUP

5.1 Power Connection

Your Prixtion P110 sewing machine can be powered in two ways:

- **AC Power:** Connect the provided AC power adapter to the machine's power input and then to a standard electrical outlet.
- **Battery Power:** For portable use, insert the required batteries (1 Lithium-ion battery) into the designated battery compartment. Ensure correct polarity.

5.2 Threading the Machine

1. **Winding the Bobbin:** Place an empty bobbin onto the bobbin winder spindle. Guide the thread from the spool

pin through the tension disc and around the bobbin. Engage the bobbin winder and start the machine to wind the thread evenly.

2. **Inserting the Bobbin:** Open the bobbin cover and insert the wound bobbin into the bobbin case, ensuring the thread unwinds in the correct direction.
3. **Upper Threading:** Place a spool of thread on the spool pin. Guide the thread through the various guides and tension discs as indicated by the numbering on the machine, ending by threading the needle from front to back. Use the needle threader for ease.

5.3 Needle and Presser Foot Installation

- **Needle:** Ensure the flat side of the needle faces the back of the machine when inserting. Tighten the needle clamp screw securely.
- **Presser Foot:** Attach the desired presser foot by aligning it with the presser foot holder and lowering the presser foot lifter until it clicks into place.

6. OPERATING INSTRUCTIONS

6.1 Turning On/Off

The machine can be turned on using the manual switch or by pressing the foot pedal (if connected).

6.2 Stitch Selection

Rotate the stitch selector dial to choose from the 12 available stitch types. Refer to the stitch guide on the machine for visual representation of each stitch.

6.3 Sewing Operation

1. Place your fabric under the presser foot.
2. Lower the presser foot using the presser foot lifter.
3. Slowly press the foot pedal or use the manual switch to start sewing. Control the speed as needed.
4. To finish a seam, raise the needle to its highest position, lift the presser foot, and gently pull the fabric away. Cut the threads.

6.4 Buttonhole Function

The machine supports 4-step buttonhole creation. Follow the markings on the machine and the specific instructions for each step to create perfect buttonholes.

6.5 Using the LED Light

Activate the integrated LED light via its dedicated switch to illuminate your sewing area, improving visibility for intricate work.

7. MAINTENANCE

7.1 Cleaning

Regularly clean lint and dust from the bobbin area and feed dogs using a small brush. Ensure the machine is unplugged before cleaning.

7.2 Needle Replacement

Replace the needle frequently, especially when sewing different fabric types or if it becomes bent or dull. A dull needle can cause skipped stitches or fabric damage.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Skipped Stitches	Incorrect needle, bent needle, improper threading.	Replace needle, re-thread machine correctly.
Thread Breaking	Incorrect tension, poor quality thread, improperly threaded.	Adjust tension, use good quality thread, re-thread.
Machine Not Starting	No power, foot pedal not connected, switch off.	Check power connection, ensure foot pedal is plugged in, turn on switch.

9. SPECIFICATIONS

Feature	Specification
Brand	Prixton
Model Number	P110 (MAQPRXP110)
Color	Violet/Rose
Dimensions (L x W x H)	1 x 2 x 3 cm (Product); 26P x 11l x 25H cm (Overall)
Weight	1 Grams
Power Source	AC Powered / Battery Powered (1 Lithium-ion battery required)
Voltage	220V
Material	Plastic
Stitch Types	12
Noise Level	44 dB
Spare Parts Availability (EU)	2 Years
International Article Code	08436042551262

10. WARRANTY AND SUPPORT

Prixton offers a 2-year availability for spare parts within the EU. For any product inquiries, technical support, or warranty claims, please contact Prixton customer service through their official website or the retailer where the product was purchased. Please retain your proof of purchase for warranty purposes.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question