



Manuals.plus /

› LapCabby /

› LapCabby UniCabby 32H Charging Cart User Manual

LapCabby UNICAB32H

LapCabby UniCabby 32H Charging Cart User Manual

Model: UNICAB32H

1. INTRODUCTION

The LapCabby UniCabby 32H is a robust and efficient charging cart designed to store and charge up to 32 devices simultaneously. It accommodates various devices up to 14 inches, including Chromebooks, netbooks, laptops, and tablets, with or without protective cases. This manual provides essential information for the safe and effective setup, operation, and maintenance of your UniCabby 32H Charging Cart.

2. SETUP

2.1 Unpacking and Inspection

1. Carefully remove the UniCabby 32H from its packaging.
2. Inspect the cart for any signs of damage that may have occurred during transit. If damage is found, contact your supplier immediately.
3. Ensure all components, including the power cable and keys, are present.

2.2 Positioning the Cart

Position the cart on a flat, stable surface in a well-ventilated area. Ensure there is sufficient space around the cart for air circulation and access to power outlets.



Image 1: Front view of the UniCabby 32H Charging Cart, featuring two white doors, blue handles, and grey side panels with casters for mobility.

2.3 Connecting Power

1. Locate the main power inlet on the cart.
2. Connect the provided power cable to the cart and then to a grounded electrical outlet.
3. Ensure the power switch (if present) is in the 'OFF' position before connecting to the mains.

2.4 Device Placement and Cable Management

Open the front doors of the cart to access the device bays.



Image 2: The interior of the cart is shown with both doors open, revealing 32 individual horizontal shelves designed to hold laptops, Chromebooks, or tablets. Integrated cable management clips are visible on each shelf.

1. Place each device onto a designated shelf. The shelves are designed to accommodate devices up to 14 inches.
2. Route the device's charging cable through the integrated cable management clips on each shelf. This helps keep cables neat and prevents tangling.
3. Connect each device's power adapter to the internal power outlets located at the rear of the cart.



Image 3: This image provides a view of the rear interior of the cart, with the back panel removed or opened, showing the vertical power strips and organized cable routing for charging devices.

3. OPERATING INSTRUCTIONS

3.1 Charging Devices

1. Ensure all devices are correctly placed on their shelves and connected to the internal power outlets.
2. Close and lock the cart doors for security.
3. Turn on the main power switch on the cart. The cart will begin charging the connected devices.
4. The charging status of individual devices may be indicated by their respective power indicators.

3.2 Securing the Cart

The UniCabby 32H is equipped with a locking mechanism to secure devices. Always ensure the doors are locked when devices are stored inside, especially when the cart is unattended or being moved.

4. MAINTENANCE

4.1 Cleaning

- Disconnect the cart from the main power supply before cleaning.
- Wipe exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners or solvents.
- Ensure no liquid enters the ventilation openings or electrical components.

4.2 Cable Inspection

- Periodically inspect all power cables, both internal and external, for signs of wear, fraying, or damage.
- Replace any damaged cables immediately to prevent electrical hazards.

4.3 General Care

- Do not overload the cart beyond its specified capacity of 32 devices.
- Avoid placing heavy objects on top of the cart.
- Ensure the cart's casters are locked when stationary to prevent accidental movement.

5. TROUBLESHOOTING

If you encounter issues with your UniCabby 32H, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Cart not powering on	Main power cable disconnected or faulty outlet	Check main power cable connection. Test outlet with another device. Ensure cart's power switch is ON.
Device not charging	Device cable loose, faulty adapter, or device issue	Ensure device charging cable is securely connected. Test device with its original adapter outside the cart.
Doors not locking	Obstruction or faulty lock mechanism	Check for any obstructions preventing the doors from closing fully. Inspect the lock for damage.

If the problem persists after attempting these solutions, please contact customer support.

6. SPECIFICATIONS

Feature	Detail
Model Number	UNICAB32HBL/USA
Capacity	32 devices (up to 14 inches)
Product Dimensions	37.28 x 39.69 x 20.08 inches
Item Weight	185 pounds
Assembly Required	No
Included Components	Laptop Dock

7. WARRANTY AND SUPPORT

7.1 Warranty Information

This product comes with a standard manufacturer's warranty. Please refer to the warranty card included with your purchase or visit the LapCabby official website for detailed terms and conditions.

7.2 Customer Support

For technical assistance, troubleshooting, or warranty claims, please contact LapCabby customer support through their official website or the contact information provided with your purchase documentation.

