

[Manuals.plus](#) /

› [Nutek](#) /

› Nutek TS-1Q108M 8-Inch Portable Bluetooth Speaker Instruction Manual

Nutek TS-1Q108M

Nutek TS-1Q108M 8-Inch Portable Bluetooth Speaker Instruction Manual

Model: TS-1Q108M

1. PRODUCT OVERVIEW

The Nutek TS-1Q108M is an 8-inch portable Bluetooth speaker designed for versatile audio playback. It features wireless Bluetooth connectivity, a built-in amplifier, and a rechargeable battery for extended use. This speaker also includes an FM radio, USB/SD/TF card playback, and inputs for microphones and guitars, making it suitable for various applications. Its retractable handle and wheels ensure easy portability.



Image: The Nutek TS-1Q108M portable Bluetooth speaker shown with its retail packaging, included microphone, remote control, and power adapter. The speaker features an 8-inch woofer and a control panel on the top.

Key Features:

- Wireless Bluetooth connectivity for effortless pairing with mobile devices.
- Built-in rechargeable battery and AC power option for dual power flexibility.
- Integrated FM radio, USB, SD, and TF card playback options.
- 8-inch woofer for clear audio output.
- Extendable handle and wheels for convenient transport.
- Multiple input options: microphone jack, AUX in, and guitar input.
- Includes a remote control for convenient operation.

2. SETUP

2.1 Unpacking and Initial Inspection

Carefully remove all components from the packaging. Verify that all items listed in the package contents are present and undamaged. Retain the packaging for future storage or transport.

2.2 Charging the Battery

Before first use, fully charge the speaker's internal rechargeable battery. Connect the provided AC power adapter to the speaker's DC 13.5V input port and plug the adapter into a standard wall outlet. The "charge indicator" light will illuminate during charging. Once fully charged, the indicator light may change color or turn off, depending on the model. A full charge typically takes several hours. The speaker can also be charged via a DC car charging cable (not included).





Image: Rear view of the Nutek TS-1Q108M speaker, highlighting the control panel with various input jacks (MIC, Guitar, AUX), charging port (DC 13.5V), and the retractable handle in its extended position.

2.3 Powering On/Off

Locate the power switch on the control panel. Flip the switch to the "ON" position to power on the speaker. To power off, flip the switch to the "OFF" position.

3. OPERATING INSTRUCTIONS

3.1 Bluetooth Connection

1. Power on the speaker. The speaker will automatically enter Bluetooth pairing mode, indicated by a flashing Bluetooth icon or an audible prompt.
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "NUTEK" or "TS-1Q108M" from the list of available devices.
4. Once paired, the speaker will emit an audible confirmation, and the Bluetooth indicator will stop flashing.
5. You can now play audio from your device through the speaker.

3.2 USB/SD/TF Card Playback

Insert a USB flash drive or an SD/TF card (with pre-loaded audio files) into the corresponding slot on the control panel. The speaker will automatically detect the media and begin playback. Use the "MODE" button to switch between input sources if necessary. Use the "CH+" and "CH-" buttons to navigate tracks.

3.3 FM Radio Operation

1. Press the "MODE" button to switch to FM radio mode.
2. Press the "SCAN" button to automatically scan and save available FM radio stations.
3. Use the "CH+" and "CH-" buttons to cycle through the saved stations.

3.4 Microphone and Guitar Input

Connect a microphone to the "MIC.1/GUITAR IN" or "MIC.2" jack. Connect a guitar to the "MIC.1/GUITAR IN" jack. Adjust the microphone volume using the "M.VOL" knob. Use the "ECHO" knob to add an echo effect to the microphone. Adjust

the overall speaker volume using the "VOL" knob.



Image: Front view of the Nutek TS-1Q108M speaker, detailing the top-mounted control panel with buttons for MODE, CH+, SCAN, CH-, and indicators for Bluetooth and charging.

3.5 Audio Adjustment

Use the "BASS" and "TREBLE" knobs on the control panel to adjust the low and high frequencies of the audio output, respectively. The main "VOL" knob controls the overall master volume of the speaker.

4. MAINTENANCE

4.1 Cleaning

Wipe the speaker's exterior with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents. Avoid getting moisture into any openings.

4.2 Battery Care

To prolong battery life, avoid fully discharging the battery frequently. If storing the speaker for an extended period, charge it to approximately 50% every few months. Do not expose the battery to extreme temperatures.

4.3 Storage

Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. If possible, use the original packaging for protection during storage.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery discharged; Power switch off; AC adapter not connected.	Charge the battery; Turn the power switch ON; Ensure AC adapter is securely connected.
No sound	Volume too low; Incorrect input mode; Device not playing audio.	Increase the "VOL" knob; Press "MODE" to select correct input (Bluetooth, USB, AUX); Ensure connected device is playing audio.
Bluetooth not connecting	Speaker not in pairing mode; Device Bluetooth off; Speaker too far from device.	Ensure speaker is in Bluetooth mode (flashing indicator); Turn on Bluetooth on your device; Move device closer to speaker (within 10 meters).
USB/SD/TF not playing	Incorrect file format; Media not inserted correctly; Corrupted media.	Ensure audio files are in a compatible format (e.g., MP3); Reinsert the USB drive/SD card; Try a different USB drive/SD card.

6. SPECIFICATIONS

Feature	Detail
Model Number	TS-1Q108M
Speaker Type	Woofer
Woofer Diameter	8 Inches
Connectivity Technology	Bluetooth
Power Source	Battery, AC Power
Output Wattage	60 Watts
Special Features	Bluetooth, Portable, Wireless, FM Radio, USB/SD/TF Playback, Microphone Input, Guitar Input, Remote Control
Compatible Devices	Smartphones, Tablets, Electric Guitars, Microphones, Karaoke Systems
Control Method	Remote Control, On-device Knobs/Buttons

Feature	Detail
Product Weight	8.16 Kilograms (approx. 18 lbs)
Product Dimensions	45.72 x 33.02 x 33.02 cm (approx. 18 x 13 x 13 inches)

7. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact Nutek customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims. For further assistance, please visit the official Nutek website or contact their customer support channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question