

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [H.Koenig](#) /

› [H.Koenig RP320 2-in-1 Electric Grill and Cooking Stone User Manual](#)

H.Koenig RP320

H.Koenig RP320 2-in-1 Electric Grill and Cooking Stone User Manual

Model: RP320

INTRODUCTION

Thank you for choosing the H.Koenig RP320 2-in-1 Electric Grill and Cooking Stone. This versatile appliance combines a traditional grill plate with a natural granite cooking stone, offering a healthy and enjoyable cooking experience for up to 8 people. With its adjustable temperature control and easy-to-clean design, the RP320 is ideal for preparing a variety of meats, fish, vegetables, and more. Please read this manual carefully before first use to ensure safe and optimal operation.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the cord, plugs, or heating unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use the appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface during operation.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

PRODUCT COMPONENTS

The H.Koenig RP320 grill consists of several key components designed for ease of use and versatility.

- **Main Heating Unit:** The base of the appliance containing the heating element and control knob.
- **Removable Grill Plate:** A non-stick grill surface for searing and grilling.
- **Natural Granite Cooking Stone:** A heavy stone plate for even cooking and retaining heat.
- **Removable Drip Tray:** Collects excess fats and juices for healthier cooking and easy cleaning.
- **Wooden Handles:** Integrated into the main unit for safe handling and aesthetic appeal.
- **Adjustable Thermostat:** Control knob with indicator light for precise temperature settings.



Image: The H.Koenig RP320 grill showing both the granite stone and the grill plate, ready for assembly onto the main unit.

SETUP

1. **Unpacking:** Carefully remove all packaging materials and ensure all components are present. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, wipe the main heating unit with a damp cloth. Wash the grill plate, granite stone, and drip tray with warm, soapy water, then rinse thoroughly and dry completely.
3. **Placement:** Place the appliance on a stable, flat, and heat-resistant surface, away from walls or flammable materials, ensuring adequate ventilation.
4. **Assemble Drip Tray:** Slide the removable drip tray into its designated slot beneath the heating element.
5. **Choose Cooking Surface:** Place either the grill plate or the granite cooking stone onto the heating element. Ensure it is seated correctly and securely.



Image: The H.Koenig RP320 with the grill plate correctly assembled on the heating unit, ready for use.

OPERATING INSTRUCTIONS

First Use

During the first use, a slight odor or smoke may occur as manufacturing residues burn off. This is normal and will dissipate quickly. Ensure the area is well-ventilated.

General Operation

1. **Connect to Power:** Plug the power cord into a suitable wall outlet (230V). The indicator light on the thermostat knob will illuminate.
2. **Preheating:** Turn the thermostat knob to the desired temperature setting (MIN to MAX). Allow the appliance to preheat for approximately 10-15 minutes. The indicator light may cycle on and off, indicating the heating element is maintaining the set temperature.
3. **Cooking on Grill Plate:** For grilling meats, poultry, and vegetables, place food directly onto the preheated grill plate. For best results, lightly brush food with oil or use a non-stick spray.
4. **Cooking on Granite Stone:** For raclette, delicate items, or slower cooking, place food onto the preheated granite stone. The stone provides even heat distribution and retains heat well. A small amount of oil can be used, but is often not necessary.
5. **Adjust Temperature:** Adjust the thermostat knob as needed during cooking to achieve desired results.
6. **After Cooking:** Once cooking is complete, turn the thermostat knob to the "OFF" position and unplug the appliance from the wall outlet. Allow the unit to cool completely before cleaning.



Image: A close-up view of the adjustable thermostat knob, allowing precise temperature control for various cooking needs.



Image: The H.Koenig RP320 in use, with various foods such as shrimp and vegetable skewers cooking on the grill plate.

MAINTENANCE AND CLEANING

Proper maintenance and cleaning will extend the life of your H.Koenig RP320 grill.

1. **Cool Down:** Always ensure the appliance is unplugged and completely cool before attempting to clean.
2. **Remove Components:** Carefully remove the grill plate or granite stone and the drip tray from the main unit.
3. **Clean Grill Plate:** The non-stick grill plate can be washed with warm, soapy water and a soft sponge. Avoid abrasive cleaners or metal scouring pads that could damage the non-stick coating.
4. **Clean Granite Stone:** The granite stone should be cleaned with warm water and a soft cloth. For stubborn food residues, a plastic scraper can be used. Avoid harsh detergents or sudden temperature changes (e.g., pouring cold water on a hot stone) which could cause cracking.
5. **Clean Drip Tray:** The drip tray can be washed with warm, soapy water.
6. **Clean Main Unit:** Wipe the main heating unit and wooden handles with a damp cloth. Do not immerse the main unit in water or any other liquid.

7. **Storage:** Ensure all parts are thoroughly dry before reassembling or storing the appliance. Store in a dry place.



Image: The H.Koenig RP320 demonstrating its removable grill plate and drip tray, highlighting ease of cleaning.

TROUBLESHOOTING

If you encounter any issues with your H.Koenig RP320, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not heat up.	Not plugged in; power outlet malfunction; thermostat set to OFF.	Ensure the appliance is properly plugged in. Check the power outlet with another device. Turn the thermostat knob to a heating setting.
Uneven heating.	Insufficient preheating time; food distributed unevenly.	Allow adequate preheating time (10-15 minutes). Distribute food evenly across the cooking surface.
Excessive smoke during cooking.	Too much oil/fat; food residues from previous use.	Reduce the amount of oil/fat used. Ensure the drip tray and cooking surfaces are clean before use.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Model Number: RP320

Power: 1400 Watts

Voltage: 230 Volts

Cooking Surface Dimensions: 37 x 23 cm

Product Dimensions (L x W x H): 48.5 x 23 x 9.5 cm

Weight: 1.6 Kilograms

Material: Marble stone, Metal (grill plate)

Color: Black

Special Features: Removable grill plate, natural stone plate, removable drip tray, adjustable temperature, wooden handles.



Image: The H.Koenig RP320 grill with its key dimensions (length, width, height) clearly marked.

WARRANTY AND SUPPORT

The H.Koenig RP320 comes with an extended 2-year warranty. For any warranty claims, technical support, or service inquiries, please contact the H.Koenig customer service department. An after-sales service (SAV) workshop is available in France to assist with repairs and support.

Please retain your proof of purchase for warranty validation.