



Manuals.plus /

› Citizen /

› Citizen Eco-Drive Chronograph Men's Watch - CA0615-59E

Citizen CA0615-59E

Citizen Eco-Drive Chronograph Men's Watch - CA0615-59E

Instruction Manual

INTRODUCTION

Thank you for purchasing the Citizen Eco-Drive Chronograph Men's Watch, Model CA0615-59E. This timepiece combines classic design with advanced Eco-Drive technology, ensuring reliable and precise timekeeping without the need for battery replacement. The Eco-Drive system converts any light source, natural or artificial, into energy, which is then stored in a perpetually rechargeable power cell.

This manual provides detailed instructions on how to set up, operate, and maintain your watch to ensure its longevity and optimal performance. Please read this manual thoroughly before using your watch.

KEY FEATURES

- **Eco-Drive Technology:** Powered by light, never needs a battery replacement.
- **Chronograph Function:** Precise stopwatch capabilities for measuring elapsed time.
- **Date Display:** Convenient date window for quick reference.
- **Durable Construction:** Stainless steel case and band with mineral glass dial.
- **Water Resistance:** Designed for daily use and light water exposure (refer to specifications for details).

SETUP AND INITIAL USE

1. Initial Charging

Before initial use, or if the watch has stopped, expose the watch dial to a bright light source (e.g., direct sunlight or fluorescent lamp) for several hours. The watch will begin operating once it receives sufficient light. For a full charge,

refer to the charging time guidelines in the specifications section.



Image: Front view of the Citizen Eco-Drive Chronograph Watch CA0615-59E, showcasing its black dial, silver hands, chronograph subdials, and stainless steel bracelet.

2. Setting the Time and Date

1. **Pull out the crown:** Gently pull the crown (located on the right side of the watch case) out to the second click position. The second hand will stop.
2. **Set the time:** Rotate the crown to move the hour and minute hands to the desired time. Ensure you set the AM/PM correctly if your watch has a 24-hour subdial or if setting the date.
3. **Set the date:** Push the crown in to the first click position. Rotate the crown to adjust the date. Avoid setting the date between 9:00 PM and 1:00 AM, as this may damage the date mechanism.
4. **Push in the crown:** Once the time and date are set, push the crown back into the normal position. The second hand will resume movement.

OPERATING THE CHRONOGRAPH

The chronograph function allows you to measure elapsed time. Your watch features three subdials: a 60-minute counter, a 24-hour indicator, and a small seconds hand.

1. **Start:** Press the upper pusher (button A) to start the chronograph. The chronograph second hand will begin moving.
2. **Stop:** Press the upper pusher (button A) again to stop the chronograph. The elapsed time will be indicated by the chronograph hands.
3. **Reset:** After stopping the chronograph, press the lower pusher (button B) to reset all chronograph hands to their zero positions.
4. **Split Time (if applicable):** Some models allow for split time measurement. Consult the detailed movement manual for specific instructions if this feature is present.

MAINTENANCE AND CARE

Cleaning Your Watch

Wipe the watch case and band periodically with a soft, dry cloth to remove dirt and perspiration. For stainless steel bands, a slightly damp cloth can be used, followed by a dry cloth. Avoid using chemical cleaners or abrasive materials.

Water Resistance

Your Citizen Eco-Drive watch is designed with a certain level of water resistance. While it is suitable for daily use and splashes, avoid prolonged exposure to water, hot water, or steam. Do not operate the crown or pushers when the watch is wet. Refer to the specifications for the exact water resistance rating (e.g., 10 BAR / 100 meters).

Storage

When not wearing your watch, store it in a location where it can receive light to maintain its charge. Avoid storing it in dark places for extended periods, as this may lead to the watch stopping and requiring a full recharge.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch has stopped or is running intermittently.	Insufficient charge.	Expose the watch to bright light for several hours to fully charge.
Time is incorrect after setting.	Crown not fully pushed in, or hands misaligned.	Ensure the crown is fully pushed in. If hands are misaligned, perform a chronograph zero-position correction (refer to Citizen's official manual for specific movement instructions).
Date changes at noon instead of midnight.	AM/PM not correctly set during time adjustment.	Advance the time by 12 hours.

If problems persist, please contact Citizen customer support or an authorized service center.

SPECIFICATIONS

- **Model Number:** CA0615-59E
- **Movement Type:** Eco-Drive (Light Powered)
- **Dial Color:** Black
- **Case Material:** Stainless Steel
- **Band Material:** Stainless Steel
- **Band Color:** Silver
- **Case Diameter:** 36 Millimetres
- **Dial Glass Material:** Mineral
- **Display Type:** Chronograph
- **Item Weight:** 380 g

WARRANTY AND SUPPORT

Your Citizen Eco-Drive Chronograph Watch CA0615-59E comes with a **1 Year International Guarantee** from the manufacturer. This warranty covers manufacturing defects under normal use.

For warranty claims, service, or additional support, please contact an authorized Citizen service center or visit the official Citizen website. Keep your proof of purchase for warranty validation.

Visit [Citizen Official Support Page](#)