

BELLA 14436

BELLA One Scoop One Cup Coffee Maker (Model 14436) Instruction Manual

INTRODUCTION

Welcome to the BELLA One Scoop One Cup Coffee Maker instruction manual. This compact and efficient appliance is designed to provide a quick and convenient single serving of coffee, tea, or hot water. Please read this manual thoroughly before operating your new coffee maker to ensure safe and optimal performance.

IMPORTANT SAFEGUARDS

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT OVERVIEW

The BELLA One Scoop One Cup Coffee Maker is designed for convenience and efficiency. Its compact size makes it ideal for small spaces, while its simple operation ensures a fresh brew every time.

Barista Style Coffee at Home



7.25 inch

4.33 inch

10 inch

BELLA ONE SCOOP ONE CUP COFFEE MAKER

Image showing the BELLA One Scoop One Cup Coffee Maker with its compact dimensions: 4.75 inches deep, 10 inches wide, and 7.25 inches high. The image highlights its single-serve capacity with a 14 oz water tank.

Key Features:

- **Compact Design:** Ideal for small kitchens, offices, or dorms.
- **14 oz Water Tank:** Brews a single, generous serving.
- **Adjustable Drip Tray:** Accommodates various mug and travel tumbler sizes.
- **Permanent Filter:** Reusable and dishwasher safe, eliminating the need for paper filters.
- **Versatile Use:** Brews coffee, tea, or dispenses hot water.

SETUP

1. **Unpack:** Carefully remove all packaging materials and inspect the coffee maker for any damage.
2. **Placement:** Place the coffee maker on a stable, level surface away from the edge of the counter. Ensure there is adequate space around the unit for ventilation.
3. **Initial Cleaning:** Before first use, wash the permanent filter and drip tray in warm, soapy water.

Rinse thoroughly and dry. Wipe the exterior of the coffee maker with a damp cloth.

4. **First Brew (Cleaning Cycle):** Fill the water tank with clean water up to the 14 oz mark. Place an empty mug on the drip tray. Close the lid and press the power button to run a cycle with just water. Discard the water. This cleans the internal components.


OPERATING INSTRUCTIONS

Brewing Coffee or Tea:

1. **Fill Water Tank:** Open the lid of the coffee maker. Fill your mug with the desired amount of water (up to 14 oz) and pour it into the water tank at the back of the unit. Do not overfill.
2. **Add Grounds/Tea:** Place the permanent filter into its designated slot. Add your preferred amount of ground coffee or loose leaf tea into the filter. Close the lid securely.

Brewing Made Easy

**Powerful pumping
system for fast brewing**

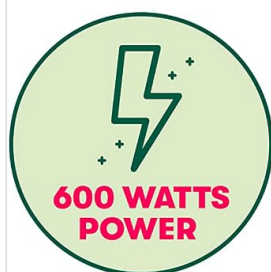

A hand adding coffee grounds into the permanent filter basket of the BELLA One Scoop One Cup Coffee Maker, demonstrating the easy brewing process.

3. **Position Mug:** Place your mug or travel tumbler on the adjustable drip tray. Ensure the mug is centered under the dispenser.

Suitable for All Cup Sizes

The adjustable drip tray accommodates any cup



The BELLA One Scoop One Cup Coffee Maker featuring its adjustable drip tray, designed to accommodate various cup sizes, including travel mugs.

4. **Start Brewing:** Plug the coffee maker into a standard electrical outlet. Press the illuminated power button on the front of the unit. The light will indicate that brewing has started.



The BELLA One Scoop One Cup Coffee Maker actively brewing a fresh cup of coffee into a mug, showcasing its drip mechanism.

5. **Enjoy:** Once the brewing cycle is complete, the coffee maker will automatically turn off. Carefully remove your mug and enjoy your freshly brewed beverage.

Using for Hot Water:

To dispense hot water for instant soups, oatmeal, or hot cocoa, simply follow steps 1, 3, and 4 from the "Brewing Coffee or Tea" section, omitting step 2 (adding grounds/tea). The unit will heat and dispense the water into your mug.

Official product summary video demonstrating the key features and ease of use of the BELLA One Scoop One Cup Coffee Maker, including filling the water tank, adding coffee grounds, and brewing.

CLEANING AND MAINTENANCE

Daily Cleaning:

- Always unplug the coffee maker before cleaning.
- Remove the permanent filter and discard used grounds/tea. Rinse the filter under running water. The permanent filter is dishwasher safe.

Enjoy Flavorful Beverages

**Reusable permanent filter to
brew coffee, tea and more**



Close-up of the dishwasher-safe permanent filter of the BELLA One Scoop One Cup Coffee Maker, emphasizing its reusability and ease of cleaning.

- Remove and clean the drip tray and its cover with warm, soapy water. Rinse and dry.
- Wipe the exterior of the coffee maker with a damp cloth. Do not use abrasive cleaners or scouring pads.

Descaling (Monthly or as needed):

Mineral deposits from water can build up in your coffee maker over time, affecting performance. Descale your unit regularly:

1. Fill the water tank with a mixture of 1 part white vinegar and 2 parts water.
2. Place an empty mug on the drip tray.
3. Run a brewing cycle. After about half the solution has dispensed, turn off the coffee maker and let it soak for 20-30 minutes.
4. Turn the coffee maker back on to complete the cycle.
5. Run 2-3 cycles with fresh, clean water to rinse out any remaining vinegar taste.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee maker does not turn on.	Not plugged in; power button not pressed.	Ensure unit is plugged into a working outlet; press the power button.
Water not dispensing or slow dispensing.	Mineral buildup; insufficient water.	Perform descaling procedure; ensure water tank is filled.
Coffee tastes weak.	Too little coffee grounds; coarse grind.	Increase amount of coffee grounds; use a finer grind.
Coffee overflows from mug.	Mug too small; water tank overfilled.	Use a larger mug; do not fill water tank beyond 14 oz.

SPECIFICATIONS

Feature	Detail
Brand	BELLA
Model Number	14436
Capacity	14 ounces
Color	Silver/Black
Product Dimensions (D x W x H)	4.75" x 10" x 7.25"
Item Weight	1.9 Pounds
Wattage	600 watts
Operation Mode	Fully Automatic
Coffee Input Type	Loose Coffee Grounds
Filter Type	Permanent Filter
Material	Stainless Steel
Dishwasher Safe Parts	Yes (Permanent Filter, Drip Tray)

WARRANTY AND SUPPORT

This BELLA appliance comes with a **2-Year Limited Warranty**. For detailed warranty information, product registration, or technical support, please refer to the official BELLA website or contact customer service. Keep your purchase receipt as proof of purchase for warranty claims.