

[Manuals.plus](#) /

› [Life-Tech](#) /

› Life-Tech USB Data Charging Cable Instruction Manual for DigiLand Tablets (DL1018A, DL718M, DL808W)

Life-Tech USB Data Charging Cable for DigiLand DL1018A, DL718M, DL808W Tablets

Life-Tech USB Data Charging Cable Instruction Manual

For DigiLand DL1018A, DL718M, and DL808W Tablets

1. INTRODUCTION

This manual provides instructions for the proper use and care of your Life-Tech USB Data Charging Cable. This cable is designed to provide both power charging and data synchronization capabilities for compatible DigiLand tablets.

Key Features:

- Conveniently charge your device from a laptop, computer, USB wall charger, or USB car charger.
- Sync your device with a computer for data transfer.
- Compatible with PC & MAC / USB 1.0, 1.1, and 2.0 standards.
- Cable Length: 3 feet.

Compatible Devices: DigiLand DL1018A 10.1", DigiLand DL718M 7", DigiLand DL808W 8" Tablets.

2. SETUP

To set up your Life-Tech USB Data Charging Cable, follow these steps:

1. **Identify Connectors:** The cable has a standard USB Type-A connector on one end and a proprietary connector for your DigiLand tablet on the other.
2. **Connect to Power Source or Computer:** Insert the USB Type-A end of the cable into an available USB port on your computer, laptop, USB wall charger, or USB car charger. Ensure the port is functional and provides power.
3. **Connect to Tablet:** Carefully insert the proprietary connector into the charging/data port on your DigiLand DL1018A, DL718M, or DL808W tablet. Ensure a secure connection.



Image: The Life-Tech USB Data Charging Cable, illustrating its two distinct connectors for power and data transfer.

3. OPERATING INSTRUCTIONS

3.1. Charging Your Tablet

Once the cable is properly connected to a power source and your tablet, the tablet should indicate that it is charging. The charging time will vary depending on the power source (e.g., wall adapter vs. computer USB port) and the tablet's battery level.

- For optimal charging speed, use a dedicated USB wall charger with appropriate power output for your tablet.
- Avoid using damaged cables or power sources, as this can harm your device.

3.2. Data Transfer

To transfer data between your tablet and a computer (PC or Mac):

1. Connect the USB Type-A end of the cable to your computer's USB port.
2. Connect the other end to your DigiLand tablet.
3. Your computer should recognize the tablet as a removable storage device or prompt you to select a connection mode (e.g., "File Transfer" or "MTP").
4. Follow the on-screen prompts on your computer and tablet to access and transfer files.

Note: Ensure your computer has the necessary drivers installed for your DigiLand tablet if it is not automatically recognized. Refer to your tablet's manual or manufacturer's website for driver information.

4. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your cable:

- **Storage:** Store the cable in a cool, dry place, away from direct sunlight and extreme temperatures. Avoid tightly coiling or bending the cable sharply.
- **Cleaning:** Gently wipe the cable and connectors with a soft, dry, lint-free cloth. Do not use liquid cleaners or solvents.
- **Handling:** Always grasp the connector head when plugging or unplugging the cable, rather than pulling on the cable itself, to prevent damage to the wires and connectors.

- **Inspection:** Periodically inspect the cable for any signs of wear, fraying, or damage. Discontinue use if any damage is observed.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Tablet not charging.	Loose connection, faulty power source, damaged cable, tablet issue.	Ensure cable is securely connected at both ends. Try a different USB port or power adapter. Inspect the cable for damage. Test with another compatible cable if available.
Slow charging.	Low power output from USB port (e.g., computer USB 1.0/1.1), background tablet activity.	Use a dedicated USB wall charger. Close unnecessary applications on the tablet.
Data transfer not working.	Loose connection, incorrect tablet mode, missing drivers, computer port issue.	Verify secure connections. On your tablet, select "File Transfer" or "MTP" mode when prompted. Install necessary tablet drivers on your computer. Try a different USB port on the computer.
Cable appears damaged.	Physical wear and tear.	Discontinue use immediately to prevent damage to your devices. Replace the cable.

6. SPECIFICATIONS

Brand: Life-Tech

Model: USB Data Charging Cable (for DigiLand DL1018A, DL718M, DL808W)

Connector Type: USB Type A (Male) to Proprietary Tablet Connector (Male)

Cable Type: USB

Compatible Devices: Laptop, PC, DigiLand DL1018A, DL718M, DL808W Tablets

Special Features: Charging, Data Transfer

Connectivity Technology: USB

Maximum Voltage: 5 Volts (DC)

Number of Pins: 4

Length: 3 ft

Color: Black

Item Shape: Round

UPC: 604310877118

ASIN: B01C8G9DMY

7. WARRANTY AND SUPPORT

Life-Tech products are manufactured with quality and reliability in mind. For specific warranty information, please refer to the packaging of your product or visit the official Life-Tech website. If you encounter any issues or require technical assistance, please contact Life-Tech customer support through their official channels.

Please retain your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01C8G9DMY>

More documents and user manuals: <https://manuals.plus/>