

[Manuals.plus](#) /

› [Haynes](#) /

› Haynes Repair Manual for Toyota Tacoma (2005-2018)

Haynes Toyota Tacoma (2005-2018) H92077

Haynes Repair Manual for Toyota Tacoma (2005-2018)

Model H92077: Comprehensive Repair and Maintenance Guide

INTRODUCTION

This manual provides comprehensive repair and maintenance information for Toyota Tacoma models manufactured between 2005 and 2018. It covers all 2WD and 4WD models, offering step-by-step procedures based on a complete teardown and rebuild of the vehicle. The aim is to empower vehicle owners and mechanics with the knowledge to perform various repairs, from routine maintenance to complex engine overhauls.

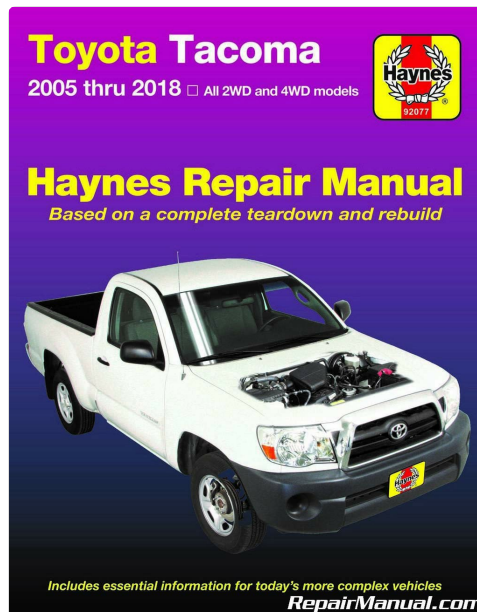


Image: Front cover of the Haynes Repair Manual for Toyota Tacoma (2005-2018). The cover features a white Toyota Tacoma pickup truck with its hood open, showcasing the engine bay. The title "Toyota Tacoma 2005 thru 2018 All 2WD and 4WD models" is prominently displayed at the top, along with the Haynes logo and "92077". Below the truck, it reads "Haynes Repair Manual Based on a complete teardown and rebuild" and "Includes essential information for today's more complex vehicles RepairManual.com".

GETTING STARTED WITH YOUR REPAIR MANUAL

Before beginning any repair work, it is crucial to familiarize yourself with the manual's structure and content. Each chapter is dedicated to a specific system or component of the Toyota Tacoma. Procedures are detailed with clear instructions and accompanying illustrations or photographs to guide you through each step. Always read through the entire procedure

before starting work.

- **Safety First:** Always prioritize safety. Wear appropriate personal protective equipment (PPE) and ensure the vehicle is securely supported before working underneath it.
- **Tools and Equipment:** A list of necessary tools is often provided at the beginning of each major procedure. Ensure you have all required tools before starting.
- **Understanding Terminology:** Familiarize yourself with automotive terms used throughout the manual.

ROUTINE MAINTENANCE AND TUNE-UP

Regular maintenance is essential for the longevity and optimal performance of your Toyota Tacoma. This section outlines a comprehensive schedule and procedures for routine service tasks.

Maintenance Schedule Overview

Typical Maintenance Intervals

Service Item	Interval (Miles/Months)	Notes
Engine Oil & Filter Change	5,000 miles / 6 months	More frequently for severe driving conditions.
Tire Rotation	5,000 miles / 6 months	Check tire pressure and wear.
Air Filter Inspection	10,000 miles / 12 months	Replace if dirty.
Spark Plug Replacement	30,000-60,000 miles	Refer to specific engine type in manual.

Detailed instructions for each maintenance task, including fluid capacities, torque specifications, and special tool requirements, are provided within the relevant chapters of this manual.

TROUBLESHOOTING COMMON PROBLEMS

This section assists in diagnosing common issues that may arise with your Toyota Tacoma. It provides a systematic approach to identify the root cause of a problem based on symptoms.

Diagnostic Flowchart Example: Engine Not Starting

1. **Symptom:** Engine cranks but does not start.
 - *Check Battery:* Is the battery charged? Are terminals clean and tight?
 - *Check Fuel:* Is there sufficient fuel in the tank? Can you hear the fuel pump prime?
 - *Check Spark:* Are spark plugs firing? Inspect ignition coils and wires.
 - *Check Air:* Is the air filter clean? Is there any obstruction in the intake?
2. **Symptom:** Engine starts but runs rough.
 - *Check Spark Plugs:* Worn or fouled spark plugs.
 - *Check Fuel Injectors:* Clogged or faulty injectors.
 - *Check Vacuum Leaks:* Inspect hoses and gaskets for leaks.

For more detailed troubleshooting guides and specific diagnostic procedures, refer to the dedicated chapters on Engine, Fuel System, Electrical System, etc., within this manual.

TECHNICAL SPECIFICATIONS

This section provides critical technical data, including dimensions, capacities, and torque specifications for various components of the Toyota Tacoma (2005-2018 models). Always refer to the specific chapter for the most accurate and detailed specifications for your particular model year and engine type.

General Specifications (Example)

- Engine Type:2.7L 2TR-FE I4 / 4.0L 1GR-FE V6
- Oil Capacity:Varies by engine, typically 5.5 - 6.5 quarts
- Tire Pressure:Refer to vehicle's door jamb sticker (typically 29-32 PSI)
- Spark Plug Gap:Refer to engine specifications in manual

Common Torque Specifications (Example)

Selected Torque Values (ft-lbs)

Component	Torque (ft-lbs)	Notes
Wheel Lug Nuts	83	Always re-check after 50 miles.
Oil Drain Plug	27	Use new crush washer.
Spark Plugs	13	For 2TR-FE engine.

Warning: Always use a calibrated torque wrench when tightening fasteners to specified values. Overtightening or undertightening can lead to component failure.

SUPPORT AND ADDITIONAL RESOURCES

For further assistance or to inquire about updates to this manual, please refer to the publisher's official resources.

- Publisher:Haynes Manuals
- Website:[www.haynes.com](#)
- Model Number:H92077

This manual is designed to be a comprehensive guide for the DIY mechanic and professional technician alike. While every effort has been made to ensure accuracy, vehicle specifications and repair procedures may vary slightly. Always consult the latest information available from the manufacturer or Haynes Manuals.

© 2024 Haynes Manuals. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question