

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [GPO](#) /

› [GPO Bermuda Classic Turntable USB with Removable Legs - Instruction Manual](#)

## GPO Bermuda Classic

# GPO Bermuda Classic Turntable USB with Removable Legs

## INSTRUCTION MANUAL

Model: Bermuda Classic | Brand: GPO

## Important Safety Information

- Read all instructions carefully before use and retain for future reference.
- Do not expose the unit to rain, moisture, or extreme temperatures.
- Ensure proper ventilation; do not block any ventilation openings.
- Use only the power adapter supplied with the unit.
- Keep the unit away from heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
- Clean only with a dry cloth.
- Refer all servicing to qualified service personnel.

## Package Contents

Verify that all items are present and in good condition:

- GPO Bermuda Classic Turntable Unit
- Removable Legs (4)
- 45-RPM Adaptor
- Power Adapter
- Instruction Manual (this document)

## Product Overview

The GPO Bermuda Classic Turntable combines vintage aesthetics with modern functionality, featuring built-in speakers, USB recording, and Bluetooth connectivity. It includes removable legs for versatile placement.



Figure 1: GPO Bermuda Classic Turntable with removable legs.



Figure 2: Turntable platter and tonearm.



Figure 3: Rear connection ports.

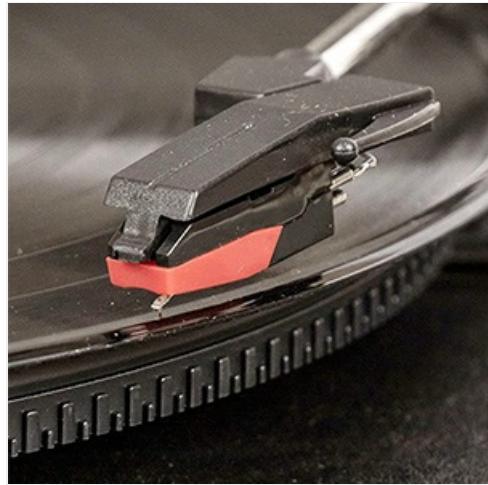


Figure 4: Stylus and cartridge.

## Setup

- 1. Attaching the Legs:** Carefully turn the turntable unit upside down. Align each leg with the designated mounting points on the bottom of the unit. Securely screw each leg into place until firm. Ensure all four legs are stable before uprighting the unit.
- 2. Power Connection:** Connect the supplied power adapter to the '9V-DC-IN' port on the rear of the turntable. Plug the other end into a suitable wall outlet.
- 3. External Audio Connections (Optional):**
  - **Line Out:** To connect to an external amplifier or powered speakers, use RCA cables (not included) to connect the 'LINE OUT' ports on the turntable to the corresponding input on your audio system.
  - **Ear Out:** For private listening, plug headphones into the 'EAR OUT' jack on the rear panel.

## Operating Instructions

### Playing a Record

1. Open the turntable lid.
2. Place a record on the platter. If playing a 45-RPM single, place the 45-RPM adaptor over the center spindle.
3. Select the correct speed (33, 45, or 78 RPM) using the speed selector switch.
4. Gently lift the tonearm using the cueing lever and position the stylus over the desired track on the record.
5. Lower the tonearm slowly using the cueing lever. The record will begin to play.
6. Adjust the volume using the 'VOLUME' knob on the front panel.
7. The turntable features an auto-stop function. When the record finishes, the platter will stop rotating automatically. To stop playback manually, lift the tonearm and return it to its rest.

### USB Recording

The GPO Bermuda allows you to convert your vinyl records into digital audio files via USB.

1. Connect the turntable to your computer using a USB cable (not included) via the 'USB' port on the rear.
2. Install appropriate recording software on your computer (e.g., Audacity, available online).
3. Follow the software's instructions to set up the turntable as an input device and begin recording.

4. Play your record as described above while recording is active on your computer.

## Bluetooth Connectivity

Stream music wirelessly to the turntable's built-in speakers from a compatible Bluetooth device.

1. Turn on the turntable and select the Bluetooth input mode (refer to front panel controls). The Bluetooth indicator light will flash.
2. Enable Bluetooth on your smartphone, tablet, or other compatible device.
3. Search for available devices and select "GPO Bermuda" from the list.
4. Once paired, the Bluetooth indicator light will become solid. You can now play audio from your device through the turntable's speakers.

## Maintenance

---

### Cleaning the Unit

- Wipe the exterior surfaces with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- For the platter, use a soft, lint-free cloth.

### Stylus Care

- The stylus is a delicate component. Handle with care.
- Clean the stylus regularly using a soft brush, brushing gently from back to front.
- Replace the stylus approximately every 300-500 hours of playback, or if you notice a degradation in sound quality. Consult GPO for replacement stylus information.

## Troubleshooting

---

Problem	Possible Cause	Solution
No power	Power adapter not connected or faulty outlet.	Ensure power adapter is securely connected and the outlet is functional.
No sound from speakers	Volume too low; incorrect input selected; external speakers connected.	Increase volume. Ensure correct input mode is selected. Disconnect headphones or external speakers if using built-in speakers.
Record skipping	Dirty or damaged record; dirty or worn stylus; turntable not level.	Clean record. Clean or replace stylus. Ensure turntable is on a flat, stable surface.
USB recording issues	Incorrect software settings; USB cable issue.	Verify recording software settings. Try a different USB cable or port.
Bluetooth not pairing	Device too far; Bluetooth not enabled on device; turntable not in pairing mode.	Ensure devices are close. Enable Bluetooth on your device. Put turntable in pairing mode.

## Specifications

---

<b>Model Name</b>	Bermuda Classic
<b>Brand</b>	GPO
<b>Product Dimensions</b>	14.49 x 15.04 x 8.46 inches
<b>Item Weight</b>	15.4 pounds (7 Kilograms)
<b>Material</b>	Plastic
<b>Motor Type</b>	AC Motor
<b>Special Features</b>	Removable Legs, USB Recording, Bluetooth Turntable, Auto-Stop / Auto-Return, Built-In Speakers
<b>Compatible Devices</b>	Smartphone, Speaker, Tablet

## **Warranty and Support**

For warranty information, technical support, or to purchase replacement parts, please contact GPO customer service. Refer to the official GPO website or product packaging for contact details.