

## Comfort Zone CZ6XMWT

# Comfort Zone CZ6XMWT 6-inch 2-Speed Combo Clip or Desk Fan Instruction Manual

Model: CZ6XMWT | Brand: Comfort Zone

## INTRODUCTION

Thank you for choosing the Comfort Zone CZ6XMWT 6-inch 2-Speed Combo Clip or Desk Fan. This manual provides important information regarding the safe operation, installation, maintenance, and troubleshooting of your new fan. Please read it thoroughly before use and retain it for future reference.

## IMPORTANT SAFETY INFORMATION

**WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).**

- Always unplug the fan before cleaning or servicing.
- Do not operate the fan with a damaged cord or plug.
- Keep fingers and other objects away from the fan blades during operation.
- Ensure the fan is placed on a stable, level surface when used as a desk fan.
- When using the clip, ensure it is securely fastened to a sturdy surface.
- Do not use this fan near water or in excessively humid environments.

## PRODUCT FEATURES

- **2-Speed Control:** Easily switch between low and high air output.
- **Adjustable Tilt:** Direct airflow up or down as needed.
- **360-Degree Rotation:** Offers full rotation for precise airflow direction.
- **Dual Base Options:** Can be used as a clip-on fan or a desk fan with the included removable base.
- **Compact and Portable:** Lightweight design with a small footprint.

- **Quiet Operation:** Designed for minimal noise output.



Image: The Comfort Zone 6-inch fan demonstrating its versatility with both clip and desk base options.

## PACKAGE CONTENTS

- Comfort Zone CZ6XMWT Clip Desk Fan
- Power Cord
- Removable Desk Base
- Product Manual (this document)

## SETUP

### Using as a Desk Fan:

1. Ensure the fan is detached from the clip mechanism.
2. Align the fan's mounting slot with the post on the removable desk base.
3. Gently push down until the fan is securely seated on the base.
4. Place the assembled fan on a flat, stable surface.

### Using as a Clip Fan:

1. Ensure the fan is detached from the removable desk base.
2. Open the strong clamp by pressing the handles together.
3. Attach the clamp securely to a sturdy surface such as a desk, shelf, or table edge. Ensure the grip is firm to prevent the fan from falling.



Image: The Comfort Zone 6-inch fan shown with its removable desk base, ready for tabletop use.



Image: A close-up of the Comfort Zone 6-inch fan demonstrating its clip-on functionality.


## OPERATING INSTRUCTIONS

1. **Power Connection:** Plug the fan's power cord into a standard 120V AC electrical outlet.
2. **Turn On/Off:** Locate the slider switch on the back of the fan. Slide it to 'LO' for low speed, 'HI' for high speed, or 'OFF' to turn the fan off.
3. **Adjusting Airflow Direction:**


- **Tilt Adjustment:** Loosen the thumbscrew on the side of the fan head, adjust the head to the desired vertical angle, and then tighten the thumbscrew to secure it.
- **Rotation:** The fan head can be manually rotated 360 degrees horizontally to direct air in any direction.



**Convenient Handle**

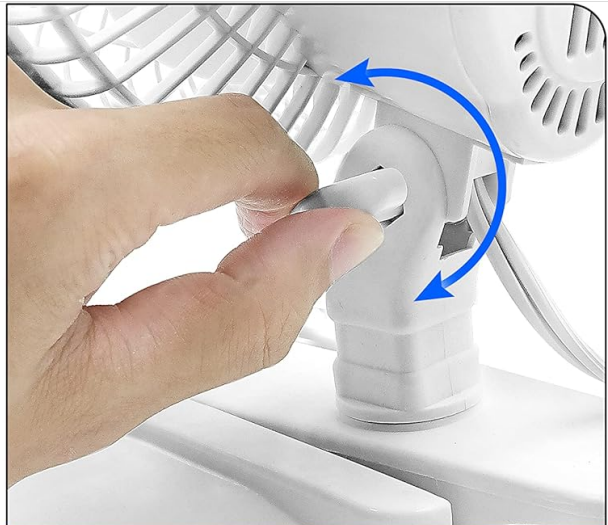

**Thumbscrew to Adjust Tilt**

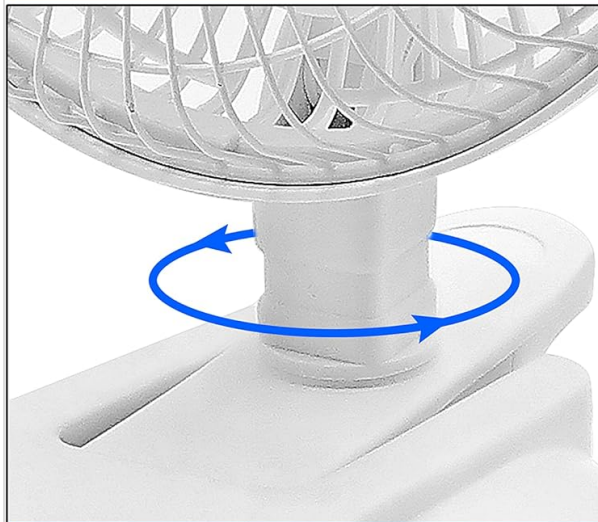

**360° Rotation**



**Strong Clamp with 2" Opening**

Image: Detailed views of the fan's features, including the handle, thumbscrew for tilt, and 360-degree rotation capability.



Image: Front and rear views of the fan, illustrating the slider switch for selecting low, high, or off settings.

## MAINTENANCE

Regular cleaning will help maintain your fan's performance and extend its lifespan.

- **Cleaning:** Always unplug the fan before cleaning. Use a soft, damp cloth to wipe the exterior surfaces. Do not immerse the fan in water or allow water to drip into the motor housing.
- **Grille Cleaning:** Use a vacuum cleaner with a brush attachment to remove dust from the grilles.
- **Storage:** When not in use, store the fan in a cool, dry place, preferably in its original packaging.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not operate	No power supply; Fan switch is OFF	Check power cord connection; Turn fan switch to 'LO' or 'HI'

Problem	Possible Cause	Solution
Weak airflow	Fan speed set to low; Dust accumulation on grilles/blades	Increase fan speed; Clean grilles and blades
Unusual noise	Loose parts; Obstruction	Unplug and inspect for loose parts or obstructions; Ensure fan is on a stable surface.

---

## SPECIFICATIONS

- **Model:** CZ6XMWT
- **Size:** 6 inches
- **Number of Speeds:** 2
- **Power Source:** Corded Electric
- **Voltage:** 120V
- **Wattage:** 51 watts
- **Noise Level:** 42.7 Decibels
- **Dimensions (D x W x H):** 6.75"D x 6.88"W x 7.38"H
- **Item Weight:** 1.52 Pounds
- **Material:** Plastic (Blades and Housing)
- **Installation Type:** Stand alone, Clip-on
- **Safety Certification:** ETL

---

## OFFICIAL PRODUCT VIDEOS

### Comfort Zone Fan Lineup

Your browser does not support the video tag.

Video: An overview of the Comfort Zone fan lineup, showcasing various models and their features.

### 6 inch Clip Fan

Your browser does not support the video tag.

Video: A detailed look at the 6-inch clip fan, demonstrating its features and versatility.

---

## WARRANTY AND SUPPORT

This Comfort Zone fan comes with a **1 Year Warranty Against Manufacturer Defects**. For warranty claims or technical support, please contact Mr. Brands, LLC., the manufacturer.

For further assistance, please refer to the contact information provided with your purchase documentation or visit the official Comfort Zone website.

