

[Manuals.plus](#) /

› [Smartxchoices](#) /

› Smartxchoices 10' x 10' Outdoor Gazebo Canopy Tent Instruction Manual

Smartxchoices SC1056&H02-1231

Smartxchoices 10' x 10' Outdoor Gazebo Canopy Tent Instruction Manual

Model: SC1056&H02-1231

INTRODUCTION

Thank you for choosing the Smartxchoices 10' x 10' Outdoor Gazebo Canopy Tent. This manual provides essential information for the safe assembly, operation, and maintenance of your gazebo. Please read all instructions carefully before setup and retain this manual for future reference.

Important Safety Information

- This product is designed for garden and leisure events in good weather conditions. It is not guaranteed to withstand strong winds or heavy rain.
- Always ensure all connections are tight and secure before and during use.
- For enhanced stability, it is strongly recommended to use white duct tape to secure the poles to the plastic connectors after initial setup.
- Do not leave the canopy up overnight or during adverse weather conditions.

PARTS LIST

Before beginning assembly, verify that all components listed below are present and undamaged:

- Powder-coated steel framework (poles)
- Plastic connectors
- Waterproof polyethylene cover (roof)
- Removable sidewalls with windows (4 pieces)
- Ropes
- Ground stakes
- Installation manual (this document)



Image: Various components of the gazebo, including plastic connectors, ropes, and ground stakes, laid out for inspection.

SETUP INSTRUCTIONS

Follow these steps for proper assembly of your gazebo canopy tent:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface. Refer to the parts list to ensure all items are present.
2. **Assemble Frame:** Connect the powder-coated steel poles using the plastic connectors. Ensure each pole is fully inserted into the connector for a secure fit. Pay close attention to the orientation of the connectors to form the correct frame structure.
3. **Attach Roof Cover:** Drape the waterproof polyethylene cover over the assembled frame. Ensure the cover is centered and evenly distributed. Secure the cover to the frame using any integrated fasteners (e.g., Velcro straps) provided.

4. **Install Sidewalls (Optional):** If desired, attach the removable sidewalls to the frame using the nylon fasteners. The sidewalls feature translucent windows for light. A zipper entrance is included for easy access.
5. **Secure to Ground:** Use the provided ropes and ground stakes to anchor the gazebo firmly to the ground. This is crucial for stability. Insert stakes through the base plates of the poles and into the ground.



Image: A close-up view of a hand inserting a metal ground stake through the base of a gazebo pole into the grass, demonstrating how to secure the structure.

Important: After assembly, double-check all connections for tightness. For added stability, consider taping the poles to the plastic connectors with white duct tape.

OPERATING INSTRUCTIONS

The Smartxchoices gazebo is designed for flexible use in various outdoor settings.

Sidewall Configuration

- **Open Air Setup:** For maximum ventilation and an open feel, the sidewalls can be easily removed. This configuration is ideal for events where overhead protection is needed without enclosing the space.
- **Enclosed Setup:** Attach the sidewalls to create a more enclosed space, offering additional protection from sun or light breezes. The translucent windows allow for natural light and visibility.



Well-Ventilated

All sidewalls can be removed to enhance air circulation and provide better ventilation



Brighter

Large translucent windows on sidewalls offer brighter light and wider views

Image: The gazebo shown without any sidewalls attached, illustrating its open-air configuration for ventilation.

8 REMOVABLE SIDEWALLS



Zippered Door



Bright



Ventilated


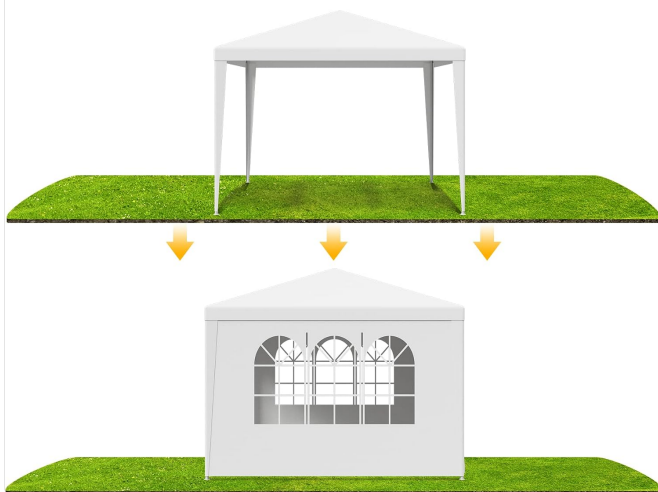 


Image: The gazebo with all four sidewalls attached, featuring decorative arched windows that allow light into the enclosed space.


UV Protection and Waterproofing

 The polyethylene cover provides UV protection, blocking approximately 90% of sun UV rays. The material is also waterproof, offering protection from light moisture. However, it is not designed for heavy rain or prolonged exposure to wet conditions.

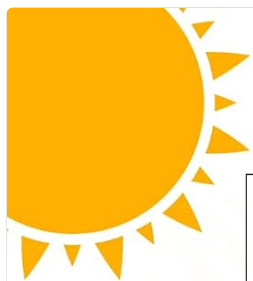

Waterproof

 Durable water-resistant fabric can effectively keep out rainwater (Not recommend to leave the canopy up overnight or under bad weather)

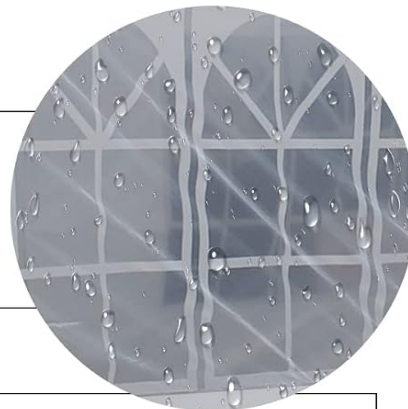

UV Protection

High quality polyethylene cover can block 90% of the sun UV rays

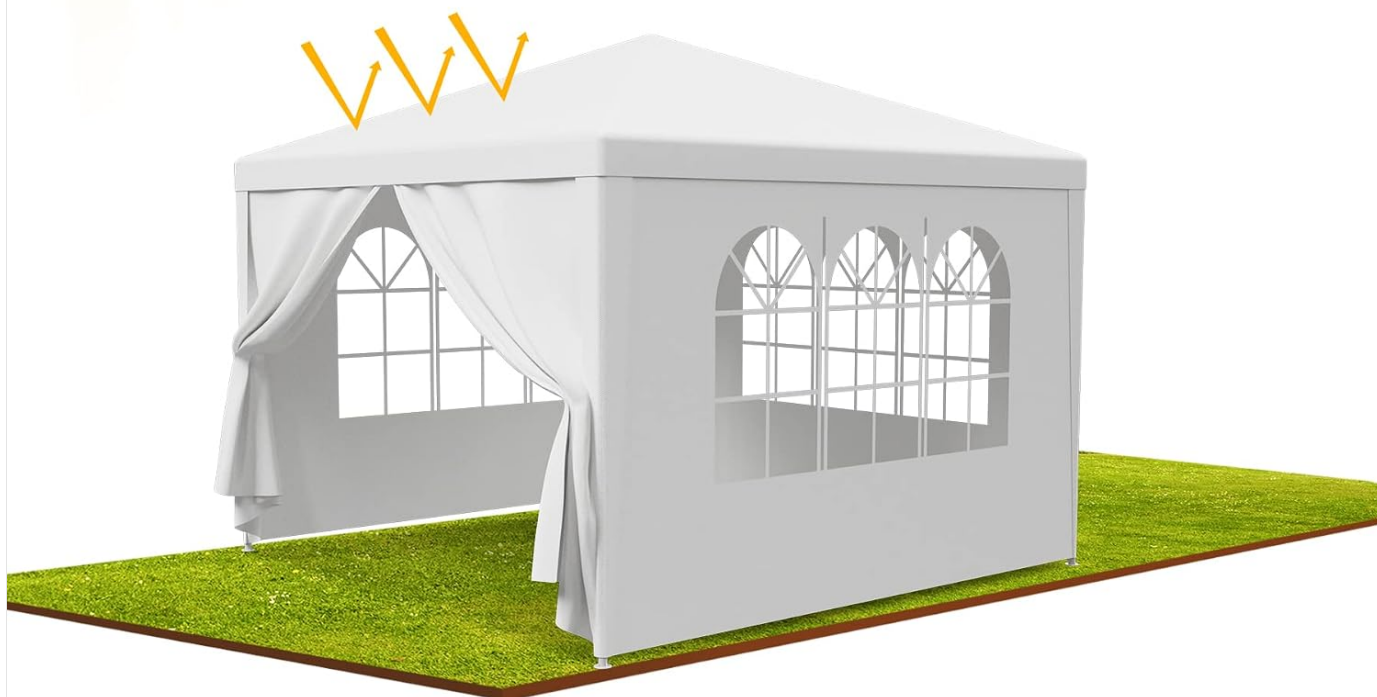


Image: The gazebo with sidewalls partially tied back, illustrating its waterproof and UV-protective canopy material.

MAINTENANCE

Proper care and maintenance will extend the life of your gazebo.

- **Cleaning:** Clean the polyethylene cover and sidewalls with a mild soap solution and water. Avoid harsh chemicals or abrasive cleaners that could damage the material. Rinse thoroughly and allow to air dry completely before storage.
- **Frame Care:** The steel framework is powder-coated for rust and corrosion resistance. Inspect the frame periodically for any signs of damage or rust. Clean any dirt or debris from the frame.
- **Storage:** When not in use, especially during off-season or anticipated bad weather, disassemble the gazebo and store all components in a dry, protected area. Ensure the fabric is completely dry to prevent mold and mildew.

TROUBLESHOOTING

Here are solutions to common issues you might encounter:

- **Gazebo Instability:** If the gazebo feels unstable, ensure all pole connections are fully engaged and tight. Verify that all ground stakes are securely driven into the ground and ropes are taut. Applying white duct tape to pole-connector joints can significantly improve stability.
- **Water Pooling on Roof:** This can occur if the canopy is not taut or if there's excessive rain. The gazebo is designed for good weather; it is not intended for heavy rain. If water pools, gently push up from underneath to release it, but consider disassembling if heavy rain persists.
- **Damage to Fabric/Frame:** In case of accidental damage to the tent or parts, please contact Smartxchoices customer support for parts replacement. Do not attempt to use a damaged gazebo as it may compromise safety.

SPECIFICATIONS

Feature	Detail
Brand	Smartxchoices
Model Number	SC1056&H02-1231
Material	Alloy Steel, Plastic, Polyethylene (PE)
Color	White
Item Weight	15.43 Pounds
Recommended Uses	Beach, Outdoor Activities, Party
Item Dimensions (L x W x H)	120"L x 120"W x 98.4"H
Number of Guylines	4
Size	10' x 10' with 4 Sidewall
Coverage	100 Square Feet
Frame Material	Powder Coated Steel & Plastic
Pole Material Type	Alloy Steel, Plastic
Ultraviolet Light Protection	True
Water Resistance Level	Waterproof
Closure Type	Zipper
Required Assembly	Yes
UPC	763684000840

WARRANTY AND SUPPORT

Smartxchoices is committed to providing quality products. While specific warranty periods are not detailed in this manual, we offer support for our products.

If your tent is broken or parts are accidentally damaged, please contact Smartxchoices customer service for assistance with parts replacement. Please have your model number (SC1056&H02-1231) and purchase information ready when contacting support.

For further assistance or inquiries, please refer to the contact information provided at the point of purchase or visit the official Smartxchoices website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question