

Travelway 1

Travelway Digital Alarm Clock Instruction Manual

Model: 1 | Brand: Travelway

1. INTRODUCTION

Thank you for choosing the Travelway Digital Alarm Clock. This clock is designed for ultimate simplicity and ease of use, ensuring a hassle-free experience for everyone, including children, seniors, and the elderly. Its intuitive controls and clear display make it a perfect addition to any bedside table.

Key Features:

- **Extremely Simple Operation:** Designed with minimal buttons for straightforward use.
- **Integrated Night Light:** A large, convenient light activated by a top button.
- **Loud Alarm with Snooze:** Adjustable alarm volume (Low/High) and a 9-minute snooze.
- **Jumbo Red LED Display:** Clear, extra-bright digits with a full-range dimmable slider.
- **AC Powered with Battery Backup:** Maintains time and alarm settings during power outages.



Figure 1: Travelway Digital Alarm Clock. This image shows the front view of the clock with its large, easy-to-read red LED display.

2. SETUP

2.1 Powering the Clock

To power your Travelway Digital Alarm Clock, simply plug the included power cord into a standard AC electrical outlet. The display will illuminate, and the clock will be ready for use.

2.2 Battery Backup (Optional)

For uninterrupted timekeeping and alarm functionality during a power outage, insert two AAA batteries (not included) into the battery compartment located on the back of the clock. During battery backup, the screen will go blank to conserve power, but time and alarm settings will be retained, and the alarm will still sound at the set time.



Figure 2: Rear controls and battery compartment. This image highlights the location of the battery compartment and various control sliders and buttons on the back of the clock.

3. OPERATING INSTRUCTIONS

3.1 Setting the Time

1. Locate the **TIME SET** button on the back of the clock.
2. Press and hold the **TIME SET** button.
3. While holding **TIME SET**, press the **HOUR** button (left button on top) repeatedly to adjust the hour.
4. While holding **TIME SET**, press the **MINUTE** button (right button on top) repeatedly to adjust the minutes.
5. Release the **TIME SET** button once the desired time is set.

3.2 Setting the Alarm

1. Locate the **ALARM SET** button on the back of the clock.
2. Press and hold the **ALARM SET** button.
3. While holding **ALARM SET**, press the **HOUR** button (left button on top) repeatedly to adjust the alarm hour.
4. While holding **ALARM SET**, press the **MINUTE** button (right button on top) repeatedly to adjust the alarm minutes.
5. Release the **ALARM SET** button once the desired alarm time is set.

3.3 Activating/Deactivating the Alarm

To turn the alarm **ON** or **OFF**, use the red **ALARM ON/OFF** button located on the back of the clock. When the alarm is active, a small bell icon will appear on the display.

3.4 Snooze Function

When the alarm sounds, press the large **SNOOZE/LIGHT** bar on top of the clock to activate the 9-minute snooze function. The alarm will temporarily stop and resume after 9 minutes. You can repeatedly press the snooze bar until the alarm is manually switched off using the **ALARM ON/OFF** button.

3.5 Night Light Operation

The integrated night light can be activated by pressing the large **SNOOZE/LIGHT** bar on top of the clock. Press it again to turn the night light off. This feature provides convenient illumination in the dark.



Figure 3: Night light in use. The image shows the clock's top light bar glowing brightly in a dark setting, providing ambient light.

3.6 Display Dimmer

Adjust the brightness of the red LED display using the **DISPLAY DIMMER** slider on the back of the clock. Slide it from 'LO' (Low) to 'HI' (High) to find your preferred brightness level. You can even dim it completely off for total darkness.

3.7 Alarm Volume

Adjust the alarm volume using the **ALARM VOLUME** slider on the back of the clock. Slide it from 'LO' (Low) to 'HI' (High) to set the desired alarm loudness.

3.8 12/24 Hour Format

To switch between 12-hour and 24-hour time formats, simply press the **TIME SET** button once (do not hold). The display will toggle between the two formats.

3.9 Product Overview Video

For a visual guide on the clock's features and operation, please watch the official product video below:

Your browser does not support the video tag.

Video 1: Digital Alarm Clock - No Bells, No Whistles, with Night Light. This video provides a comprehensive overview of the Travelwey Digital Alarm Clock's features and simple operation, including setting time and alarm, using the night light, and adjusting display brightness.

4. MAINTENANCE

- Clean the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Keep the clock away from direct sunlight, extreme temperatures, and moisture.
- Ensure proper ventilation around the clock.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Power outage; Dimmer slider set to 'OFF' or very low.	Check power connection. Adjust the DISPLAY DIMMER slider to a brighter setting. Ensure AAA batteries are installed for backup.
Alarm does not sound.	Alarm is not activated; Alarm volume is too low.	Press the ALARM ON/OFF button to activate the alarm (bell icon should appear). Adjust the ALARM VOLUME slider to a higher setting.
Time is incorrect.	Time not set correctly; Power interruption without battery backup.	Re-set the time using the TIME SET, HOUR, and MINUTE buttons. Ensure AAA batteries are installed for backup.

6. SPECIFICATIONS

- **Brand:** Travelwey
- **Model:** 1
- **Color:** Black
- **Display Type:** Digital LED (Red)
- **Power Source:** Corded Electric
- **Battery Backup:** 2 x AAA batteries (not included)
- **Product Dimensions:** 6.5"W x 2.75"H
- **Item Weight:** 12.3 ounces
- **Material:** Acrylonitrile Butadiene Styrene
- **Special Features:** Snooze, Alarm, Night Light, Full Range Brightness Dimmer

7. WARRANTY AND SUPPORT

This Travelwey Digital Alarm Clock comes with a Limited Warranty. For specific warranty details, claims, or technical support, please refer to the warranty card included with your product or contact Travelwey customer service directly. Contact information can typically be found on the manufacturer's official website or on the product packaging.

