

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Magic Chef](#) /

› [Magic Chef 1.6 cu. ft. Countertop Microwave Oven \(Model MCM1611B\) Instruction Manual](#)

Magic Chef MCM1611B

Magic Chef 1.6 cu. ft. Countertop Microwave Oven

Model: MCM1611B

INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient use of your new Magic Chef 1.6 cu. ft. Countertop Microwave Oven. Please read all instructions carefully before operating the appliance and retain for future reference.

Key Features:

- 1.6 cu. ft. capacity accommodates a wide variety of dishes.
- 1,100-Watt of cooking power for effective cooking performance.
- 6 pre-programmed 1-touch cooking menus for convenient results.
- Auto defrost menus, including defrost by weight, for easy thawing.
- 11 power levels for versatile cooking possibilities.
- Kitchen timer for added convenience.
- 13.58 inch rotating glass turntable for even heat distribution.
- Classic smooth black exterior complements kitchen appliances.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- To reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy, read all instructions before using the appliance.
- Do not allow children to use the microwave without supervision.
- Do not heat sealed containers or bottles as they may explode.
- Always use caution when removing hot items from the microwave to prevent burns.
- **Proposition 65 Warning:** This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

PRODUCT OVERVIEW

Familiarize yourself with the exterior and interior components of your microwave oven.



Figure 1: Front view of the Magic Chef 1.6 cu. ft. Countertop Microwave Oven. It features a black finish with a digital display and control panel on the right side.



Figure 2: Interior view of the microwave oven with the door open, showing the glass turntable and white interior cavity.

SETUP AND INSTALLATION

Unpacking:

Carefully remove the microwave oven and all packing materials from the carton. Ensure all components are present and undamaged.

- Microwave Oven

- Roller Guide
- Turntable Tray
- Coupler
- User Manual

Turntable Assembly:

Place the roller guide in the center of the microwave oven cavity. Position the glass turntable tray securely on the coupler, ensuring it rests properly on the roller guide.



Figure 3: The microwave interior showing the glass turntable correctly placed on the roller guide.

Placement:

Place the microwave oven on a flat, stable surface. Ensure adequate ventilation by leaving at least 4 inches of space around the top, sides, and rear of the unit. Do not block any ventilation openings.

OPERATING YOUR MICROWAVE

Control Panel Overview:

The control panel features a digital display and various buttons for different cooking functions.



Figure 4: Close-up of the microwave's control panel, displaying various function buttons and a numeric keypad.

- **Time Cook:** Manually set cooking time.
- **Power:** Adjust power levels (11 available).
- **Time Defrost:** Defrost food by setting a specific time.
- **Weight Defrost:** Defrost food by entering its weight.
- **Clock:** Set the current time.
- **Timer:** Use as a kitchen timer.
- **Pre-programmed Menus:** Popcorn, Potato, Pizza, Frozen Vegetable, Beverage, Dinner Plate.
- **Express Cook:** One-touch cooking for 1-6 minutes.
- **+30 Sec:** Add 30 seconds to cooking time.
- **Stop/Cancel:** Stop cooking or clear settings.
- **Start/Memory:** Start cooking or save custom settings.

Basic Cooking:

1. Place food in the microwave.
2. Press **Time Cook**.
3. Enter desired cooking time using the numeric keypad.
4. Press **Power** to adjust power level (optional, default is 100%).
5. Press **Start**.

Defrost Functions:

The microwave offers both time-based and weight-based defrosting options.

- **Time Defrost:** Press **Time Defrost**, enter the desired defrosting time, then press **Start**.
- **Weight Defrost:** Press **Weight Defrost**, enter the food's weight (in ounces), then press **Start**. The microwave will automatically calculate the defrosting time.

Pre-programmed Settings:

For common food items, use the one-touch pre-programmed settings. Refer to the guide inside the microwave door for specific quantities and presses.

Video 1: An overview of the Magic Chef Countertop Microwave Oven, demonstrating its features and control panel. This video highlights the ease of use for various cooking functions.

Video 2: A demonstration of the Magic Chef Countertop Microwave Oven, focusing on its preset cooking options and overall functionality. This video showcases how to utilize the pre-programmed settings for different food types.

CARE AND MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

- **Interior Cleaning:** Wipe the interior cavity with a damp cloth after each use. For stubborn stains, use a mild detergent.
- **Exterior Cleaning:** Clean the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners.
- **Turntable Cleaning:** The glass turntable and roller guide can be removed for easy cleaning. They are dishwasher safe.



Figure 5: The interior of the microwave, illustrating how the glass turntable can be easily removed for cleaning.

TROUBLESHOOTING GUIDE

If you encounter any issues with your microwave oven, please refer to the following common troubleshooting tips. For more complex problems, contact customer service.

- **Microwave not starting:** Ensure the door is closed securely and the unit is plugged into a working power outlet. Check for blown fuses or tripped circuit breakers.
- **Food not heating:** Verify that the cooking time and power level are set correctly. Ensure the turntable is properly seated and rotating.
- **Unusual noise during operation:** Check if the turntable or roller guide is correctly positioned. Ensure no foreign objects are inside the cavity.

PRODUCT SPECIFICATIONS

Detailed technical specifications for the Magic Chef 1.6 cu. ft. Countertop Microwave Oven.



Figure 6: Diagram illustrating the dimensions of the microwave oven: 17.9 inches deep, 21.8 inches wide, and 12.8 inches high.

Specification	Detail
Brand	Magic Chef
Model Number	MCM1611B
Capacity	1.6 Cubic Feet
Wattage	1100 Watts
Voltage	120 Volts
Product Dimensions (D x W x H)	17.9 x 21.8 x 12.8 inches
Item Weight	35.9 pounds
Color	Black
Material Type	Steel
Inner Material Type	Stainless Steel
Installation Type	Countertop
Noise Level	59 Decibels
Power Cord Length	3.28 ft.






WARRANTY AND SUPPORT

Your Magic Chef microwave oven comes with the following warranty:

- 1-year parts and labor.
- 8-years magnetron (part only) carry-in service.

For technical support or warranty claims, please refer to the contact information provided in your user manual or visit the official Magic Chef website.

Related Documents - MCM1611B

	<p>Magic Chef 1.6 Cu. Ft. Countertop Microwave Oven User's Manual (MCM1611W/MCM1611B)</p> <p>Comprehensive user manual for the Magic Chef 1.6 Cu. Ft. Countertop Microwave Oven, models MCM1611W and MCM1611B. Includes safety instructions, installation, operation, care, and warranty information.</p>
	<p>Magic Chef 1.6 Cu. Ft. Countertop Microwave Oven User Manual MCM1611W MCM1611B</p> <p>User manual for Magic Chef 1.6 Cu. Ft. Countertop Microwave Oven (MCM1611W, MCM1611B). Covers safety, installation, operation, cooking, care, and warranty. Find detailed instructions for optimal use.</p>
	<p>Magic Chef 1.1 Cu.Ft. Countertop Microwave Oven User's Manual</p> <p>This user manual provides instructions for operating and maintaining the Magic Chef 1.1 Cu.Ft. Countertop Microwave Oven, models HMM1110W and HMM110B. It includes safety precautions, installation guidelines, operating instructions, cooking tips, and troubleshooting advice.</p>
	<p>Magic Chef MCD1110ST1 1.1 Cu. Ft. Countertop Microwave Oven User's Manual</p> <p>Comprehensive user's manual for the Magic Chef MCD1110ST1 1.1 cu. ft. countertop microwave oven. Includes safety instructions, installation, operation, care, and troubleshooting.</p>
	<p>Magic Chef 0.7 Cu.Ft. Countertop Microwave Oven User's Manual</p> <p>User's manual for the Magic Chef 0.7 Cu.Ft. Countertop Microwave Oven (Models HMM770W2/HMM770B2). Provides safety, installation, operation, and care instructions.</p>



[Magic Chef MCM1611ST 1.6 Cu. Ft. Countertop Microwave Oven User's Manual](#)

User's manual for the Magic Chef MCM1611ST 1.6 Cu. Ft. countertop microwave oven. Includes safety instructions, installation guide, operating procedures, care and cleaning tips, troubleshooting, and warranty information.