

## Sony KDL32W600D

# Sony 32-inch 720p Smart LED TV (KDL32W600D) Instruction Manual

Model: KDL32W600D

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Sony 32-inch 720p Smart LED TV, model KDL32W600D. Please read these instructions thoroughly before operating the television and retain them for future reference. This television offers a 31.5-inch LED-backlit LCD display with 720p HD resolution, Sony Motionflow XR 240 technology for smooth motion, and built-in Wi-Fi/Ethernet for smart TV functionalities.



Figure 1: Front view of the Sony 32-inch 720p Smart LED TV (KDL32W600D) with its stand.

## 2. KEY FEATURES

---

- **X-Reality PRO:** Enhances clarity, sharpness, and picture quality for a more refined viewing experience.
- **720p HD Resolution:** Delivers detailed high-definition visuals across all entertainment content.
- **Built-in Wi-Fi and Ethernet:** Provides easy access to your home network for streaming apps and internet-based content.
- **Motionflow XR 240:** Improves motion clarity in fast-moving action sequences, reducing blur.
- **Clear Phase Audio:** Ensures enhanced audio with smooth, even reproduction of all frequencies.
- **Multiple Connectivity Options:** Includes 2 HDMI ports, 1 Component/Composite input, RF input, optical digital audio output, stereo minijack headphone output, Ethernet port, and 2 USB inputs.

## 3. WHAT'S IN THE Box

---

Upon unpacking, ensure all the following items are present:

- Table Top Stand
- Remote Control
- Batteries (2 AA batteries)
- Mini-plug Video Adapter
- AC Power Adapter
- AC Power Cord
- Operating Instructions (this manual)
- Quick Setup Guide

## 4. SETUP

---

### 4.1 Unpacking

Carefully remove the television and all accessories from the packaging. It is recommended to keep the original packaging for potential future transport or service needs.

### 4.2 Stand Assembly

To attach the table top stand:

1. Place the TV screen-down on a soft, flat surface to prevent damage.
2. Align the stand with the mounting holes on the bottom of the TV.
3. Secure the stand using the provided screws. Refer to the Quick Setup Guide for detailed diagrams.



Figure 2: The television with its table top stand correctly installed.

#### 4.3 Initial Power On

After connecting the power cord, press the power button on the remote control or the TV itself. Follow the on-screen instructions to complete the initial setup, including language selection, network connection, and channel

scanning.

## 5. CONNECTIONS

Your Sony KDL32W600D TV offers various ports for connecting external devices. Ensure the TV is powered off before making any connections.



Figure 3: Side view of the television highlighting the accessible input ports.

- **HDMI Inputs (x2):** Connect high-definition devices such as Blu-ray players, gaming consoles, or cable/satellite boxes.
- **Component/Composite Input (x1):** Use the mini-plug video adapter to connect older devices.
- **USB Ports (x2):** Connect USB storage devices for media playback or other peripherals.
- **RF Input (x1):** Connect an antenna or cable for broadcast TV channels.
- **Optical Digital Audio Output (x1):** Connect to a soundbar or home theater system for digital audio.
- **Stereo Minijack Headphone Output (x1):** For connecting headphones.
- **Ethernet Port (LAN) (x1):** For a wired internet connection.



Figure 4: Rear view of the television displaying all available connection ports.

## 6. OPERATING THE TV

---

### 6.1 Remote Control

The included remote control allows you to navigate menus, change channels, adjust volume, and access smart TV features. Familiarize yourself with the button layout for optimal use.

### 6.2 Smart TV Functions

Connect your TV to the internet via Wi-Fi or Ethernet to access a variety of streaming services and apps. The Smart TV OS provides a user-friendly interface to browse content from platforms like Netflix, Hulu, and YouTube. Note that this model is not an Android TV.

### 6.3 Picture and Sound Settings

Access the TV's settings menu to customize picture and sound. Utilize X-Reality PRO for enhanced image processing and Clear Phase technology for optimized audio output. Adjust brightness, contrast, color, and sound modes to suit your preferences.

## 7. MAINTENANCE

---

To ensure the longevity and optimal performance of your TV:

- **Cleaning:** Gently wipe the screen and cabinet with a soft, dry cloth. For stubborn marks, use a slightly damp cloth with a mild, non-abrasive cleaner specifically designed for electronics. Avoid harsh chemicals.
- **Ventilation:** Ensure adequate ventilation around the TV to prevent overheating. Do not block the ventilation openings.
- **Power:** Unplug the TV from the power outlet during lightning storms or when it will be left unattended for long periods.

## 8. TROUBLESHOOTING

If you encounter issues with your TV, try the following basic troubleshooting steps:

- **No Power:** Check if the power cord is securely plugged into both the TV and the wall outlet. Ensure the outlet is functional.
- **No Picture/Sound:** Verify that the correct input source is selected. Check all cable connections to external devices.
- **Poor Picture Quality:** Adjust picture settings (brightness, contrast, sharpness). Ensure the signal source is of good quality.
- **No Internet Connection:** Check your router and modem. For Wi-Fi, ensure the TV is within range and the password is correct. For Ethernet, check the cable connection.
- **Remote Control Not Working:** Replace the batteries. Ensure there are no obstructions between the remote and the TV's IR sensor.

For more complex issues, consult the full operating instructions or contact Sony customer support.

## 9. SPECIFICATIONS

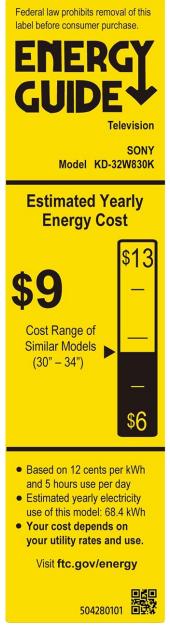
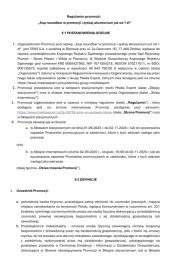
Feature	Specification
Brand Name	Sony
Model Number	KDL32W600D
Screen Size	32 Inches
Display Technology	LED
Resolution	720p
Refresh Rate	60 Hz
Connectivity Technology	Wi-Fi
Supported Internet Services	Hulu Plus, Netflix, YouTube
Item Weight	11.5 Pounds
Product Dimensions	6.9 x 29 x 19 inches
Wattage	45 watts
Color Name	Black
Aspect Ratio	16:9

## 10. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official Sony support website. If you require technical assistance or have questions not covered in this manual, please contact Sony customer support for further guidance.

© 2024 Sony Corporation. All rights reserved.

### Related Documents - KDL32W600D

	<p><a href="#">Sony 32-inch W830K 720p HD LED HDR TV with Google TV (2022) - Energy Guide</a> Energy efficiency information for the Sony 32-inch W830K HD LED HDR TV with Google TV (2022 model KD32W830K). Details on power consumption and energy ratings.</p> <ul style="list-style-type: none"><li>Based on 12 cents per kWh and 5 hours use per day</li><li>Estimated yearly electricity use of this model: 68.4 kWh</li><li>Your cost depends on your utility rates and use.</li></ul> <p>Visit <a href="http://ftc.gov/energy">ftc.gov/energy</a></p>
	<p><a href="#">Sony Bravia 2024 TV Help Guide</a> Comprehensive help guide for Sony Bravia 2024 OLED and QLED televisions, covering setup, features, troubleshooting, and connectivity.</p>
	<p><a href="#">Regulamin promocji: Kup soundbar Sony i zyskaj akcesorium od 1 zł</a> Oficjalny regulamin promocji TERG S.A. (Media Expert) 'Kup soundbar Sony i zyskaj akcesorium już od 1 zł'. Szczegóły dotyczące produktów, dat i zasad uczestnictwa.</p>

 <p><b>HCD-GNZ55D</b> SERVICE MANUAL Ver. 1.1 (2001-04) E Model</p> <p><b>DVD DECK RECEIVER</b> SONY</p>	<p><a href="#"><b>Sony HCD-GNZ55D Service Manual - DVD Deck Receiver</b></a></p> <p>This service manual provides comprehensive technical information for the Sony HCD-GNZ55D DVD Deck Receiver, covering specifications, disassembly procedures, electrical and mechanical adjustments, circuit diagrams, and a detailed parts list for repair and maintenance.</p>
 <p>SONY PlayStation 5 Quick Start Guide PS5</p>	<p><a href="#"><b>PlayStation 5 Quick Start Guide</b></a></p> <p>Get started with your PlayStation 5 console. This guide provides essential steps for setup, controller connection, basic navigation, and initial use.</p>
 <p><b>HCD-MDX10</b> SERVICE MANUAL Ver. 1.1 (2001-04) E Model G Model ADP Model Z Model Australian Model</p> <p><b>COMP ACT DISC DECK RECEIVER</b> SONY</p>	<p><a href="#"><b>Sony HCD-MDX10 Service Manual</b></a></p> <p>Detailed service manual for the Sony HCD-MDX10 Compact Disc Deck Receiver, covering specifications, disassembly, service modes, adjustments, diagrams, and parts lists.</p>