

[Manuals.plus](#) /

> [Brentwood](#) /

> Brentwood Appliances TS-361BK Electric Double Burner Instruction Manual

Brentwood TS-361BK

Brentwood Appliances TS-361BK Electric Double Burner Instruction Manual

Model: TS-361BK

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

SAVE THESE INSTRUCTIONS.

PRODUCT OVERVIEW

The Brentwood Appliances TS-361BK Electric Double Burner is a compact and efficient cooking solution. It features two

burners, one 1000-watt and one 500-watt, designed to provide adjustable and even heat distribution. Its small and lightweight design makes it suitable for various kitchen setups, and it is easy to clean.



Image: Brentwood Appliances TS-361BK Electric Double Burner. This image shows the compact black unit with two circular heating elements and two control knobs on the front panel.

Key Features:

- 1,000 watt and 500 watt burners for versatile cooking.
- Even heat distribution for consistent cooking results.
- Adjustable heat settings via control knobs.
- Small, lightweight design for portability and space-saving.
- Easy to clean surfaces.
- Power indicator light for operational status.

SETUP

1. **Unpacking:** Carefully remove the electric double burner from its packaging. Retain packaging for future storage or transport.
2. **Placement:** Place the unit on a stable, flat, heat-resistant surface, away from flammable materials. Ensure there is adequate ventilation around the unit.

3. **Initial Cleaning:** Before first use, wipe the heating plates and exterior with a damp cloth. Do not immerse the unit in water.
4. **First Use Burn-Off:** When using the burner for the first time, turn the control knob to the highest setting for approximately 3-5 minutes without a pot or pan. This will burn off any manufacturing residues. A small amount of smoke or odor may be present during this process; this is normal and will dissipate. Ensure the area is well-ventilated.
5. **Power Connection:** Ensure the control knobs are in the "OFF" position before plugging the unit into a standard 120V AC electrical outlet.

OPERATING INSTRUCTIONS

1. **Power On:** Plug the unit into a suitable electrical outlet. The power indicator light will illuminate when the burner is turned on.
2. **Place Cookware:** Place your desired cookware (pots, pans) onto the heating element. Ensure the cookware has a flat bottom and is appropriately sized for the burner.
3. **Adjust Heat:** Turn the control knob for the desired burner (left for the 1000W burner, right for the 500W burner) to your preferred heat setting. The knob typically ranges from "MIN" (low heat) to "MAX" (high heat).
4. **Cooking:** Allow the burner to heat up. The heating element will cycle on and off to maintain the selected temperature.
5. **Power Off:** After cooking, turn the control knob back to the "OFF" position. Unplug the unit from the electrical outlet and allow it to cool completely before handling or cleaning.

Note: The heating elements are designed to provide even heat. For optimal results, use cookware that matches the size of the burner as closely as possible.

CLEANING AND MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your electric double burner.

1. **Always Unplug:** Before cleaning, always ensure the unit is unplugged from the electrical outlet and has cooled down completely.
2. **Exterior Cleaning:** Wipe the exterior surfaces and control knobs with a damp cloth and mild detergent. Dry thoroughly with a soft cloth.
3. **Heating Elements:** For stubborn food residue on the heating elements, use a non-abrasive scrubber or a soft brush. Do not use harsh abrasive cleaners or metal scouring pads, as these can damage the surface.
4. **Spills:** Clean up spills immediately to prevent them from baking onto the heating elements, which can make them harder to remove later.
5. **Do Not Immerse:** Never immerse the electric double burner, its cord, or plug in water or any other liquid.
6. **Storage:** When not in use, store the appliance in a clean, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Burner does not heat up.	Unit is not plugged in. Control knob is in "OFF" position. Power outlet is not functioning.	Ensure the unit is securely plugged into a working outlet. Turn the control knob to a heat setting (e.g., MIN to MAX). Test the outlet with another appliance or check your circuit breaker.

Problem	Possible Cause	Solution
Burner heats slowly or unevenly.	Incorrect heat setting. Cookware is not suitable (e.g., warped bottom). Voltage fluctuation.	Increase the heat setting. Use flat-bottomed cookware appropriate for electric burners. Ensure the power supply is stable.
Smoke or odor during first use.	Manufacturing residues burning off.	This is normal for initial use. Ensure good ventilation. It will dissipate after a few minutes.
Power indicator light is off when burner is on.	Indicator light malfunction.	If the burner is still heating, the unit may be functional but the light needs service. Contact customer support if this is a concern.

SPECIFICATIONS

- **Model Number:** TS-361BK
- **Brand:** Brentwood
- **Color:** Black
- **Material:** Ceramic
- **Heating Elements:** 2 (One 1000W, One 500W)
- **Total Wattage:** 1500 watts
- **Controls Type:** Knob
- **Burner Type:** Open Coil
- **Power Source:** Electric (AC 120V)
- **Item Weight:** Approximately 4 Pounds
- **UPC:** 812330021187

WARRANTY AND SUPPORT

This Brentwood Appliances TS-361BK Electric Double Burner comes with a **1-year limited warranty** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship under normal use.

The warranty does not cover damage resulting from misuse, abuse, accident, alteration, lack of proper care, or normal wear and tear. For warranty claims or technical support, please contact Brentwood Appliances customer service.

For further assistance or to inquire about service, please visit the official Brentwood Appliances website or refer to the contact information provided with your purchase documentation.