

Philips SRP2018/10

Philips SRP2018/10 Universal Remote Control User Manual

INTRODUCTION

The Philips SRP2018/10 is an 8-in-1 universal remote control designed to consolidate the control of multiple home entertainment devices into a single unit. This remote can operate various devices including televisions (TV, TV2), VCRs, Blu-ray players (BD), cable boxes (CBL), satellite receivers (SAT), streaming devices (STR), and auxiliary equipment (AUX). This manual provides instructions for setting up, operating, maintaining, and troubleshooting your universal remote control.

PACKAGE CONTENTS

Please check the package contents upon opening. The following items should be included:

- Philips SRP2018/10 Universal Remote Control
- User Manual (this document)

If any items are missing or damaged, please contact your retailer or Philips customer support.

SETUP

1. Battery Installation

The remote control requires two AAA batteries (not included).

1. Open the battery compartment cover on the back of the remote control.
2. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
3. Close the battery compartment cover securely.





Image: Angled view of the Philips SRP2018/10 remote control, illustrating its ergonomic design and the location of the battery compartment on the rear.

2. Device Programming

To control your devices, the remote must be programmed with the correct device codes. A comprehensive code list is typically provided with the remote or available on the Philips support website. Follow these general steps:

1. Turn on the device you wish to program (e.g., your TV).
2. Press and hold the desired device button on the remote (e.g., **TV**, **CBL**, **BD**) until the indicator light on the remote illuminates and stays lit.
3. Enter the 3 or 4-digit code for your device's brand from the code list. The indicator light should turn off after the last digit is entered.
4. Point the remote at your device and press the **Power** button. If the device turns off, the code is correct.
5. If the device does not respond, repeat the process with the next code listed for your brand.
6. Once a working code is found, test other functions like volume, channel, and menu to ensure full compatibility.

Note: Some devices may require trying multiple codes to find the best match. If no codes work, consult the Philips support website for an updated code list or alternative programming methods.

OPERATING THE REMOTE CONTROL

After successful programming, you can use the remote to control your devices. The remote features dedicated buttons for various functions.





Image: Front view of the Philips SRP2018/10 universal remote control, displaying the full layout of its buttons for various functions and device selection.

1. Device Selection

To control a specific device, press the corresponding device button at the top of the remote:

- **TV:** For your primary television.
- **TV-2:** For a secondary television.
- **VCR:** For a video cassette recorder.

- **BD:** For a Blu-ray player.
- **CBL:** For a cable television box.
- **SAT:** For a satellite receiver.
- **STR:** For a streaming device.
- **AUX:** For an auxiliary device.

Once a device button is pressed, the remote will send commands to that specific device until another device button is selected.

2. Basic Functions

- **Power ():** Turns the selected device on or off.
- **Input:** Cycles through video input sources on your TV.
- **Vol + / Vol -:** Adjusts the volume of the selected audio device (usually TV).
- **Ch + / Ch -:** Changes channels on the selected tuner device (TV, CBL, SAT).
- **Mute:** Silences the audio.
- **Guide:** Accesses the electronic program guide.
- **Menu:** Opens the device's on-screen menu.
- **OK / Arrow Buttons:** Navigates through menus and confirms selections.
- **Back:** Returns to the previous menu or screen.
- **Info:** Displays information about the current program or input.
- **Number Buttons (0-9):** Direct channel entry.
- **Playback Controls:** Play (▶), Pause (⏸), Stop (■), Rewind (⏮), Fast Forward (⏭), Record (●).

MAINTENANCE

1. Cleaning

To maintain the remote's appearance and functionality:

- Wipe the remote control with a soft, dry cloth.
- Do not use abrasive cleaners, waxes, or solvents.
- Avoid getting liquids inside the remote.

2. Battery Replacement

Replace the batteries when the remote's indicator light becomes dim or the remote stops responding consistently. Always replace both AAA batteries at the same time with new ones. Do not mix old and new batteries or different types of batteries.

TROUBLESHOOTING

If you encounter issues with your Philips SRP2018/10 universal remote control, try the following solutions:

- **Remote not working at all:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace the batteries with fresh AAA batteries.
 - Ensure there is a clear line of sight between the remote and the device.
- **Device not responding to commands:**

- Ensure you have selected the correct device button (e.g., **TV** for your television).
- Re-program the device using a different code from the code list.
- Make sure the device is powered on.
- **Only some buttons work for a device:**
 - This indicates that the programmed code is partially compatible. Try programming the device again with a different code from the code list to find a more complete match.
- **Indicator light does not illuminate during programming:**
 - The batteries may be low or incorrectly inserted. Replace them.

If these steps do not resolve the issue, please refer to the Philips support website or contact customer service for further assistance.

SPECIFICATIONS

Model Name	SRP2018/10
Product Dimensions	21.2 x 5.2 x 2.35 cm
Item Weight	90 Grams
Batteries Required	2 AAA batteries
Connectivity Technology	Infrared
Maximum Range	10 Meters
Max Number of Supported Devices	8 (TV, VCR, TV2, Blu-ray, CBL, SAT, Str, AUX)
Controller Type	Button Control

WARRANTY AND SUPPORT

Philips products are designed and manufactured to the highest standards. For detailed warranty information, product registration, and technical support, please visit the official Philips support website. You can typically find FAQs, updated code lists, and contact information for customer service there.

Please retain your proof of purchase for warranty claims.