



Manuals.plus /

› Samsung /

› SAMSUNG Galaxy S7 User Manual

Samsung G930V

SAMSUNG Galaxy S7 User Manual

Model: G930V

INTRODUCTION

The Samsung Galaxy S7 unlocks a Galaxy of technology that takes your smartphone experience to a new level. The bigger, more stunning screen completes the slimmer design. This device is water resistant, withstanding splashes, spills, and even dunks. It features dual-pixel technology for faster autofocus and a low-light sensor for professional-quality photos. With a longer-lasting battery and expandable memory, the Galaxy S7 is designed for enhanced mobile use. This manual provides essential information for setting up, operating, and maintaining your device.



Figure 1: Front view of the Gold Samsung Galaxy S7 smartphone.

SETUP

What's in the Box

- Samsung Galaxy S7
- Pre-Installed SIM Card
- Wall Charger
- USB Cable

Initial Power On and Setup

To power on your Samsung Galaxy S7, press and hold the Power button located on the right side of the device until the Samsung logo appears. Follow the on-screen prompts to complete the initial setup, including language selection, Wi-Fi connection, and Google account setup.

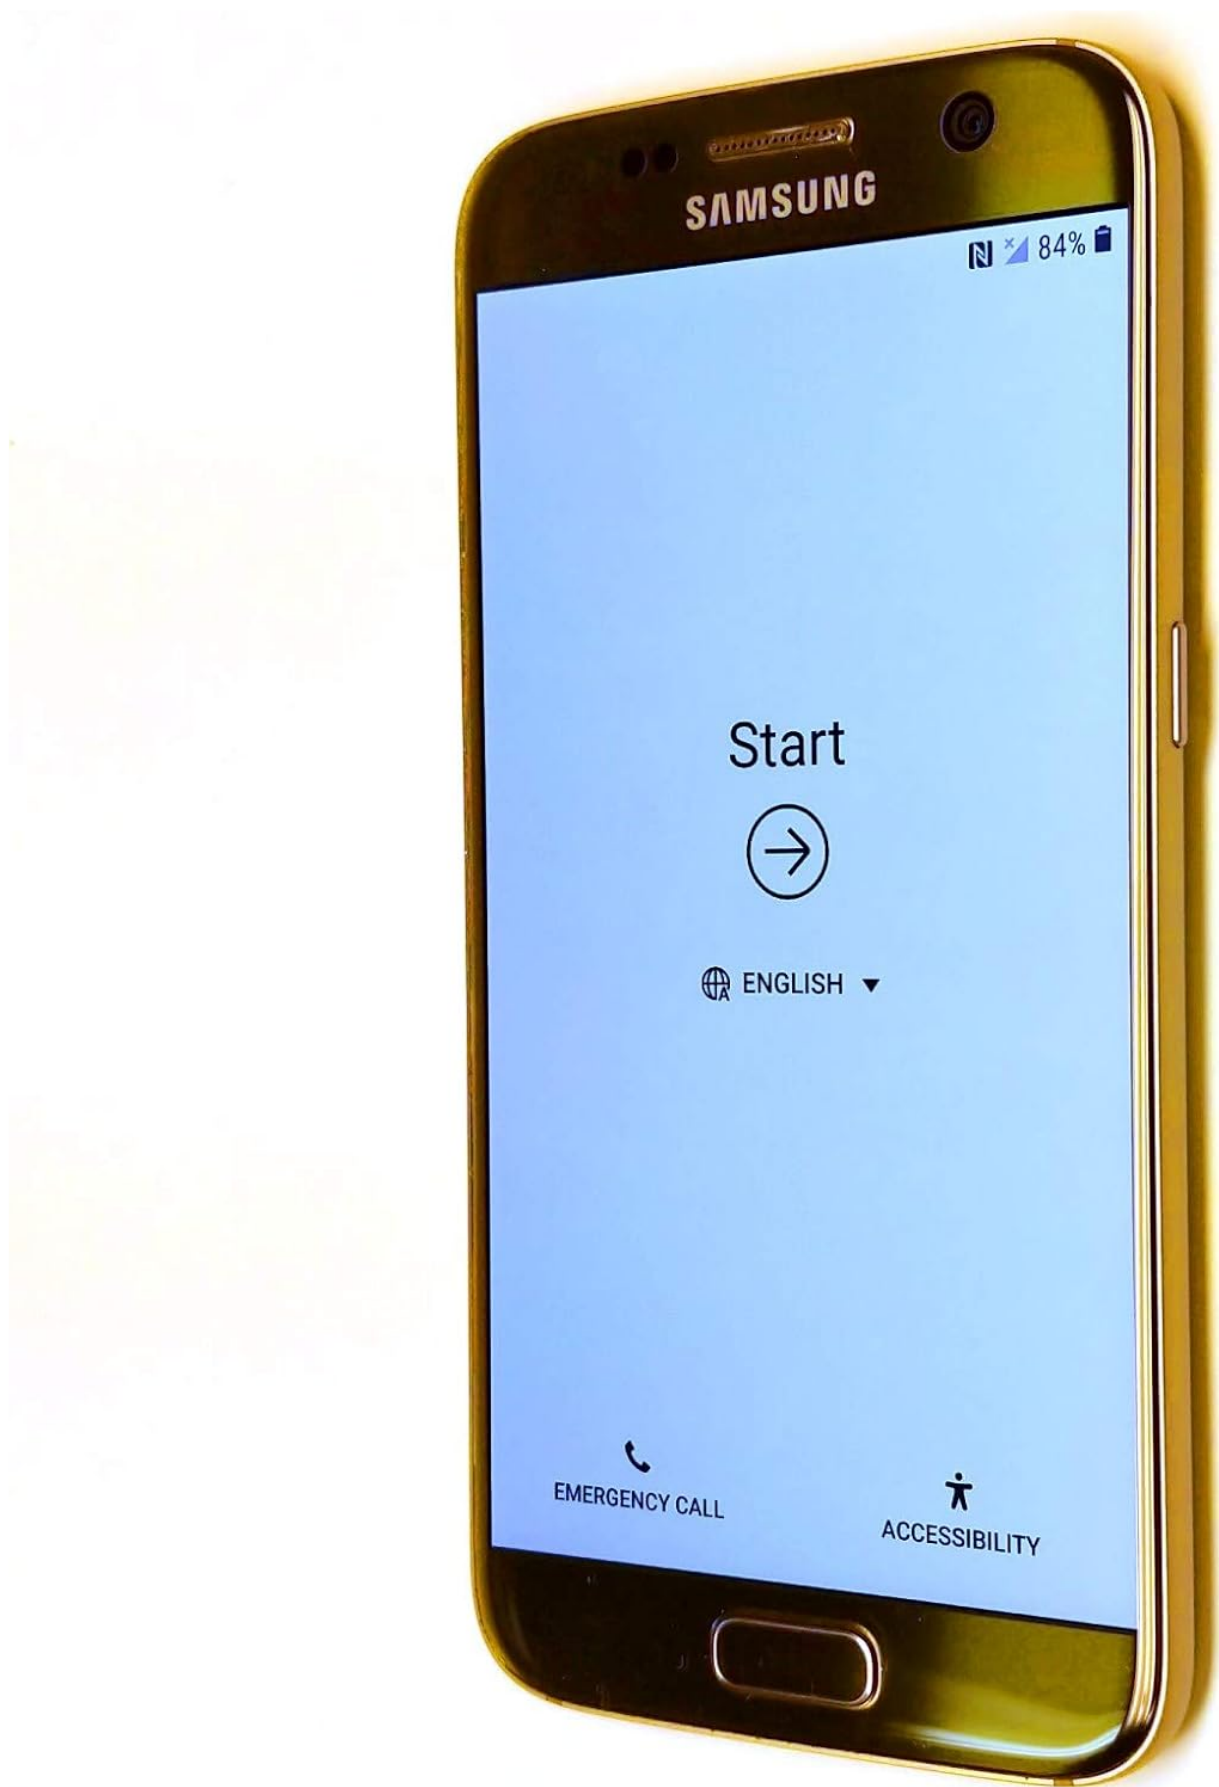


Figure 2: Initial setup screen of the Samsung Galaxy S7, prompting to "Start".

Your device comes with a pre-installed SIM card for immediate network connectivity. Connect the wall charger to

the USB cable and then to your phone to ensure it is fully charged before extensive use. Fast wireless charging is also supported for convenience.

OPERATING YOUR DEVICE

Basic Navigation

The Samsung Galaxy S7 operates on the Android platform. Navigate through menus and applications using the touchscreen. The physical Home button below the screen, along with capacitive Back and Recent Apps buttons, provide intuitive control.





Figure 3: Samsung Galaxy S7 displaying the Verizon Wireless logo during startup.

Camera Features

The Galaxy S7 features a 12 MP dual-pixel camera designed for faster, more precise autofocus and improved low-light performance. Open the Camera app to access various modes, including Photo, Video, and Panorama. Tap the screen to focus, and press the shutter button to capture images or start/stop video recording.




Figure 4: Rear view of the Samsung Galaxy S7, highlighting the camera lens and LED flash.

Always On Display

The Always On Display feature shows an image or information on the standby screen, such as the time, date, and notifications. This function can be turned on or off via the quick settings panel for personalized convenience.

SAMSUNG

Mon, Aug 8 93% 

9:32 AM

Always On Display shows an image or information on the standby screen. This function can also be turned on and turned off via the quick settings panel.



Figure 5: Samsung Galaxy S7 screen showing the Always On Display feature with current time and date.

MAINTENANCE

Water Resistance

The Galaxy S7 has an IP68 rating, meaning it is resistant to dust, splashes, spills, and even submersion in up to 1.5 meters of fresh water for up to 30 minutes. While water-resistant, it is not waterproof. Avoid exposing the device to salt water, chlorinated water, or other liquids. Ensure the USB port is dry before charging to prevent damage.

Battery Care

To maximize battery life, avoid extreme temperatures. Use only Samsung-approved chargers and cables. Fast wireless charging allows for quick power-ups from 0-100% in a short amount of time. If the device becomes unusually warm, discontinue use and allow it to cool down.

TROUBLESHOOTING

Common Issues and Solutions

- **Device Not Powering On:** Ensure the battery is charged. Connect to the wall charger and wait a few minutes before attempting to power on again.
- **Screen Unresponsive:** Perform a forced restart by pressing and holding the Power and Volume Down buttons simultaneously for about 7-10 seconds.
- **Connectivity Problems (Wi-Fi/Cellular):** Toggle Wi-Fi or Cellular Data off and on. Restart the device. Check network settings or contact your service provider.
- **Apps Crashing/Freezing:** Close the problematic app and reopen it. Clear the app's cache and data in Settings > Apps. If the issue persists, uninstall and reinstall the app.
- **Overheating:** Close background apps. Reduce screen brightness. Avoid direct sunlight. If overheating persists, contact support.

SPECIFICATIONS

Feature	Detail
Brand	Samsung
Model Name	Galaxy S7
Item Model Number	G930V
Operating System	Android
Memory Storage Capacity	32 GB
RAM Memory Installed Size	4 GB
Screen Size	5.5 Inches
Display Resolution	2560 x 1440 pixels
Other Camera Features	12 MP
Item Weight	5.4 ounces
Product Dimensions	2.74 x 0.31 x 5.61 inches
Batteries	1 Lithium Ion batteries required (included)
Water Resistance	IP68 rated
Special Features	Smartphone, Dual-Camera, Expandable Memory, Touchscreen
Wireless Carrier	Unlocked
Cellular Technology	4G

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Samsung website or contact Samsung customer service. Keep your proof of purchase for any warranty claims. The manufacturer is Samsung.

For additional resources and FAQs, visit the [Samsung Store on Amazon](#).