

[Manuals.plus](#) /

› [Elinchrom](#) /

› Elinchrom EL Skyport Receiver Plus (EL19369) Instruction Manual

## Elinchrom EL19369

# Elinchrom EL Skyport Receiver Plus Instruction Manual

Model: EL19369

## INTRODUCTION

The Elinchrom EL Skyport Receiver Plus is a reliable and durable wireless receiver designed to trigger speedlights and other flash brands. Operating on a 2.4 GHz bandwidth, it allows for remote control of your lighting setup with extended range and multiple channel/group options. This manual provides comprehensive instructions for its proper use and maintenance.



Image: Front view of the Elinchrom EL Skyport Receiver Plus, showcasing its compact design and branding.

## WHAT'S IN THE BOX

---

Verify that all the following items are included in your package:

- EL-Skyport Receiver Plus
- 3.5 mm to 3.5 mm sync cord
- 3.5 mm to 6.35 mm adapter
- Wrist strap
- 2-year warranty information

## SETUP

---

### 1. Battery Installation

The EL Skyport Receiver Plus operates on AA batteries. Ensure fresh batteries are inserted correctly according to the polarity indicators inside the battery compartment. The receiver requires 1 12V battery.

### 2. Attaching to a Speedlight or Flash Unit

Securely attach the receiver to your speedlight's hot shoe. For other flash brands or studio strobes, use the provided 3.5 mm sync cord or the 3.5 mm to 6.35 mm adapter to connect the receiver to the flash unit's sync port.



Image: The Elinchrom EL Skyport Receiver Plus mounted on a speedlight, demonstrating a typical setup.

## OPERATING

### Powering On/Off

Locate the ON/OFF switch on the side of the receiver. Slide it to the 'ON' position to power on the device. Slide it to 'OFF' when not in use to conserve battery life.

### Channel and Group Selection

The EL Skyport Receiver Plus offers 16 different channels (8 in normal mode and 8 in speed mode) and 4 groups per channel. Use the 'CH' (Channel) and 'Group' buttons/switches on the receiver to match the settings of your Elinchrom EL Skyport Transmitter. Ensure both the transmitter and receiver are set to the same channel and group for proper communication.



Image: Side view of the receiver, highlighting the Sync, OFF, ON switch, and the Group selection buttons (1, 2, 3, 4).

### Triggering and Range

Once properly set up and synchronized with a compatible Elinchrom EL Skyport Transmitter, the receiver will reliably trigger your connected flash unit. The operational range extends up to 200 meters (656 feet) in optimal conditions.

### Firmware Updates

The receiver features a Micro-USB socket for future firmware updates. Refer to the Elinchrom website for the latest firmware and update instructions.

## MAINTENANCE

To ensure the longevity and optimal performance of your Elinchrom EL Skyport Receiver Plus, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the receiver. Avoid using liquid cleaners or solvents.
- **Storage:** Store the receiver in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, remove the batteries to prevent leakage.
- **Handling:** The device is designed with robust mechanics, but avoid dropping or subjecting it to severe impacts.

## TROUBLESHOOTING

### Receiver Not Triggering Flash

- **Check Batteries:** Ensure batteries are correctly inserted and have sufficient charge.
- **Channel/Group Mismatch:** Verify that the receiver's channel and group settings match those of your transmitter.
- **Secure Connection:** Confirm the receiver is securely attached to the hot shoe or that the sync cord is properly connected to the flash unit.
- **Range:** Ensure you are within the operational range of 200 meters (656 feet). Obstacles can reduce effective range.

### Intermittent Triggering

- **Interference:** Move away from sources of strong radio interference (e.g., Wi-Fi routers, other wireless devices).
- **Battery Level:** Low battery can cause inconsistent performance. Replace batteries if needed.

## SPECIFICATIONS

| Feature                 | Detail                     |
|-------------------------|----------------------------|
| Model Number            | EL19369                    |
| Product Dimensions      | 4.53 x 3.54 x 2.24 inches  |
| Item Weight             | 4.6 ounces                 |
| Connectivity Technology | USB (for firmware updates) |
| Hardware Interface      | USB                        |
| Batteries Required      | 1 x 12V battery            |
| Channels                | 16 (8 normal, 8 speed)     |
| Groups                  | 4 per channel              |
| Operating Frequency     | 2.4 GHz                    |
| Max Range               | 200 m (656 feet)           |
| Manufacturer            | Elinchrom                  |



Image: Bottom view of the receiver, displaying the model number (ELSP-R, EL-Num.: 19369) and manufacturing details.

## WARRANTY & SUPPORT

### Warranty Information

The Elinchrom EL Skyport Receiver Plus comes with a 2-year warranty from the date of purchase. This warranty covers manufacturing defects and ensures the product meets Elinchrom's quality standards. Please retain your proof of purchase for warranty claims.

### Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty service, please visit the official Elinchrom website or contact their customer support directly. You can find contact information and additional resources on their website: [www.elinchrom.com](http://www.elinchrom.com).

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question