

CANDY CSC-S0103D(B)US

CANDY Cordless Vacuum Cleaner Instruction Manual

Model: CSC-S0103D(B)US

INTRODUCTION

Thank you for choosing the CANDY Cordless Vacuum Cleaner. This manual provides essential information for the safe and efficient use, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and retain it for future reference.



This image displays the complete CANDY Cordless Vacuum Cleaner system, including the main motor unit, extension tube, motorized floor brush with headlights, crevice tool, 2-in-1 dusting brush, wall-mounting bracket, power adapter, and two additional filters (micro filter and foam filter).

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using an electrical appliance, including the following:

- Read all instructions before using the vacuum cleaner.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.

- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material, such as chlorine bleach, ammonia, or drain cleaner.
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Store the appliance indoors.
- Use only the charger supplied by the manufacturer to recharge.
- Do not incinerate the appliance even if it is severely damaged. The batteries can explode in a fire.

SETUP AND ASSEMBLY

Your CANDY Cordless Vacuum Cleaner comes with several components that are easy to assemble. Follow these steps for initial setup:

1. **Unpacking:** Carefully remove all components from the packaging. Ensure all parts listed in the 'Included Components' section are present.
2. **Battery Installation:** Insert the detachable battery into the main motor unit until it clicks securely into place.
3. **Extension Tube and Floor Brush Assembly:** Connect the extension tube to the main motor unit. Then, attach the motorized floor brush to the other end of the extension tube. Ensure both connections are firm.
4. **Accessory Attachment:** For handheld use, attach the crevice tool or dusting brush directly to the main motor unit.
5. **Initial Charging:** Before first use, fully charge the battery. Connect the power adapter to the charging port on the battery or the wall mount, then plug it into a 120V US power outlet. The battery indicator lights will show charging status.
6. **Wall Mount Installation (Optional):** Choose a suitable location near a power outlet. Secure the wall mount to the wall using the provided screws and anchors. This allows for convenient storage and charging.



A visual representation of all accessories and parts included with the vacuum cleaner, such as various filters, charging adapter, cleaning tools, and the wall mount.

OPERATING INSTRUCTIONS

Your CANDY Cordless Vacuum Cleaner is designed for versatile cleaning across various surfaces.

Powering On/Off and Mode Selection

- Press the power button to turn the vacuum on. It will start in standard cleaning mode.
- Press the mode selection button to switch between standard and turbo modes. Turbo mode provides maximum suction for tougher messes.
- Press the power button again to turn the vacuum off.

Cleaning Performance

- **Lightweight Design:** Weighing only 4.8 lbs (2.8 lbs in handheld mode), the vacuum is easy to maneuver for extended cleaning sessions without fatigue.
- **Multi-Surface Cleaning:** Effective on carpets, hard floors, and for picking up pet hair. The V-shape roller and wiper blade technology in the floor brush are designed to prevent hair tangling.
- **Maneuverability:** The 180-degree flat-laying function allows you to easily clean under furniture and in hard-to-reach areas. The parking design enables the vacuum to stand upright independently, freeing your hands when needed.



This image focuses on the unique V-shaped roller brush and wiper blade design of the vacuum's floor head, engineered to prevent hair tangling during cleaning, especially effective for pet hair.



The vacuum is shown lying completely flat to effectively clean dust and debris from under low-clearance furniture like sofas, highlighting its flexible design.

Battery Life and Charging

- A single charge provides up to 45 minutes of runtime in standard mode and 12 minutes in turbo mode.
- The battery indicator lights on the main unit will show the remaining charge level.
- Recharge the battery using the provided adapter. A full charge typically takes several hours.



An illustration of the vacuum's LED battery indicator lights, showing different charge levels, and a red flashing light indicating a potential blockage in the system.

Product Overview Video



This video provides a visual overview of the CANDY Cordless Vacuum Cleaner, showcasing its assembly, various cleaning modes, and ease of use for different household tasks.

MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

Dustbin Emptying

- The 0.7-liter dustbin features a one-click disposal mechanism for hygienic emptying.
- Press the dustbin release button to open the bottom flap and empty contents directly into a trash receptacle.

Filter Cleaning and Replacement

The vacuum features a 6-stage HEPA filtration system designed to capture 99.97% of particles as small as 0.3 microns.

- The HEPA filter and double-layer filtering sponge are washable and reusable.
- Remove the filters from the dustbin assembly. Tap off loose dirt, then rinse under cold water until the water runs clear.
- Allow filters to air dry completely for at least 24 hours before reinserting. Do not use the vacuum with wet filters.
- The HEPA filter has a service life exceeding 2 years with proper maintenance.

Roller Brush Cleaning

- The roller brush is removable for easy cleaning.
- Use the included cleaning tool to remove any tangled hair or debris from the brush roll.

Battery Care

- The detachable battery allows for convenient charging and replacement.
- For optimal battery life, avoid fully discharging the battery frequently and store it in a cool, dry place when not in use for extended periods.



This image highlights the washable and reusable components of the vacuum, such as the dustbin, inner cyclone, foam filter, and HEPA filter, promoting easy maintenance and extended service life.



A cutaway diagram illustrating the comprehensive 6-stage filtration system, which includes an exhaust HEPA filter, micro filter, foam filter, stainless steel filter, inner cyclone, and dust cup cyclone, designed for superior air purification.

TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged or not properly installed.	Ensure the battery is fully charged and securely clicked into place.
Loss of suction power	Dustbin is full, filters are clogged, or there is a blockage in the air path.	Empty the dustbin. Clean or replace filters. Check the extension tube, floor brush, and main unit for blockages and remove them.
Roller brush not spinning	Hair or debris tangled in the brush, or an obstruction.	Turn off the vacuum and remove any tangled hair or debris from the roller brush. Ensure the brush is properly reinstalled.

Problem	Possible Cause	Solution
Red flashing light indicator	Garbage blockage alarm.	Turn off the vacuum. Inspect the dustbin, filters, extension tube, and floor brush for any blockages and clear them.
Short battery runtime	Battery not fully charged, or battery degradation over time.	Ensure the battery is fully charged before use. If the battery life has significantly decreased, consider replacing the battery.

SPECIFICATIONS

Feature	Detail
Brand	CANDY
Model Name	CSC-S0103D(B)US
Special Features	Cordless, Detachable Battery, HEPA Filtration, Headlight, High Power
Filter Type	Foam, HEPA Filter
Included Components	Adapter, Battery, Crevice Tool, Dusting Brush, User Manual
Cordless	Yes
Dustbin Capacity	0.7 Liters
Recommended Uses	Bedroom, Carpets, Hard Floors, Pet Hair, Rugs
Form Factor	Stick
Color	Black
Product Dimensions	9.87"L x 6.44"W x 43.7"H
Battery Life (Service)	5 years
Item Weight	4.8 pounds
Batteries	1 x 12V battery (included)
Number of Speeds/Power Levels	2
Indoor/Outdoor Usage	Indoor
Voltage Optimization	120V US voltage

WARRANTY AND SUPPORT

Warranty Information

This CANDY Cordless Vacuum Cleaner is backed by a **1-year warranty**. This warranty is valid only for products purchased and used within the US & Canada, and optimized for 120V US voltage. Please retain your proof of purchase for warranty claims.

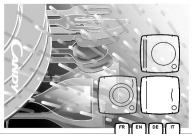 

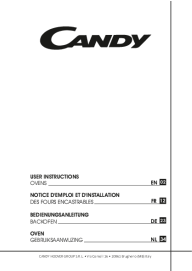 
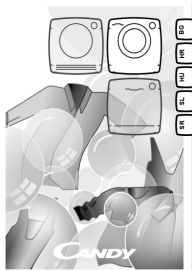 
Customer Support

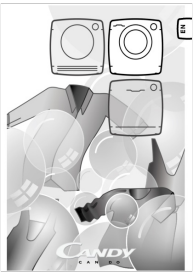 
For any questions, technical assistance, or warranty claims, please contact CANDY customer support. Our team is ready to provide professional guidance and support.

- Refer to the contact information provided on the product packaging or the official CANDY website.
- When contacting support, please have your model number (CSC-S0103D(B)US) and purchase date available.

© 2025 CANDY. All rights reserved.

Related Documents - CSC-S0103D(B)US

	<p>Manuale d'Uso e Manutenzione Lavastoviglie Candy</p> <p>Guida completa per l'utilizzo sicuro ed efficiente della tua lavastoviglie Candy. Include istruzioni su installazione, programmi, manutenzione e risoluzione problemi.</p>
	<p>Candy CAS10 Cordless Stick Vacuum Cleaner User Manual</p> <p>User manual for the Candy CAS10 cordless stick vacuum cleaner, covering safe usage, setup, operation, maintenance, troubleshooting, and environmental information.</p>
	<p>Candy Oven User Manual: Comprehensive Guide to Operation and Maintenance</p> <p>Official user manual for Candy ovens, providing detailed instructions on safety, installation, operation, cleaning, maintenance, and troubleshooting. Available in English, French, German, and Dutch.</p>
	<p>Candy Перална Машина: Пълно Ръководство за Безопасна и Ефективна Употреба</p> <p>Открийте как да използвате вашата нова Candy перална машина безопасно и ефективно с това изчерпателно ръководство. Включва инструкции за инсталация, поддръжка, програми и съвети за пестене на енергия и вода.</p>



Candy Washer Dryer User Manual: Installation, Operation, and Maintenance

Comprehensive user manual for Candy washer dryers, covering installation, safety guidelines, practical tips, maintenance, and troubleshooting. Learn how to use your Candy appliance efficiently and safely.



[Candy CHASD4385EWC/EBC Refrigerator User Manual](#)

Comprehensive user manual for Candy CHASD4385EWC and CHASD4385EBC refrigerators, covering installation, operation, maintenance, safety, and troubleshooting. Learn how to use your Candy refrigerator efficiently and safely.