

[manuals.plus](#) /

› [Candy](#) /

› [Candy Mattress Vacuum Cleaner Instruction Manual - Model CM-YCS1\(S\)US](#)

Candy CM-YCS1(S)US

Candy Mattress Vacuum Cleaner Instruction Manual

Model: CM-YCS1(S)US

Brand: Candy

1. PRODUCT OVERVIEW AND FEATURES

The Candy Mattress Vacuum Cleaner is a powerful handheld device designed for deep cleaning mattresses, sofas, couches, and cribs. It combines strong suction with advanced sanitization features to ensure a cleaner and healthier environment.

- **Powerful Suction:** Features 16Kpa suction and high-frequency tapping at 72000Rpm/Min to deeply remove fine dust.
- **UV Function:** Equipped with a built-in UV light and heating element (up to 140°F) for effective dust and allergen elimination, achieving up to 99% dust removal.
- **Smart Mode:** Automatically identifies dust size and adjusts suction power for efficient cleaning.
- **Dual Dust Cup Filtration System:** Designed to prevent filter clogging and extend product lifespan.
- **Additional Accessories:** Includes 1 cleaning brush and 2 extra HEPA filters for optimal cleaning results.

16KPA Powerful Suction 72000 Rpm/Min Tapping



Figure 1: Overall view of the Candy Mattress Vacuum Cleaner highlighting key features.

2. PRODUCT COMPONENTS

Familiarize yourself with the main components of your mattress vacuum cleaner:

- Handheld Mattress Vacuum Cleaner Unit
- Dust Cup with Dual Filtration System
- HEPA Filters (2 additional included)
- Cleaning Brush
- Power Cord



Figure 2: Included accessories: main unit, extra HEPA filters, cleaning brush.

3. SETUP

- 1. Unpack:** Carefully remove all components from the packaging.
- 2. Inspect:** Check the device and accessories for any damage.
- 3. Filter Installation:** Ensure the HEPA filter and stainless steel filter are correctly installed within the dual dust cup.
- 4. Power Connection:** Plug the power cord into a suitable electrical outlet. The device is corded for consistent power.

4. OPERATING INSTRUCTIONS

The Candy Mattress Vacuum Cleaner is designed for ease of use with intelligent features.

- 1. Power On:** Press the power button to turn on the device. The status monitoring panel will illuminate.
- 2. Select Mode:** The device typically starts in Smart Mode, which automatically adjusts suction based on detected dust levels. You may also select other modes if available (e.g., Turbo mode for maximum suction).
- 3. Cleaning Surface:** Place the vacuum cleaner flat on the surface to be cleaned (e.g., mattress, sofa). The UV-C light will activate automatically when in contact with the surface and deactivate when lifted to ensure safety.
- 4. Cleaning Motion:** Move the vacuum cleaner slowly and steadily across the surface. Overlap passes to ensure thorough cleaning.
- 5. Monitor Status:** Observe the status monitoring panel for real-time feedback on dust mite detection, cleaning rate, and heating function.
- 6. Power Off:** Once cleaning is complete, press the power button to turn off the device and unplug it from the outlet.

Status Monitoring Panel

Automatic Dust Mite Size Detection



Figure 3: Status Monitoring Panel provides real-time cleaning information.

Video 1: Demonstrates the Candy Mattress Vacuum Cleaner in action, highlighting its features and ease of use on various surfaces.

Video 2: Shows the Candy Mattress Vacuum Cleaner providing relief for allergy sufferers by effectively cleaning mattresses and other soft surfaces.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

- 1. Emptying the Dust Cup:** After each use, or when the dust cup is full, remove it from the main unit. Open the lid and empty the collected dust and debris into a waste bin.
- 2. Cleaning Filters:** The dual dust cup and filters (HEPA and stainless steel) can be washed with water. Ensure they are thoroughly dried before reinstallation. Replace HEPA filters as needed (2 extra included).
- 3. Cleaning Roller Brush:** Periodically remove the roller brush and clean any tangled hair or debris using the provided cleaning brush.

4. **Storage:** Store the vacuum cleaner in a cool, dry place away from direct sunlight.



Figure 4: Step-by-step guide for cleaning the dust cup and roller brush.

6. TROUBLESHOOTING

If you encounter any issues with your Candy Mattress Vacuum Cleaner, please refer to the following common solutions:

- **No Power:** Ensure the power cord is securely plugged into a working electrical outlet. Check the power button.
- **Reduced Suction:** Check if the dust cup is full and needs emptying. Inspect filters for clogging and clean or replace if necessary. Ensure the roller brush is free of obstructions.
- **UV Light Not Activating:** The UV light is designed to activate only when the device is placed flat on a surface. Ensure proper contact.
- **Unusual Noise:** Turn off the device and check for any foreign objects caught in the roller brush or suction inlet.

If the problem persists, please contact customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	Candy
Model Name	CS1S
Item Model Number	CM-YCS1(S)US
Special Feature	Corded
Filter Type	Foam, HEPA Filter

Capacity	16 ounces
Form Factor	Handheld
Color	Blue
Product Dimensions	13.19"L x 11.81"W x 9.25"H
Item Weight	2.87 pounds
Indoor/Outdoor Usage	Indoor
Power Source	Corded

8. WARRANTY AND SUPPORT

This product comes with a **1-year manufacturer's warranty**.

For technical support, warranty claims, or any questions regarding your Candy Mattress Vacuum Cleaner, please refer to the contact information provided in your product packaging or visit the official Candy website.