

[Manuals.plus](#) /

› [DICKIE TOYS](#) /

› Dickie Toys 203772003 Battery Operated Jet Ski with Figure User Manual

DICKIE TOYS 203772003

Dickie Toys Battery Operated Jet Ski User Manual

Model: 203772003

1. INTRODUCTION

This manual provides essential information for the safe and effective operation of your Dickie Toys Battery Operated Jet Ski. Designed for children aged 3 and up, this 18 cm toy jet ski comes with a driver figure and is suitable for use in bathtubs, pools, or calm lake waters. Please read this manual thoroughly before first use to ensure proper setup and enjoyment.



Image: Dickie Toys Battery Operated Jet Ski with a green-suited driver figure, ready for water play.

2. SAFETY INFORMATION

WARNING: Not suitable for children under 3 years due to small parts that may present a choking hazard.

- Always supervise children during play, especially when the toy is used in water.
- Do not submerge the toy completely or for extended periods, as the battery compartment may not be entirely waterproof.
- Ensure the battery compartment is securely closed before placing the toy in water.
- Remove batteries when the toy is not in use or before cleaning.
- Dispose of batteries responsibly according to local regulations.

3. WHAT'S IN THE BOX

Your Dickie Toys Battery Operated Jet Ski package includes:

- 1 x Dickie Toys Jet Ski
- 1 x Driver Figure
- Batteries (may be pre-installed or included separately, check packaging)



Image: The Dickie Toys Jet Ski as it appears in its retail packaging, alongside an additional view of the toy with a white-suited driver.

4. SETUP

Battery Installation

1. Locate the battery compartment, typically on the underside of the jet ski.
2. Using a small screwdriver (not included), open the battery compartment cover.
3. Insert the required batteries (e.g., AA or AAA, check the compartment for specific type and polarity) ensuring correct polarity (+/-).
4. Securely close the battery compartment cover and tighten the screw to prevent water ingress.

Once batteries are installed, the jet ski is ready for operation.

5. OPERATING INSTRUCTIONS

Basic Operation

1. Ensure the driver figure is securely placed on the jet ski.
2. Locate the ON/OFF switch, usually on the top or side of the jet ski.
3. Switch the jet ski to the 'ON' position.
4. Carefully place the jet ski onto the water surface (bathtub, pool, or calm pond). The jet ski will begin to move forward.
5. To stop the jet ski, remove it from the water or switch it to the 'OFF' position.

Play Environment

The Dickie Toys Jet Ski is designed for water play. It performs best in calm water conditions. Avoid using in strong currents or rough water, which may affect its movement and potentially cause damage.



Image: Dickie Toys Battery Operated Jet Ski featuring a white-suited driver, showcasing an alternative color scheme.

6. MAINTENANCE

Cleaning and Storage

- After each use, especially in chlorinated or outdoor water, rinse the jet ski with fresh water.
- Wipe the toy dry with a soft cloth. Ensure all parts, especially the battery compartment, are thoroughly dry before storage.
- Remove batteries if the toy will not be used for an extended period to prevent leakage and corrosion.
- Store the jet ski in a cool, dry place away from direct sunlight.

Important Note on Water Resistance

While designed for water play, some user experiences indicate that the battery compartment may be susceptible to water ingress over time. It is crucial to ensure the battery compartment cover is always tightly sealed. If water enters the compartment, immediately remove the batteries and allow the compartment to dry completely before re-inserting batteries or using the toy again. This will help prolong the life of the product.

7. TROUBLESHOOTING

Jet Ski Not Moving or Moving Slowly

- **Check Batteries:** Ensure batteries are correctly installed with proper polarity. Replace with fresh batteries if they are low or depleted.
- **Battery Compartment Seal:** Verify that the battery compartment cover is securely closed and sealed. Water ingress can affect performance.
- **Obstructions:** Check if anything is obstructing the propeller or moving parts on the underside of the jet ski.

Water Inside Battery Compartment

- Immediately remove the jet ski from water.
- Open the battery compartment and remove all batteries.
- Carefully dry the compartment and any wet components with a soft cloth.
- Allow the compartment to air dry completely for several hours before re-inserting batteries.
- Ensure the cover is tightly sealed before next use.

8. SPECIFICATIONS

Feature	Detail
Product Dimensions	3.54 x 4.92 x 7.68 inches
Item Weight	6.7 ounces
Model Number	203772003
Manufacturer Recommended Age	3 years and up
Manufacturer	Dickie Spielzeug
Release Date	January 27, 2016

9. WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your Dickie Toys Battery Operated Jet Ski, please contact the manufacturer, Dickie Spielzeug. Refer to the product packaging or the official Dickie Toys website for the most current contact information and warranty details.

Please retain this manual and your purchase receipt for future reference.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question