

[Manuals.plus](#) /

› [Indesit](#) /

› Indesit IWSC 51051 C ECO IT Washing Machine User Manual

Indesit IWSC 51051

Indesit IWSC 51051 C ECO IT Washing Machine User Manual

Model: IWSC 51051 C ECO IT

1. INTRODUCTION

Thank you for choosing an Indesit appliance. This user manual provides essential information for the safe and efficient operation, installation, and maintenance of your new Indesit IWSC 51051 C ECO IT freestanding front-load washing machine. Please read this manual carefully before using the appliance and keep it for future reference.



Figure 1: Front view of the Indesit IWSC 51051 C ECO IT Washing Machine.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- **Electrical Safety:** Ensure the appliance is connected to a properly grounded outlet. Do not use extension cords or adapters. Disconnect the power supply before any cleaning or maintenance.

- **Water Safety:** Ensure water hoses are securely connected to prevent leaks. Do not operate the machine if there is a water leak.
- **Children and Pets:** Keep children and pets away from the appliance during operation. Do not allow children to play with the controls.
- **Flammable Materials:** Do not wash items that have been cleaned, washed, soaked, or spotted with combustible or explosive substances (such as wax, oil, paint, gasoline, degreasers, dry-cleaning solvents) as they give off vapors that could ignite or explode.
- **Appliance Stability:** Ensure the machine is placed on a firm, level surface to prevent excessive vibration and movement during operation.
- **Damage:** Do not operate the appliance if it is damaged or malfunctioning. Contact qualified service personnel for repairs.

3. SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of your washing machine.

1. **Unpacking:** Carefully remove all packaging materials. Check for any transit damage.
2. **Remove Transit Bolts:** Before first use, it is essential to remove the transit bolts located at the rear of the machine. Refer to the quick start guide for specific instructions on bolt removal. Failure to remove these bolts will cause severe vibration and damage.
3. **Location:** Place the washing machine on a solid, level floor. Ensure there is adequate space around the machine for ventilation and maintenance. Avoid placing it in areas where the temperature may drop below freezing.
4. **Water Connection:** Connect the water inlet hose to a cold water tap with a 3/4" thread. Ensure the connections are tight to prevent leaks. Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fixed to prevent displacement during draining.
5. **Electrical Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage and frequency match the specifications on the appliance's rating plate.



Figure 2: Dimensions of the Indesit IWSC 51051 C ECO IT Washing Machine. Height: 85 cm, Width: 59.5 cm, Depth: 42.4 cm.

4. OPERATING INSTRUCTIONS

Follow these steps for typical washing machine operation.

1. **Loading Laundry:** Open the door and load the laundry into the drum. Do not overload the machine; ensure there is enough space for clothes to tumble freely.
2. **Adding Detergent:** Pull out the detergent dispenser drawer. Add the appropriate amount of detergent and fabric

softener to the designated compartments. Refer to your detergent packaging for dosage recommendations.

3. **Selecting a Program:** Turn the program selector knob to choose the desired wash program. Available programs include:
- Cotton 40°
 - Cotton 60°
 - Water Balance Plus Baby
 - Eco
 - Other standard programs (e.g., Synthetics, Delicates, Spin)
4. **Starting the Cycle:** Press the 'Start/Pause' button to begin the wash cycle. The indicator light will illuminate.
5. **Ending the Cycle:** Once the program is complete, the machine will signal the end of the cycle. The door will unlock after a short delay. Remove the laundry promptly to prevent creasing.

5. MAINTENANCE

Regular maintenance helps ensure the longevity and efficiency of your washing machine.

- **Cleaning the Detergent Dispenser:** Periodically remove and clean the detergent dispenser drawer to prevent residue buildup. Rinse it under running water.
- **Cleaning the Filter:** The machine has a filter that collects lint and small objects. Clean this filter regularly (e.g., every few months) to ensure proper drainage. Refer to the quick start guide for the filter's location and cleaning procedure.
- **Cleaning the Drum:** Run a maintenance wash (e.g., a hot cycle with no laundry and a descaling agent) periodically to clean the drum and remove any detergent residue or odors.
- **External Cleaning:** Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Door Seal:** After each wash, wipe the rubber door seal to remove any water or lint, preventing mold and odors.

6. TROUBLESHOOTING

Before contacting service, check the following common issues and solutions.

Problem	Possible Cause	Solution
Machine does not start	No power; door not closed; program not selected; 'Start/Pause' not pressed.	Check power supply; ensure door is firmly closed; select a program; press 'Start/Pause'.
No water entering machine	Water tap closed; water inlet hose kinked; water supply cut off.	Open water tap; straighten hose; check household water supply.
Water not draining	Drain hose kinked or blocked; filter blocked.	Straighten/clear drain hose; clean the filter.

Problem	Possible Cause	Solution
Excessive vibration	Transit bolts not removed; machine not level; uneven load.	Remove transit bolts; ensure machine is on a level surface; redistribute laundry.
Poor washing results	Overloading; insufficient detergent; incorrect program.	Reduce load size; use correct detergent amount; select appropriate program.

7. SPECIFICATIONS

Detailed technical specifications for the Indesit IWSC 51051 C ECO IT washing machine.

Feature	Specification
Brand	Indesit
Model Name	IWSC 51051
Capacity	5 Kilograms
Maximum Spin Speed	1000 Revolutions per minute
Installation Type	Freestanding
Load Type	Front-load
Color	White
Product Dimensions (W x D x H)	59.5 cm x 42.4 cm x 85.0 cm
Product Weight	60 kg
Special Features	Water Balance Plus Baby, Eco, Special wash cycles for different fabrics
Adjustable Feet	No
Display Type	No
EAN Code	8007842887006

8. WARRANTY AND SUPPORT

Your Indesit washing machine is covered by a manufacturer's warranty. Please refer to the warranty card included with your appliance for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, spare parts, or to schedule a service appointment, please contact Indesit Customer Service.

You can typically find contact information on the Indesit official website or in the documentation provided with your appliance.

Online Resources: For additional support, FAQs, and product registration, visit the official Indesit website: www.indesit.com

© 2023 Indesit. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question