

HP 2M30F15

HP Slim Wireless Keyboard and Mouse User Manual

Model: 2M30F15

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your HP Slim Wireless Keyboard and Mouse. Designed to enhance productivity and optimize your workspace, this compact and stylish combo offers reliable wireless connectivity and a comfortable user experience. The HP Slim Wireless Keyboard and Mouse are compatible with notebooks and desktops running Windows Vista, 7, 8, or 10, and require an available USB port.

PACKAGE CONTENTS

- HP Slim Wireless Keyboard
- HP Slim Wireless Mouse
- USB Wireless Receiver (Dongle)
- Documentation (this manual)

SETUP

1. Battery Installation

The HP Slim Wireless Keyboard and Mouse require AAA batteries for operation. Ensure you have fresh batteries before proceeding.

1. **For the Keyboard:** Locate the battery compartment on the underside of the keyboard. Open the cover and insert the required AAA batteries, observing the polarity (+/-) markings. Close the battery compartment cover securely.
2. **For the Mouse:** Locate the battery compartment on the underside of the mouse. Open the cover and insert the required AAA batteries, observing the polarity (+/-) markings. Close the battery compartment cover securely.

2. Connecting the USB Wireless Receiver

The keyboard and mouse connect to your computer via a single USB wireless receiver.

1. Locate an available USB port on your computer (desktop or notebook).
2. Insert the USB wireless receiver (dongle) firmly into the USB port.
3. Your operating system should automatically detect and install the necessary drivers. This process may take a few moments.
4. Once the drivers are installed, the keyboard and mouse should be ready for use.



Image: The HP Slim Wireless Keyboard and Mouse combo, showing the full-size keyboard, the compact mouse, and the small USB wireless receiver.

OPERATING INSTRUCTIONS

Keyboard Usage

The HP Slim Wireless Keyboard features a familiar notebook-style layout with a full set of function keys and a numeric keypad. Its low-profile, quiet keys are designed for comfortable and efficient data entry.

- **Function Keys (F1-F12):** These keys often have secondary functions (e.g., volume control, brightness) accessible by pressing the **Fn** key simultaneously.
- **Numeric Keypad:** Use the dedicated numeric keypad for quick number entry. Ensure **Num Lock** is enabled if needed.
- **Wireless Range:** The keyboard operates reliably up to 30 feet (10 meters) from your PC.

Mouse Usage

The HP Slim Wireless Mouse is designed for comfortable use by either hand, featuring a scroll wheel and standard left/right click buttons.

- **Left Click:** Primary button for selecting items, opening files, etc.
- **Right Click:** Opens context menus for various options.
- **Scroll Wheel:** Used for scrolling through documents and web pages. It can also function as a middle click button.
- **Wireless Range:** The mouse operates reliably up to 30 feet (10 meters) from your PC.

MAINTENANCE

Proper care and maintenance will extend the lifespan of your HP Slim Wireless Keyboard and Mouse.

- **Cleaning:** Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution to wipe down the surfaces. Avoid harsh chemicals or abrasive materials. Do not immerse the devices in liquid.
- **Battery Replacement:** The included software provides notifications when batteries are low. Replace batteries promptly to ensure uninterrupted operation. Always use new, high-quality AAA batteries.
- **Storage:** When not in use for extended periods, store the keyboard and mouse in a dry, cool place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your HP Slim Wireless Keyboard and Mouse, try the following solutions:

- **No Response from Keyboard/Mouse:**
 - Ensure batteries are correctly installed and not depleted. Replace if necessary.
 - Verify the USB wireless receiver is securely plugged into a working USB port on your computer. Try a different USB port.
 - Move the keyboard/mouse closer to the USB receiver to rule out range issues.
 - Restart your computer.
- **Lag or Intermittent Connection:**
 - Reduce interference by moving other wireless devices (e.g., Wi-Fi routers, cordless phones) away from the receiver.
 - Ensure there are no large metal objects between the keyboard/mouse and the receiver.
 - Check battery levels.
- **Keys Not Working or Mouse Cursor Not Moving:**
 - Clean any debris from around the keys or the mouse sensor.
 - Re-seat the USB receiver.
 - Test the devices on another computer to determine if the issue is with the devices or your computer.

SPECIFICATIONS

Feature	Detail
Brand	HP
Model Number	2M30F15
Connectivity Technology	USB, 2.4 GHz Wireless
Wireless Range	Up to 30 ft (10 m)
Compatible Operating Systems	Windows Vista/7/8/10
Power Source	Battery Powered
Batteries Required	AAA (quantity not specified, typically 2 for keyboard, 1 for mouse)
Color	Black

Item Weight	Approximately 2.82 ounces (mouse)
Product Dimensions (LxWxH)	Approximately 2 x 4 x 8 inches (packaging/overall)

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official HP website or contact HP customer service. Keep your purchase receipt as proof of purchase.

HP Support Website: www.hp.com/support

For further assistance, please contact HP customer service through the contact methods provided on their official support page.

© 2024 HP Inc. All rights reserved.
Information in this document is subject to change without notice.