

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [INIM Electronics](#) /
- › [INIM Alien/SN Touchscreen User Interface - Black Instruction Manual](#)

## INIM Electronics 8050617014619

# INIM Alien/SN Touchscreen User Interface

Model: 8050617014619

## INTRODUCTION

---

This manual provides detailed instructions for the installation, operation, and maintenance of your INIM Alien/SN Touchscreen User Interface. Please read this manual thoroughly before using the device to ensure proper functionality and to prevent damage. Keep this manual for future reference.

## PRODUCT OVERVIEW

---

The INIM Alien/SN is a 4.3-inch touchscreen user interface designed for i-bus systems. It integrates several features for enhanced control and monitoring within your environment.

### Key Features:

- 4.3-inch Touchscreen Display
- Proximity Sensor
- Ambient Temperature Sensor
- Integrated Microphone and Speaker
- USB Interface
- SD Card Slot
- Designed for i-bus systems

### Components:

- INIM Alien/SN Touchscreen User Interface
- SD Card (included)
- Mounting hardware (not specified, typically included with wall-mount devices)



This image shows the front view of the INIM Alien/SN Touchscreen User Interface, featuring its sleek black design and the 4.3-inch display.

## SETUP

---

Follow these steps for the initial setup of your INIM Alien/SN Touchscreen User Interface.

### 1. Mounting the Device:

1. **Select Location:** Choose a suitable wall location, ensuring it is within reach of the necessary electrical cabling and i-bus connection.
2. **Prepare Wiring:** Ensure all power and i-bus wiring is safely routed to the mounting location.
3. **Secure Mount:** Use appropriate wall-mounting hardware to securely attach the device's backplate or mounting bracket to the wall.
4. **Connect Wiring:** Connect the electrical power cable and i-bus communication cables to the designated terminals on the device. Refer to the wiring diagram provided with your i-bus system documentation for specific connections.
5. **Attach Device:** Carefully attach the touchscreen unit to the mounted backplate, ensuring it clicks securely into place.

### 2. Initial Power-Up:

1. Once mounted and wired, apply power to the device. The touchscreen should illuminate.
2. Follow any on-screen prompts for initial configuration, such as language selection or network settings.

### 3. SD Card and USB:

- The included SD card is typically used for firmware updates, configuration backups, or data logging. Insert it into the designated slot if not already pre-installed.
- The USB interface can be used for direct connection to a computer for advanced configuration or diagnostics using INIM software.

## OPERATING INSTRUCTIONS

---

The INIM Alien/SN features an intuitive touchscreen interface for easy navigation and control.

### 1. Touchscreen Navigation:

- **Tap:** Lightly touch the screen to select icons, buttons, or menu items.
- **Swipe:** Drag your finger across the screen to scroll through lists or switch between screens.
- **Proximity Sensor:** The screen may automatically activate or adjust brightness when you approach it.

## 2. System Control:

- Access various functions of your i-bus system, such as arming/disarming security zones, viewing system status, or controlling connected devices.
- Specific menu structures and options will depend on your i-bus system configuration.

## 3. Audio Functions:

- The integrated microphone and speaker allow for two-way audio communication, typically used for intercom functions or alarm verification within the i-bus system.
- Adjust volume settings through the on-screen menu.

## 4. Temperature Monitoring:

- The ambient temperature sensor displays the current room temperature.
- If configured as a thermostat, you can view and adjust temperature setpoints for HVAC systems directly from the interface.

## MAINTENANCE

---

Regular maintenance ensures the longevity and optimal performance of your touchscreen user interface.

### Cleaning:

- **Screen:** Use a soft, lint-free cloth slightly dampened with water or a non-abrasive screen cleaner. Do not spray cleaner directly onto the screen.
- **Casing:** Wipe the plastic casing with a soft, dry cloth. Avoid harsh chemicals or abrasive materials.

### Software Updates:

- Periodically check the INIM Electronics website or consult your system installer for available firmware updates.
- Updates can be applied via the USB interface or by loading files onto the SD card, as per specific instructions provided with the update.

## TROUBLESHOOTING

---

If you encounter issues with your INIM Alien/SN, refer to the following common problems and solutions.

### Device Not Powering On:

- **Check Power Connection:** Ensure the electrical cable is securely connected and receiving power.
- **Verify i-bus Connection:** Confirm the i-bus communication cable is properly connected, as some systems draw power through this connection.
- **Circuit Breaker:** Check your building's circuit breaker for any tripped circuits.

### Touchscreen Unresponsive:

- **Restart Device:** If possible, power cycle the device by temporarily disconnecting and reconnecting its power source.
- **Clean Screen:** Ensure the screen is clean and free of dirt or moisture that might interfere with touch detection.

## No Audio from Speaker/Microphone:

- **Volume Settings:** Check the on-screen volume settings to ensure they are not muted or set too low.
- **System Configuration:** Verify that audio functions are enabled and correctly configured within your i-bus system settings.

For persistent issues, contact your system installer or INIM Electronics technical support.

## SPECIFICATIONS

Feature	Specification
Manufacturer	INIM Electronics
Model Number	8050617014619
Display Type	4.3-inch Touchscreen
Color	Black
Material	Plastic
Power Source	Electric Cable
Connectivity	USB
Special Features	Integrated Microphone, Ambient Temperature Sensor, Proximity Sensor
Included Components	SD Card
Mounting Type	Wall Mount
Product Dimensions	15 x 10 x 3 cm
Product Weight	250 grams

## WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided by your retailer or visit the official INIM Electronics website. Warranty terms and conditions may vary by region and purchase location.

For technical support, assistance with installation, or troubleshooting beyond the scope of this manual, please contact your authorized INIM Electronics dealer or system installer. You may also find additional resources and contact information on the official INIM Electronics website.

**Website:** [www.inim.biz](http://www.inim.biz) (Please note: This is a generic placeholder for the manufacturer's website. Verify the correct URL if available.)

