



Manuals.plus /

- › **Upstart Components** /
- › Upstart Components Microwave Glass Plate Replacement - 10" (255mm) User Manual

Upstart Components 10" (255mm) Microwave Glass Plate Replacement (OEM 3517203600)

Upstart Components Microwave Glass Plate Replacement

Model: 10" (255mm) - White

Brand: Upstart Components (Manufactured by Upstart Battery)

INTRODUCTION

This manual provides essential information for the installation, operation, and maintenance of your Upstart Components 10" (255mm) Microwave Glass Plate Replacement. This product is designed to replace a broken or damaged microwave turntable plate, ensuring even heating and proper function of your microwave oven.

Please read this manual thoroughly before use to ensure correct application and to prolong the life of your replacement part.

COMPATIBILITY

This 10" (255mm) microwave glass plate is a replacement part compatible with various microwave oven models. It is designed to replace OEM part number **3517203600**.

It is compatible with, but not limited to, the following microwave brands and models. Always verify the diameter and the coupling mechanism of your original plate before ordering to ensure proper fit.

- **Magic Chef:** MCB780W, MCD790SW, MCM7950SW, MCD795SW, MCD770ST1, MCD770RW, MCB770W
- **Rival:** EM720CWA-PM, EM720CWA
- **Emerson:** MW8625W, MW8778W, MW8985W, MW8700W, MW8675W, MW7300
- **Daewoo:** KOR63F7, KOR630A, KOR3000, KOR63D7, EMX752EPSL, FD8102, GM66, GMX320GMSL, GMX616, GMX707, GMX717, GT779TC, GT77, GT88, K2000M, K2001T, KOG360S, KOG3667, KOG366T, KOG370A, KOG370S, KOG37F7, KOG37FP, KOG547R, KOR2605, KOR3000, KOR30A, KOR6025, KOR602M, KOR6105, KOR610P, KOR6112, KOR61151A, KOR6115, KOR611M, KOR611Q, KOR616T, KOR616TM, KOR616TN, KOR6206, KOR620S, KOR630, KOR630A09A, KOR630A0A/1A, KOR630A0A, KOR630A0S, KOR630A1A, KOR630A
- **Ewave:** EW6F6W
- **Avanti:** MO7200TW
- **Proline:** SM18, SM12WH
- **Panasonic:** NNK101W, NNE201W, NNE201

Note: This is an UpStart Components brand replacement part and is not an OEM product. Compatibility is listed for

informational purposes only.

SETUP AND INSTALLATION

Installing your new microwave glass plate is a straightforward process. Ensure your microwave oven is unplugged from the power outlet before proceeding.

1. **Prepare the Microwave:** Open the microwave door. If the old turntable plate or roller ring is still inside, carefully remove them. Clean the interior of the microwave, especially the center hub and the area where the roller ring sits, to ensure no debris interferes with the new plate's rotation.
2. **Inspect the Roller Ring:** Ensure your microwave's roller ring (the circular support with wheels) is clean and in good condition. If it is damaged or missing, it may need to be replaced separately. The glass plate rests on this ring.
3. **Position the Plate:** Carefully place the new Upstart Components glass plate onto the roller ring. The center indentation on the underside of the glass plate should align with the microwave's central coupler (the rotating shaft).
4. **Verify Fit:** Gently rotate the plate by hand to ensure it sits flat and spins freely without obstruction. It should not wobble excessively.
5. **Power On:** Close the microwave door, plug the microwave oven back into the power outlet, and test its operation.



Image: Top-down view of the 10-inch (255mm) microwave glass plate, highlighting its clear glass construction and the three-point central coupling mechanism.

OPERATING INSTRUCTIONS

The Upstart Components microwave glass plate functions as the primary cooking surface within your microwave oven. Its purpose is to rotate food during the cooking cycle, ensuring even heating.

- **Placement:** Always place food containers directly on the glass plate. Do not place food directly on the microwave floor.
- **Rotation:** When the microwave is in operation, the glass plate will rotate. This rotation is essential for distributing microwave energy evenly across the food.
- **Overloading:** Avoid placing excessively heavy items on the plate that could impede its rotation or cause damage to the plate or the microwave's motor. Refer to your microwave oven's manual for weight limits.
- **Temperature Changes:** While the glass plate is designed to withstand microwave temperatures, avoid extreme temperature shocks (e.g., placing a very cold plate into a hot microwave, or a hot plate onto a cold surface) which could cause cracking.



Image: Angled view of the 10-inch (255mm) microwave glass plate, showcasing its textured underside and the specific design of the central coupling points. This angle helps users identify the correct plate type for their microwave's coupler.

CARE AND MAINTENANCE

Proper care will ensure the longevity and cleanliness of your microwave glass plate.

- **Cleaning:** The glass plate can be easily removed for cleaning. Wash with warm, soapy water using a soft sponge or cloth. It is generally dishwasher safe, but hand washing is recommended for best care.
- **Stains:** For stubborn food stains, a non-abrasive cleaner or a paste of baking soda and water can be used. Rinse thoroughly after cleaning.
- **Avoid Abrasives:** Do not use abrasive cleaners, scouring pads, or sharp objects on the glass plate, as these can scratch the surface and potentially weaken the glass.
- **Handling:** Always handle the glass plate carefully, especially when it is hot, to prevent accidental drops or breakage.



Image: Side view of the 10-inch (255mm) microwave glass plate, illustrating its thickness and smooth, finished edges. This view helps confirm the robust construction of the replacement part.

TROUBLESHOOTING

If you encounter issues with your replacement glass plate, consider the following common solutions:

Problem	Possible Cause	Solution
Plate does not rotate.	Plate not seated correctly on coupler. Roller ring is dirty or damaged. Microwave motor malfunction (less common).	Ensure the plate's center indentations align with the microwave's coupler. Clean the roller ring and the microwave floor. Replace the roller ring if damaged. Consult a qualified technician for microwave motor issues.
Plate wobbles or makes noise.	Plate not seated correctly. Roller ring is damaged or missing wheels. Debris under the plate or roller ring.	Re-seat the plate, ensuring it's flat and centered. Inspect and replace the roller ring if necessary. Clean the microwave interior thoroughly.
Food not heating evenly.	Plate not rotating. Microwave oven issue (not related to plate).	Refer to "Plate does not rotate" solutions above. Consult your microwave oven's user manual or a technician.

If problems persist after attempting these solutions, please contact Upstart Components customer support.

SPECIFICATIONS

Feature	Detail
Product Type	Microwave Glass Plate Replacement
Diameter	10 inches (255mm)
Material	Glass
Color	Clear / White (translucent)
Replaces OEM Part No.	3517203600
Product Dimensions	13.5 x 13.5 x 2.5 inches (Packaging/Shipping dimensions, actual plate is 10" diameter)
Item Weight	2.01 pounds (approx. 0.91 kg)
Manufacturer	Upstart Battery (for Upstart Components)

WARRANTY AND SUPPORT

This Upstart Components replacement part is covered by a warranty offered solely by Upstart Components. This product is not affiliated with any OEM brands and is not covered under any warranties offered by the original manufacturers of the microwave ovens.

For specific warranty terms, return policy details, or technical support, please refer to the purchase documentation or contact Upstart Components directly through their official channels. Contact information can typically be found on the seller's page or the product packaging.

For general inquiries or to visit the brand store, you may refer to the [Upstart Battery Store on Amazon](#).

