

[manuals.plus](#) /› [Farberware](#) /› [Farberware 5122579 Professional Electronic Kitchen Scale Instruction Manual](#)

Farberware 5122579

Farberware 5122579 Professional Electronic Kitchen Scale Instruction Manual

1. INTRODUCTION

Thank you for purchasing the Farberware 5122579 Professional Electronic Kitchen Scale. This manual provides essential information for the safe and efficient operation of your new kitchen scale. Please read these instructions thoroughly before first use and retain them for future reference.

This electronic kitchen scale is designed for precise measurement of ingredients, making it an ideal tool for cooking and baking. It features a clear digital display and multiple unit options for versatility.

2. SAFETY INFORMATION

- Do not immerse the scale in water or other liquids.
- Clean the scale with a damp cloth only. Do not use abrasive cleaners.
- Do not overload the scale beyond its maximum capacity to prevent damage.
- Keep the scale away from extreme temperatures and direct sunlight.
- This appliance is for household use only.
- Keep batteries out of reach of children.

3. PACKAGE CONTENTS

Please check the package contents to ensure all items are present:

- Farberware 5122579 Electronic Kitchen Scale
- 2 x AA Batteries (pre-installed or included separately)
- Instruction Manual (this document)

4. SETUP

4.1 Battery Installation

1. Locate the battery compartment on the underside of the scale.

2. Open the battery compartment cover.
3. Insert 2 AA batteries, ensuring the correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.

4.2 Scale Placement

Place the scale on a hard, flat, and stable surface to ensure accurate readings. Avoid placing it on soft or uneven surfaces, or near sources of vibration.



Image 1: Top view of the Farberware 5122579 Electronic Kitchen Scale, showing the digital display and control buttons.

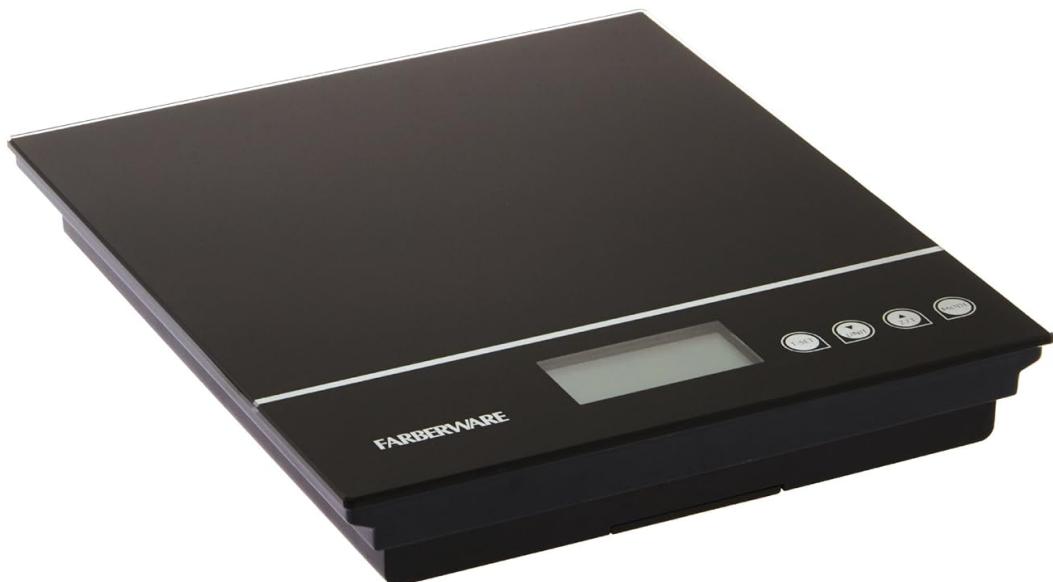


Image 2: Angled view of the Farberware 5122579 Electronic Kitchen Scale, highlighting its sleek design.

5. OPERATING INSTRUCTIONS

5.1 Turning On/Off

- To turn on: Press the **ON/OFF** button. The display will show '0' or '0.0'.
- To turn off: Press and hold the **ON/OFF** button for a few seconds, or the scale will automatically turn off after approximately 60 seconds of inactivity to conserve battery life.

5.2 Unit Selection

Press the **UNIT** button to cycle through the available measurement units: grams (g), ounces (oz), pounds (lb), and milliliters (ml).

5.3 Tare Function (Zeroing the Scale)

The Tare function allows you to weigh multiple ingredients in the same container or to subtract the weight of a container.

1. Place an empty container on the scale. The display will show its weight.
2. Press the **TARE** button. The display will reset to '0' or '0.0'.
3. Add the ingredient you wish to weigh into the container. The display will show only the weight of the ingredient.
4. Repeat the TARE function for additional ingredients.

5.4 Weighing Items

1. Turn on the scale and ensure it displays '0' or '0.0'.
2. Place the item(s) directly onto the weighing platform or into a tared container.
3. Read the weight displayed on the screen.

6. MAINTENANCE AND CARE

6.1 Cleaning

Wipe the scale surface with a soft, damp cloth. Do not use chemical or abrasive cleaning agents. Ensure no water enters the interior of the scale.

6.2 Storage

Store the scale in a cool, dry place. If the scale will not be used for an extended period, it is recommended to remove the batteries to prevent leakage.

6.3 Battery Replacement

When the display shows 'Lo' or becomes dim, it is time to replace the batteries. Follow the battery installation steps in Section 4.1.

7. TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|-------------------------------|---|--|
| Scale does not turn on | Dead or incorrectly installed batteries | Replace batteries or check polarity. |
| Display shows 'Lo' | Low battery power | Replace batteries. |
| Display shows 'Err' or 'O-Ld' | Scale overloaded | Remove item immediately. Do not exceed maximum capacity. |
| Inaccurate readings | Unstable surface, scale not tared, or external interference | Place on a flat, stable surface. Ensure scale is tared before weighing. Avoid strong electromagnetic fields. |

8. SPECIFICATIONS


- Model:** 5122579
- Brand:** Farberware
- Power Source:** 2 x AA Batteries (included)
- Product Dimensions:** 4.45 x 20.96 x 19.69 cm
- Item Weight:** 509 g
- Units:** g, oz, lb, ml
- UPC:** 024131264773

9. WARRANTY AND SUPPORT

Farberware products are manufactured to high-quality standards. For specific warranty details, please refer to the warranty card included with your purchase or visit the official Farberware website. If you encounter any issues or require technical assistance, please contact Farberware customer support through their official channels.

For further assistance, please visit the [Farberware official website](#).

Related Documents - 5122579
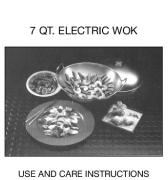
| | |
|--|--|
|   | <p>Farberware 201797 Air Fryer Toaster Oven Owner's Manual Comprehensive owner's manual for the Farberware 201797 Air Fryer Toaster Oven, covering operation, safety, troubleshooting, and recipes. Provided by Appliance Factory Parts.</p> |
|  | <p>Farberware 201797 Air Fryer Toaster Oven User Manual Comprehensive user manual for the Farberware 201797 Air Fryer Toaster Oven, covering important safeguards, operation, cleaning, troubleshooting, and recipes.</p> |
|  | <p>Farberware FMO13AHTPLE Microwave Oven Instruction Manual This instruction manual provides essential information for operating and maintaining the Farberware FMO13AHTPLE microwave oven. Learn about safety, features, and troubleshooting for optimal use.</p> |
|  | <p>Farberware Millennium Electric Skillet Use & Care Instructions and Warranty Comprehensive guide for the Farberware Millennium Electric Skillet (Model FS12B), including operating instructions, cooking methods, suggested cooking charts, user maintenance, safety precautions, and a one-year limited warranty.</p> |
|  | <p>Farberware 7 Qt. Electric Wok FSW343: Use, Care, and Recipes Comprehensive guide for the Farberware 7 Qt. Electric Wok (Model FSW343), including important safety instructions, operating procedures, care guidelines, and a collection of Chinese recipes.</p> |
|  | <p>Farberware Professional 5-Liter Complete Portable Countertop Dishwasher Use and Care Manual This manual provides important safety information, operating instructions, and troubleshooting tips for the Farberware Professional 5-Liter Complete Portable Countertop Dishwasher. Learn how to load, operate, and maintain your dishwasher for optimal performance.</p> |

