

[Manuals.plus](#) /

> [toyz](#) /

> toyz York Tricycle for Children, Silver Grey User Manual

toyz 5902021523733

toyz York Tricycle User Manual

Model: 5902021523733 | Brand: toyz

1. PRODUCT OVERVIEW

The York Tricycle is an ideal choice for young children, featuring a stable steel frame and an adjustable seat. It is designed to be compact, lightweight, and easy to transport, making it highly maneuverable and simple to store. This tricycle is suitable for children aged 3 to 5 years.

Key Features:

- Lightweight and highly stable steel frame.
- Anatomically shaped adjustable seat for comfort.
- Safety handles for secure grip.
- Simple assembly system for quick setup.
- Compact dimensions for easy maneuverability and storage.



Figure 1.1: Front view of the toyz York Tricycle, highlighting its silver-grey frame, black seat, and black handlebars with grey wheels.



Figure 1.2: Rear view of the toyz York Tricycle, illustrating the stable base and the design of the rear wheels.

2. SAFETY INSTRUCTIONS

- **WARNING: Not suitable for children under 3 years of age.**
- **Always use the product under direct adult supervision.**
- **Protective equipment should be worn (e.g., helmet, knee pads, elbow pads).**
- **Do not use in road traffic. This tricycle is intended for use in safe, controlled environments only.**
- **Ensure all parts are securely fastened before each use.**
- **Do not exceed the maximum child weight of 25 kg.**

3. SETUP AND ASSEMBLY

The York Tricycle features a simple assembly system. While specific step-by-step instructions are not provided here, general guidelines for assembly typically include:

1. **Unpack Components:** Carefully remove all parts from the packaging and verify against the included parts list (if available).
2. **Attach Wheels:** Securely attach the front and rear wheels to the main frame. Ensure they rotate freely and are firmly in place.
3. **Install Handlebars:** Insert the handlebars into the designated slot on the front fork and tighten any securing mechanisms.
4. **Mount Seat:** Attach the anatomically shaped seat to the frame. Adjust the seat height as needed for the child's comfort and leg length.
5. **Final Checks:** Before first use, double-check all screws, bolts, and fasteners to ensure they are tight and secure. Confirm that the steering operates smoothly and the wheels turn without obstruction.

For detailed assembly instructions, please refer to the pictorial guide or specific manual included in your product packaging.

4. OPERATING THE TRICYCLE

The York Tricycle is designed for intuitive use by young children. Here are basic operating guidelines:

- **Riding Position:** Ensure the child is seated comfortably with their feet able to reach the pedals. The adjustable seat allows for optimal positioning.
- **Pedaling:** Encourage the child to push the pedals forward in a circular motion to propel the tricycle.
- **Steering:** The handlebars control the direction of the front wheel. Guide the child to turn the handlebars left or right to steer.
- **Supervision:** Always ensure an adult is present and actively supervising the child during use, especially when the child is learning to ride or in new environments.
- **Safe Environment:** Use the tricycle in a flat, open, and safe area, away from traffic, steep inclines, or obstacles.

5. MAINTENANCE

Regular maintenance will ensure the longevity and safe operation of your York Tricycle:

- **Cleaning:** Wipe down the tricycle regularly with a damp cloth and mild soap. Avoid harsh chemicals that could damage the finish or materials.
- **Inspections:** Periodically check all nuts, bolts, and screws to ensure they are tight. Retighten if necessary.
- **Wheel Check:** Inspect the wheels and tires for any signs of wear, cracks, or damage. Ensure they spin freely.
- **Storage:** Store the tricycle in a dry, cool place, away from direct sunlight and extreme temperatures, to prevent material degradation.
- **Lubrication:** If any moving parts (e.g., wheel axles) begin to squeak or stiffen, apply a small amount of silicone-based lubricant.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your tricycle. If you experience problems not listed here, please contact customer support.

Problem	Possible Cause	Solution
Tricycle pulls to one side	Uneven wheel alignment or loose connection.	Check wheel alignment and tighten all wheel connections.
Squeaking noise from wheels/pedals	Lack of lubrication or dirt accumulation.	Clean the affected area and apply a small amount of lubricant to moving parts.
Pedals are stiff or not turning	Obstruction or damaged pedal mechanism.	Inspect for any obstructions. If damaged, contact customer support for replacement parts.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions (L x W x H)	77 x 48 x 66 cm (approx. 30.3 x 18.9 x 26 inches)
Product Weight	3.9 kg (approx. 8.6 lbs)
Maximum Child Weight	25 kg (approx. 55 lbs)
Recommended Age	3 to 5 years
Front Wheel Diameter	27 cm (foam wheel)
Rear Wheel Diameter	22 cm (foam wheel)
Frame Material	Steel
Main Material	Metal, Polyester
Color	Silver Grey
Model Number	5902021523733

8. WARRANTY AND SUPPORT

While specific warranty details are not provided in this manual, most products come with a manufacturer's warranty covering defects in materials and workmanship for a limited period from the date of purchase. Please retain your proof of purchase for warranty claims.

Customer Support:

For any questions, concerns, or issues regarding your toyz York Tricycle, please contact the retailer or manufacturer's customer service department. Have your model number (5902021523733) and purchase information

ready when contacting support.

Contact information for support can typically be found on the product packaging or the manufacturer's official website.

© 2024 toyz. All rights reserved.

This manual is for informational purposes only and may be subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01CRS5URU>

More documents and user manuals: <https://manuals.plus/>