

Radio Flyer 3 in 1 EZ Fold Stroller Wagon

Radio Flyer 3 in 1 EZ Fold Stroller Wagon User Manual

Model: 3 in 1 EZ Fold Stroller Wagon

1. INTRODUCTION

Thank you for choosing the Radio Flyer 3 in 1 EZ Fold Stroller Wagon. This versatile product is designed to provide comfort and convenience for both children and caregivers, offering multiple riding modes, ample storage, and easy portability. This manual provides essential information for the safe assembly, operation, maintenance, and troubleshooting of your new wagon. Please read it thoroughly before use and retain it for future reference.

2. IMPORTANT SAFETY INFORMATION

WARNING: Failure to follow these instructions could result in serious injury or death.

- Always ensure children are properly secured with the seat belts provided.
- Do not overload the wagon. Refer to specifications for weight limits.
- Never leave children unattended in the wagon.
- Ensure all locking mechanisms are engaged before use.
- Keep hands and fingers clear of moving parts during folding and unfolding.
- Do not use the wagon on steep inclines or uneven terrain that could cause it to tip over.
- Regularly inspect the wagon for loose parts, damage, or wear. Discontinue use if any damage is found.

3. SETUP AND ASSEMBLY

Your Radio Flyer 3 in 1 EZ Fold Stroller Wagon comes mostly pre-assembled. Follow these steps to prepare it for use.

3.1 Unfolding the Wagon

1. Place the folded wagon on a flat, stable surface.
2. Grasp the handle and pull upwards until the wagon frame fully extends and locks into place.
3. Press down firmly on the center of the wagon floor to ensure it is flat and secure.



Figure 3.1: The Radio Flyer 3 in 1 EZ Fold Stroller Wagon fully unfolded and ready for use.

3.2 Attaching the Canopy

1. Locate the four canopy poles.
2. Insert each pole into the designated slots on the wagon frame until they click securely into place.
3. Drape the canopy fabric over the poles, ensuring it is taut and provides adequate shade.



Figure 3.2: Inserting a canopy pole into the wagon frame.

4. OPERATING MODES AND FEATURES

The Radio Flyer 3 in 1 EZ Fold Stroller Wagon offers versatile functionality to adapt to your needs.

4.1 Riding Modes

This wagon features three distinct riding modes:

- **Two-Child Seating:** Ideal for transporting two children comfortably with high seat backs and padded seats.
- **Bench Seating:** One side of the wagon can be unzipped and folded down to create a comfortable bench for a child to sit on.
- **Hauling Mode:** When not transporting children, the wagon provides spacious capacity for carrying gear, groceries, or other items.



Figure 4.1: The three versatile riding and hauling modes of the wagon.

4.2 Adjustable Handle

The wagon is equipped with an adjustable telescope handle for comfortable pushing or pulling. The handle is designed to stay upright when not in use, preventing it from falling to the ground.

4.3 Seat Belts

For the safety of your children, the wagon includes seat belts. Always ensure children are securely buckled in before moving the wagon.



Figure 4.2: Securing the seat belt.

4.4 Storage and Cup Holders

The wagon features a rear storage pouch and two front cup holders to keep essentials within easy reach.



Figure 4.3: External cup holders for beverages.

5. FOLDING AND STORAGE

The EZ Fold design allows for quick and compact storage.

1. Ensure the canopy is removed and stored separately.
2. Locate the pull strap in the center of the wagon floor.
3. Pull the strap upwards with one hand. The wagon will begin to fold inward.
4. Continue pulling until the wagon is fully collapsed into a flat, compact form.
5. The folded wagon can be easily transported or stored in small spaces, such as a car trunk.



Figure 5.1: Pulling the central strap to fold the wagon.



Figure 5.2: The wagon folded compactly for storage or transport.

6. MAINTENANCE AND CARE

Proper maintenance will extend the life of your Radio Flyer wagon.

- **Cleaning:** The wagon is made with DuraClean fabric, which is designed for simple and quick wipe cleaning. Use a damp cloth with mild soap and water to clean the fabric and frame. Do not use abrasive cleaners.
- **Storage:** Store the wagon in a dry place, away from direct sunlight and extreme temperatures, to prevent material degradation.
- **Inspection:** Periodically check all nuts, bolts, and fasteners to ensure they are tight. Inspect the wheels and tires for wear or damage.



Figure 6.1: The DuraClean fabric can be unzipped for easier cleaning.

7. TROUBLESHOOTING

If you encounter any issues with your wagon, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Wagon does not unfold completely.	Frame not fully extended or locked.	Ensure the frame is pulled upwards until it clicks into place. Press down firmly on the center floor.
Wagon is difficult to fold.	Strap not pulled sufficiently or mechanism is stiff.	Pull the central strap firmly and directly upwards. Ensure no obstructions are present.
Wheels are squeaky or stiff.	Dirt accumulation or lack of lubrication.	Clean wheels and axles. Apply a small amount of silicone-based lubricant if necessary.
Canopy does not stay in place.	Poles not fully inserted or damaged.	Ensure all four poles are securely inserted until they click. Inspect poles for damage.

8. SPECIFICATIONS

Key specifications for the Radio Flyer 3 in 1 EZ Fold Stroller Wagon:

Feature	Detail
Product Dimensions (L x W x H)	39.37"D x 21.26"W x 40.75"H
Brand	Radio Flyer
Material	Plastic, Steel, Fabric
Color	Red
Special Feature	Portable, 3-in-1 functionality
Seating Capacity	2 children
Tire Type	Off-road real rubber tires



Figure 8.1: Product dimensions.

9. WARRANTY AND SUPPORT

Radio Flyer products are built with quality and durability in mind. For information regarding warranty

coverage, product registration, or to contact customer support for assistance with parts or service, please visit the official Radio Flyer website or refer to the warranty card included with your purchase. Please have your model number (3 in 1 EZ Fold Stroller Wagon) and ASIN (B01CTUGC5K) ready when contacting support.