

[Manuals.plus](#) /

› [Little Tikes](#) /

› Little Tikes Light 'n Go - Activity Garden Treehouse Instruction Manual

Little Tikes 640964

Little Tikes Light 'n Go - Activity Garden Treehouse Instruction Manual

Model: 640964

INTRODUCTION

The Little Tikes Light 'n Go Activity Garden Treehouse is an interactive playset designed to encourage active play and developmental growth for children aged 6 to 36 months. This manual provides essential information for the safe and proper use of your activity garden.

SAFETY INFORMATION

- Always supervise children during play.
- Ensure all parts are securely assembled before use.
- Keep small parts away from children under 3 years to prevent choking hazards.
- This product is intended for indoor use.
- Requires 3 AAA batteries (included) for light and sound features. Replace batteries as needed.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly. Refer to the included parts list in your packaging for a complete inventory.

Included Components: Toy (various parts for assembly).

SETUP AND ASSEMBLY

Assembly is required for the Activity Garden Treehouse. Please follow the step-by-step instructions provided in the separate assembly guide included with your product. A Phillips screwdriver (thinner tip recommended) will be necessary for securing components.

Ensure all screws are tightened properly to maintain stability. The playset can be configured in different layouts to suit your space and child's developmental stage.



Image: The Activity Garden Treehouse in a compact setup, showing a baby interacting with the features. This configuration is ideal for smaller spaces or younger infants.

OPERATING INSTRUCTIONS

The Activity Garden Treehouse offers a variety of interactive features:

Magic Lantern

The central Magic Lantern provides three modes of play:

- **Explore Colors:** Teaches colors with twinkling and spinning lights.
- **Dance Party:** Activates fun songs and a dazzling light show to encourage movement.
- **Collect Fireflies:** An interactive game where lights project onto the floor, encouraging the child to "catch" them and bring them back to the lantern.

Additional Activities

- **Slide:** A small slide for infants to enjoy.
- **Monkey Zip Line:** A hanging monkey toy that can slide along a bar.
- **Shape Sorter:** Integrated shape sorting activity.
- **Mailbox:** A mailbox feature for imaginative play.
- **Peek-a-boo Shutters:** Interactive shutters for peek-a-boo play.
- **Crawl-through Giraffe Arch:** An archway designed for crawling.

- **Toucan & Giraffe Ball Feeders:** Feed balls into the toucan or giraffe for them to roll down.
- **Bead Ball Spinner:** A spinning bead ball for tactile exploration.
- **Ladybug Clickers:** Clicking ladybug features.
- **Clicking Clock:** A clock with movable hands that click.
- **Zig-zag Ball Drop:** A path for balls to zig-zag down.
- **Door Bell:** An interactive doorbell.
- **Swinging Doors:** Doors that swing open and close.





Image: A baby crawling towards the giraffe archway, demonstrating the crawl-through feature of the playset.



Image: A baby sitting on the red slide, highlighting one of the many interactive elements of the Activity Garden Treehouse.

MAINTENANCE AND CARE

To clean the Activity Garden Treehouse, wipe surfaces with a damp cloth and mild soap. Do not immerse electronic components in water. Regularly check for loose parts or damage and discontinue use if any issues are found until repairs are made.

Battery Replacement

The Magic Lantern requires 3 AAA batteries. To replace, locate the battery compartment, typically on the underside or back of the unit. Use a Phillips screwdriver to open the compartment, insert new batteries, ensuring correct polarity (+/-), and securely close the cover.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lights/Sounds not working	Dead or incorrectly installed batteries.	Replace batteries with fresh AAA batteries, ensuring correct polarity.
Playset feels unstable after assembly	Screws not fully tightened or parts not properly aligned.	Review assembly instructions, ensure all connections are secure and screws are tightened. Use a suitable screwdriver.
Parts do not fit together	Incorrect orientation of parts or manufacturing defect.	Double-check the assembly guide for correct part orientation. If issues persist, contact customer support.

SPECIFICATIONS

- **Brand:** Little Tikes
- **Model Number:** 640964
- **Age Range:** 6-36 months
- **Dimensions:** 28.3 x 26.7 x 30.4 inches
- **Item Weight:** 13.87 Pounds
- **Material Type:** Resin
- **Power Source:** Battery powered (3 AAA batteries required, included)
- **Indoor/Outdoor Usage:** Indoor
- **Educational Objective:** Motor Skills

WARRANTY INFORMATION

This product comes with a 90-day warranty against manufacturer defects. Please retain your proof of purchase for warranty claims. For more details or to initiate a claim, refer to the warranty card included with your product or visit the Little Tikes official website.

CUSTOMER SUPPORT

For further assistance, missing parts, or technical support, please contact Little Tikes Customer Service. You can find contact information on the official Little Tikes website or on the product packaging.
Website: www.littletikes.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01CV08N8W>

More documents and user manuals: <https://manuals.plus/>