

[manuals.plus](#) /› [RM-Series](#) /› [RM Series Replacement Remote Control for Manhattan PLAZA-HD-S2 User Manual](#)

RM-Series HD-S2

RM Series Replacement Remote Control User Manual

For Manhattan PLAZA-HD-S2

Model: HD-S2

INTRODUCTION

This manual provides comprehensive instructions for the RM Series Replacement Remote Control, specifically designed for the Manhattan PLAZA-HD-S2 receiver. This remote is engineered to replicate **all functions** of your original remote control without requiring any complex programming or setup. Simply insert the batteries, and it is ready for immediate use.

The RM Series remote controls are developed and assembled in the UK, utilizing advanced chipset technology to ensure precise infra-red code matching with the original device. Unlike generic universal remotes, every button on this RM Series remote is 100% correctly labeled, eliminating the need to constantly refer to an instruction manual for button functions.

Key features include:

- Full functionality of the original remote control supplied with your device.
- Dedicated replacement, not a generic "Universal" remote.
- No programming or setup required; works straight out of the box.
- Equipped with a red LED indicator for signal transmission.
- Superior quality construction, assembled and tested in the UK.
- Buttons are correctly labeled to match the original remote's functions.

SETUP

Setting up your RM Series Replacement Remote Control is a straightforward process. No complex pairing or code entry is required.

1. Battery Installation

The remote control requires two (2) AAA batteries for operation. Ensure you use fresh batteries for optimal performance.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Once batteries are installed, the remote is ready to operate your Manhattan PLAZA-HD-S2 receiver.



Figure 1: Angled view of the RM Series Replacement Remote Control. This image highlights the ergonomic design and the clear labeling of buttons, including power, mute, number pad, navigation, volume, and channel controls.

OPERATING INSTRUCTIONS

The RM Series Replacement Remote Control is designed for intuitive use, mirroring the functionality of your original Manhattan PLAZA-HD-S2 remote. All buttons are clearly labeled to perform their intended functions.

Basic Operation

- **Power Button:** Press the **POWER** button (usually located at the top left) to turn your Manhattan PLAZA-HD-S2 receiver on or off.
- **Number Buttons (0-9):** Use these buttons to directly enter channel numbers.
- **Volume Control:** Use the **VOL +** and **VOL -** buttons to adjust the audio volume.
- **Channel Control:** Use the **P +** and **P -** buttons to change channels sequentially.
- **Mute Button:** Press the **MUTE** button to temporarily silence the audio. Press again to restore sound.
- **Navigation Pad (Arrow Buttons and OK):** Use the directional arrow buttons (**UP**, **DOWN**, **LEFT**, **RIGHT**) to navigate menus and select options. Press the **OK** button in the center to confirm selections.
- **Menu Button:** Access the main menu of your receiver.
- **Guide Button:** Open the electronic program guide (EPG).
- **Info Button:** Display information about the current program.
- **Colored Buttons:** (Red, Green, Yellow, Blue) These buttons typically correspond to specific functions within menus or interactive services, as indicated on your TV screen.





Figure 2: Front view of the RM Series Replacement Remote Control. This image provides a clear overview of the entire button layout, including the power, mute, numerical keypad, navigation cluster, volume, channel, and various function buttons like GUIDE, INFO, MENU, and LIST.

Advanced Functions

The remote also includes dedicated buttons for advanced functions, depending on your receiver's capabilities:

- **APPS:** Access smart applications or internet features.
- **BACK:** Return to the previous screen or menu.
- **EXIT:** Exit the current menu or application.
- **P>P (Picture-in-Picture):** If supported by your receiver, this button controls PiP functions.
- **AD (Audio Description):** Toggle audio description for visually impaired users.
- **MODE:** Switch between different input modes or functions.
- **SUB (Subtitles):** Enable or disable subtitles.
- **TXT (Teletext):** Access teletext services.
- **SWAP:** Quickly switch between two previously viewed channels.
- **FAV (Favorites):** Access your list of favorite channels.

For specific functions related to your Manhattan PLAZA-HD-S2 receiver, refer to your receiver's user manual.

MAINTENANCE

Proper care and maintenance will ensure the longevity and optimal performance of your RM Series Replacement Remote Control.

Cleaning

- Wipe the remote control regularly with a soft, dry cloth to remove dust and fingerprints.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not spray cleaner directly onto the remote.
- Avoid using harsh chemicals, abrasive cleaners, or solvents, as these can damage the remote's surface and internal components.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or the LED indicator does not light up consistently when a button is pressed. Always replace both batteries at the same time with new AAA batteries.

Storage

- Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.
- If the remote will not be used for an extended period (e.g., several months), it is advisable to remove the batteries to prevent leakage and potential damage to the remote.

TROUBLESHOOTING

If you encounter issues with your RM Series Replacement Remote Control, try the following troubleshooting steps before seeking further assistance.

Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace old or depleted batteries with new AAA batteries.
- **Line of Sight:** Make sure there is a clear line of sight between the remote control's infrared emitter (at the front of the remote) and the infrared receiver on your Manhattan PLAZA-HD-S2 receiver. Obstructions can block the signal.
- **Distance:** Ensure you are within the effective operating range (up to 10 meters).
- **Receiver Power:** Confirm that your Manhattan PLAZA-HD-S2 receiver is powered on and functioning correctly.

Buttons Not Working Correctly

- **Clean Remote:** Dirt or debris under the buttons can sometimes cause them to stick or not register presses. Refer to the Maintenance section for cleaning instructions.
- **Battery Check:** Weak batteries can lead to inconsistent button responses. Replace them.

Interference

- Bright light sources, especially fluorescent lights or direct sunlight, can sometimes interfere with infrared signals. Try operating the remote in different lighting conditions.
- Other infrared devices operating nearby might cause interference.

If the issue persists after trying these steps, please contact customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Brand	RM-Series
Model Number	HD-S2
Compatible Devices	Manhattan PLAZA-HD-S2 (Television/Receiver)
Connectivity Technology	Infrared
Controller Type	Button Control
Number of Buttons	25
Maximum Range	10 Meters
Batteries Required	2 x AAA batteries
Product Dimensions	22.7 x 5 x 2.4 cm
Item Weight	86.18 g
Colour	Red
Max Number of Supported Devices	1

WARRANTY AND SUPPORT

RM Series remote controls are manufactured to high standards and undergo vigorous testing to ensure long-term use and reliability. All RM Series products are CE and ROHS compliant.

For any technical support or inquiries regarding your RM Series Replacement Remote Control, please contact the manufacturer, RM Series, or your point of purchase. Keep your purchase receipt as proof of purchase.

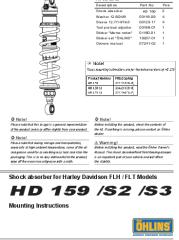
The RM Series range of remote controls has been a popular choice within the professional TV servicing industry across Europe for over a decade, attesting to their quality and reliability.

© 2024 RM Series. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

Related Documents - HD-S2

	Babysense HD S2 Video Baby Monitor User Manual Comprehensive user manual for the Babysense HD S2 Video Baby Monitor, covering setup, operation, features, troubleshooting, and specifications. Learn how to watch, listen, and talk to your baby with this wireless digital video baby monitor.
	Babysense HD S2 Wireless Digital Video Baby Monitor User Manual Comprehensive user manual for the Babysense HD S2 Wireless Digital Video Baby Monitor. This guide covers setup, operation, safety instructions, troubleshooting, and specifications for models with 1 or 2 cameras. Features include two-way talk, night vision, and temperature monitoring.

<p>S2 NetBox User Guide Created from S2 NetBox Help Version 4.8.01</p> <p>February 2014 S2 Security Corporation S2 Support: 1000-888-0205 Documentation: 1000-888-0206</p>	<p>S2 NetBox User Guide - Comprehensive Security System Manual</p> <p>Explore the S2 NetBox User Guide, detailing setup, monitoring, administration, and configuration of the S2 Security Corporation's robust security management system. Version 4.8.01.</p>
 <p>ALPINE S2-SERIES SUBWOOFER HAUT-PARLEUR D'EXTREMES GRAVES S-SERIES APPLICATION GUIDE GUIDE D'APPLICATION</p> <p>S2-W12D4 S2-W12D2 S2-W10D4 S2-W10D2 S2-W8D4 S2-W8D2</p>	<p>Alpine S2-Series Subwoofer Application Guide and Specifications</p> <p>Comprehensive application guide, technical specifications, enclosure recommendations, and installation notes for Alpine S2-Series subwoofers, including models S2-W8D2, S2-W8D4, S2-W10D2, S2-W10D4, S2-W12D2, and S2-W12D4. Features detailed component descriptions, wiring diagrams, and warranty information.</p>
 <p>EDISION proton S2 DVB-S2 Full HD Sat Receiver FTA User's Guide</p>	<p>EDISION Proton S2 Full HD Sat Receiver FTA User's Guide</p> <p>User's guide for the EDISION Proton S2 Full HD Sat Receiver FTA, covering safety instructions, remote control functions, description of the device, technical data, installation, settings, media playback, applications like YouTube and RSS Reader, and EPG.</p>
 <p>Öhlins HD 159/S2/S3 Mounting Instructions</p>	<p>Öhlins HD 159/S2/S3 Shock Absorber Mounting Instructions for Harley Davidson FLH/FLT</p> <p>Comprehensive mounting instructions for Öhlins HD 159, HD 159 S2, and HD 159 S3 shock absorbers for Harley Davidson FLH and FLT models, covering installation, adjustments, and setup.</p>