

Manuals.plus /

› VINABTY /

› VINABTY BN59-01179A Replacement Remote Control Instruction Manual for Samsung LED TVs

VINABTY BN59-01179A

VINABTY BN59-01179A Replacement Remote Control Instruction Manual

For Samsung LED TVs

1. INTRODUCTION

This manual provides instructions for the VINABTY BN59-01179A replacement remote control, designed for use with various Samsung LED TV models. This remote offers full functionality without requiring complex setup procedures.

2. SETUP AND BATTERY INSTALLATION

The VINABTY BN59-01179A remote control is designed for immediate use. No programming or pairing is required. Simply install the batteries to begin operation.

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Note: Always replace both batteries at the same time. Do not mix old and new batteries, or different types of batteries.





Image 1: Back view of the remote control, highlighting the battery compartment.

3. OPERATING THE REMOTE CONTROL

This remote control provides standard functions for navigating your Samsung LED TV. Point the remote directly at the TV's infrared sensor for optimal performance.





Image 2: Front view of the remote control, displaying all buttons.

3.1 Key Functions

- **Power (TV):** Turns the television on or off.
- **Source:** Selects input sources (HDMI, AV, etc.).
- **STB Power / STB Menu / STB Guide:** Controls a connected Set-Top Box (if applicable).
- **Number Buttons (0-9):** Direct channel selection.
- **Volume (+/-):** Adjusts the television volume.
- **Mute:** Mutes or unmutes the television audio.
- **Channel (CH +/-):** Changes television channels.
- **Menu:** Accesses the TV's main menu.
- **Smart Hub:** Opens the Smart Hub interface for smart TV features.
- **Guide:** Displays the electronic program guide.
- **Navigation Pad (Up, Down, Left, Right, Enter):** Navigates menus and selects options.
- **Return:** Returns to the previous screen or menu.
- **Exit:** Exits the current menu or application.
- **Color Buttons (A, B, C, D):** Functionality varies by TV model and application.
- **Play/Pause, Stop, Rewind, Fast Forward:** Media playback controls.

4. COMPATIBLE SAMSUNG TV MODELS

This remote control is compatible with a wide range of Samsung LED TV models, including but not limited to:

- UN110S9, UN110S9VF, UN110S9VFXZA
- UN32H5500, UN32H5500AF, UN32H5500AFXZA
- UN32H6350, UN32H6350AF, UN32H6350AFXZA
- UN39H5204, UN39H5204AF, UN39H5204AFXZA
- UN40H5500, UN40H5500AF, UN40H5500AFXZA
- UN40H6350, UN40H6350AF, UN40H6350AFXZA
- UN48H5500, UN48H5500AF, UN48H5500AFXZA
- UN48H6350, UN48H6350AF, UN48H6350AFXZA
- UN50H5500, UN50H5500AF, UN50H5500AFXZA
- UN50H6350, UN50H6350AF, UN50H6350AFXZA
- UN55H6300, UN55H6300AF, UN55H6300AFXZA
- UN55H6350, UN55H6350AF, UN55H6350AFXZA
- UN60H6300, UN60H6300AF, UN60H6300AFXZA
- UN60H6350, UN60H6350AF, UN60H6350AFXZA
- UN65H6350AF
- UN75H6300, UN75H6300AF, UN75H6300AFXZA

- UN75H6350, UN75H6350AF, UN75H6350AFXZA
- UN65H6203BFXZA, UN58H5202AFXZA, UN58H5202AFXZC
- UN40H5201AFXZALT24H310SNDXZA, UN55H6203AF/XZA, UN50H6203AFXZA
- UN46H6203AFXZA, UN40H5203AFXZA, UN40H6203AFXZA
- UN65H6203AFXZA, UN50H5203AFXZA, UN60H6203AFXZA, UN46H5203AFXZA



Image 3: Remote control in use with a television.

5. SPECIFICATIONS

Model Number	BN59-01179A
Brand	VINABTY
Compatible Devices	Samsung LED Televisions
Power Source	2 x AAA Batteries (not included)
Product Dimensions	5 x 1.9 x 0.5 inches (approximately 12.7 x 4.8 x 1.3 cm)
Item Weight	2.7 ounces (approximately 76.5 grams)
Color	Black
Special Feature	Ergonomic design

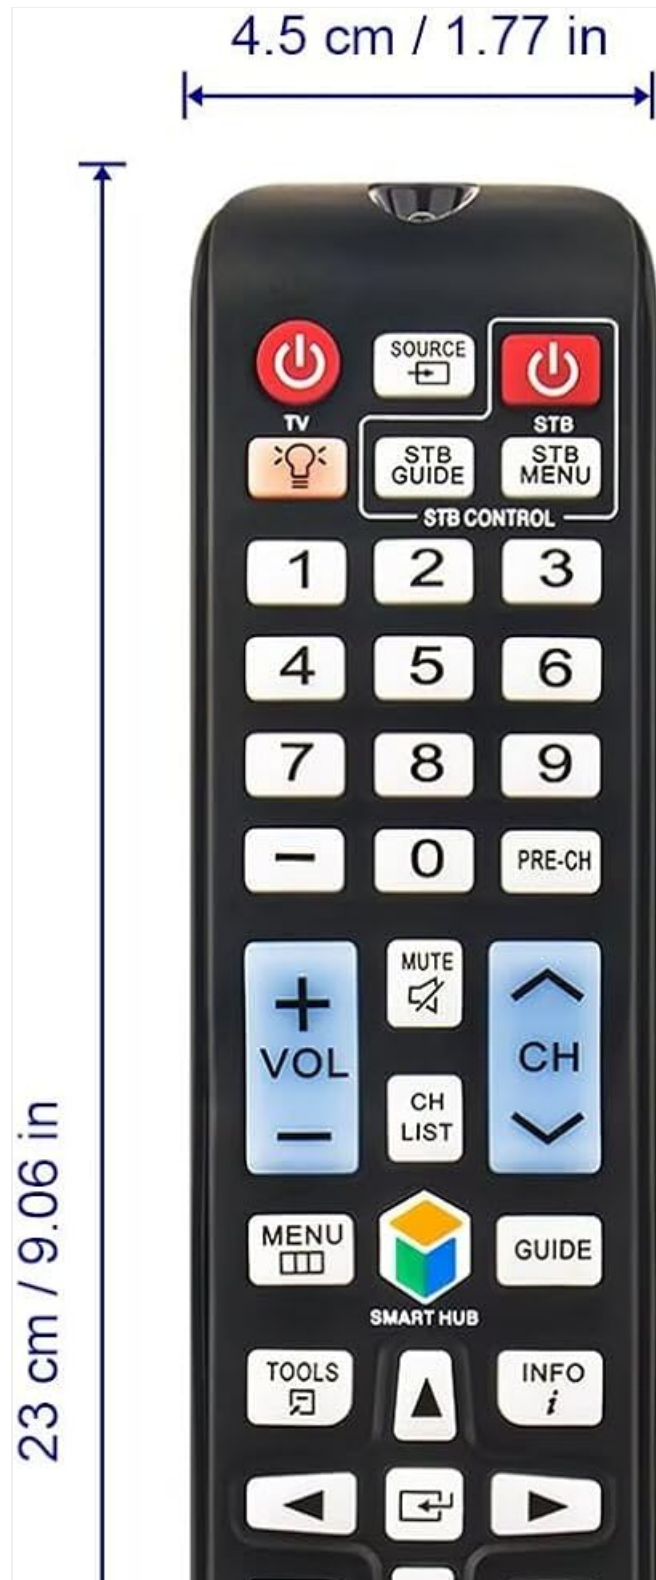




Image 4: Remote control with approximate dimensions.

6. TROUBLESHOOTING

If you experience issues with your remote control, please refer to the following common solutions:

- **Remote Not Responding:**

- Ensure batteries are inserted correctly with the correct polarity (+/-).
- Replace old batteries with new AAA batteries.
- Check for any obstructions between the remote control and the TV's infrared sensor.
- Ensure you are within the effective range of the TV's sensor.

- **Specific Buttons Not Working:**

- Clean the remote control buttons and surface with a soft, dry cloth to remove any dirt or debris.
- If only certain buttons are unresponsive, it might indicate a hardware issue.

- **Intermittent Operation:**

- Weak batteries can cause intermittent functionality. Replace them.
- Ensure there are no strong light sources (like direct sunlight or bright fluorescent lights) interfering with the infrared signal.

7. WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in the available documentation. For support or warranty inquiries, please contact the retailer or manufacturer directly.

