

[Manuals.plus](#) /

› [Amica](#) /

› Amica GSP 14544 W Under-Counter Dishwasher Instruction Manual

Amica GSP 14544 W

Amica GSP 14544 W Under-Counter Dishwasher

Instruction Manual

Model: GSP 14544 W | Brand: Amica

IMPORTANT SAFETY INFORMATION

Please read this instruction manual carefully before installing, operating, or performing maintenance on your Amica GSP 14544 W dishwasher. Keep this manual for future reference.

- Ensure the dishwasher is properly grounded before use.
- Do not allow children to play with or operate the dishwasher.
- Use only detergents and rinse aids specifically designed for automatic dishwashers.
- Never open the dishwasher door during operation, especially during the hot wash cycle.
- In case of malfunction, disconnect the appliance from the power supply before attempting any inspection or repair.

SETUP AND INSTALLATION

The Amica GSP 14544 W is designed as an under-counter, built-in appliance. Proper installation is crucial for safe and efficient operation.

1. Unpacking and Positioning

Carefully remove all packaging materials. Inspect the dishwasher for any damage incurred during transit. Place the dishwasher in its intended under-counter location, ensuring it is level.



Amica

GSP 14544-1 W



70 kWh / 100



9 x



9 L



49 dB

Image: Front view of the Amica GSP 14544 W dishwasher, ready for installation.

2. Water Connection

Connect the water inlet hose to a cold water supply. The dishwasher features an Aquastop safety hose for enhanced protection against leaks. Ensure the connection is secure and leak-free. The maximum water inlet temperature should not exceed 60°C.

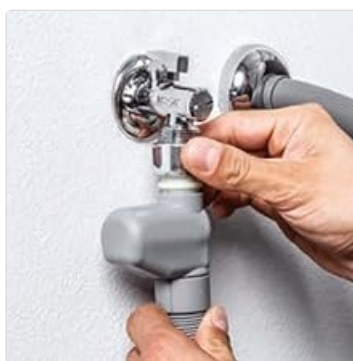


Image: Detailed view of the Aquastop safety hose being connected to a water tap.

3. Drain Connection

Connect the drain hose to your household drainage system, ensuring it is properly secured and allows for adequate water flow without kinks or blockages.

4. Electrical Connection

Plug the dishwasher into a grounded electrical outlet. The appliance operates on 230 Volts at 50 Hz. Do not use extension cords or adapters.

5. Initial Settings: Water Hardness

It is essential to adjust the dishwasher's water softener system according to your local water hardness. Refer to the detailed instructions in the complete user manual for specific steps on how to set the water hardness level, as this often involves specific button combinations on the control panel.

OPERATING INSTRUCTIONS

Your Amica GSP 14544 W dishwasher features intuitive touch controls and a clear display for easy program selection and monitoring.

1. Loading the Dishwasher

Arrange dishes, cutlery, and cookware in the baskets, ensuring that water can reach all surfaces. Avoid overcrowding. The dishwasher accommodates 9 place settings.

- **Upper Basket:** Ideal for glasses, cups, and smaller plates. The upper basket is height-adjustable when unloaded.
- **Lower Basket:** Suitable for larger plates, bowls, and pots. It features foldable grids for flexible loading.
- **Cutlery Basket:** Place cutlery with handles down for best cleaning results.

Produktdatenblatt

DE

DELEGIERTE VERORDNUNG (EU) 2019/2017 DER KOMMISSION

Name oder Handelsmarke des Lieferanten: Amica

Anschrift des Lieferanten⁽²⁾: Amica International GmbH; Lüdinghauser Str. 52, 59387 Ascheberg; Deutschland

Modellkennung: GSP 14544-1 W 1100220

Allgemeine Produktparameter:

Parameter	Wert	Parameter	Wert
Nennkapazität ⁽¹⁾ (ps)	9	Abmessungen in cm	Höhe 84,5 Breite 44,8 Tiefe 60
EEI ⁽¹⁾	55,9	Energieeffizienzklasse ⁽¹⁾	E ⁽³⁾
Reinigungsleistungsindex ⁽¹⁾	1,13	Trocknungsleistungsindex ⁽¹⁾	1,03
Energieverbrauch in kWh [pro Betriebszyklus] im eco-Programm bei Kaltwasseranschluss. Der tatsächliche Energieverbrauch hängt von der jeweiligen Nutzung des Geräts ab.	0,704	Wasserverbrauch in Litern [pro Betriebszyklus] im eco-Programm. Der tatsächliche Wasserverbrauch hängt von der jeweiligen Nutzung des Geräts und vom Härtegrad des Wassers ab.	9
Programmdauer ⁽¹⁾ (h:min)	3:55	Art	freistehend
Luftschallemissionen ⁽¹⁾ (in dB(A) re 1 pW)	49	Luftschallemissionsklasse ⁽¹⁾	C ⁽³⁾
Aus-Zustand (W)	0,49	Bereitschaftszustand (W)	0,45
Zeitvorwahl (W) (falls zutreffend)	1	Vernetzter Bereitschaftsbetrieb (W) (falls zutreffend)	
Mindestlaufzeit der vom Lieferanten angebotenen Garantie ⁽²⁾ :			12
Weitere Angaben:			
Weblink zur Website des Lieferanten, auf der die Informationen gemäß Anhang II Nummer 6 der Verordnung (EU) 2019/2022 ⁽¹⁾ der Kommission zu finden sind: https://amica-group.de/			

⁽¹⁾ Angaben für das eco-Programm.

⁽²⁾ Änderungen dieser Einträge gelten nicht als relevante Änderungen im Sinne des Artikels 4 Absatz 4 der Verordnung (EU) 2017/1369.

⁽³⁾ Wenn der endgültige Inhalt dieser Zelle in der Produktdatenbank automatisch generiert wird, darf der Lieferant diese Daten nicht eingeben.

⁽¹⁾ Verordnung (EU) 2019/2022 der Kommission vom 1. Oktober 2019 zur Festlegung von Ökodesign-Anforderungen an Haushaltsgeschirrspüler gemäß der Richtlinie 2009/125/EG des Europäischen Parlaments und des Rates, zur Änderung der Verordnung (EG) Nr. 1275/2008 der Kommission und zur Aufhebung der Verordnung (EU) Nr. 1016/2010 der Kommission (siehe Seite 267 dieses Amtsblatts).

Image: Open dishwasher showing the stainless steel interior and dish racks.



Image: A cutlery basket filled with utensils, positioned in the lower rack.

2. Adding Detergent and Rinse Aid

Fill the detergent dispenser with the appropriate amount of dishwasher detergent. Check the rinse aid

indicator; if low, refill the rinse aid dispenser to ensure streak-free drying.

3. Program Selection

Use the touch control panel to select one of the 6 available wash programs. The display will show the selected program and estimated cycle time.



Image: Close-up of the dishwasher's touch control panel with a digital timer display.

Available Wash Programs

Program	Temperature	Approx. Duration	Description
Normal	55°C	175 min	For normally soiled daily dishes.
Eco	45°C	190 min	Energy-efficient program for standard soiled dishes.
Glass	40°C	125 min	Gentle cleaning for delicate glassware.
90 min	65°C	90 min	Quick wash for lightly soiled dishes.
Intensive	65°C	200 min	For heavily soiled dishes and pots.

4. Additional Functions

- **Start Time Delay:** You can delay the start of a wash cycle by 3, 6, 9, or 12 hours.
- **Half-Load:** Use this function when the dishwasher is not fully loaded to save water and energy.

5. Starting and Ending a Cycle

Press the Start button to begin the selected program. The dishwasher will automatically complete the cycle. Once finished, carefully open the door and allow dishes to cool before unloading.

MAINTENANCE AND CARE

Regular maintenance ensures optimal performance and longevity of your dishwasher.

1. Cleaning Filters

The dishwasher's filter system should be cleaned regularly to prevent blockages and ensure effective cleaning. Refer to the full manual for instructions on how to remove and clean the filters.

2. Refilling Salt and Rinse Aid

The dishwasher is equipped with indicators for rinse aid and salt levels. Refill these compartments when the respective indicator lights illuminate on the control panel.

3. Exterior and Interior Cleaning

Wipe the exterior of the dishwasher with a soft, damp cloth. The interior, made of stainless steel, can be cleaned periodically with a dishwasher cleaner or a mixture of vinegar and water to remove mineral deposits and odors.

TROUBLESHOOTING

Before contacting customer service, please check the following common issues:

- **Dishwasher not starting:** Ensure the power cord is securely plugged in and the door is fully closed. Check your household's circuit breaker.
- **Dishes not clean:** Check if spray arms are blocked, filters are clean, and detergent dispenser is filled correctly. Ensure dishes are loaded properly.
- **Water not draining:** Check the drain hose for kinks or blockages. Clean the filters.
- **Water hardness setting:** Incorrect water hardness settings can lead to poor cleaning results or white residue. Refer to the full manual for detailed instructions on adjusting this setting.

For more complex issues or error codes displayed on the panel, consult the comprehensive troubleshooting guide in your full user manual or contact Amica customer support.

PRODUCT SPECIFICATIONS

Detailed technical specifications for the Amica GSP 14544 W dishwasher:

Feature	Specification
Brand	Amica
Model Name	GSP 14544 W
Installation Type	Built-in (Under-counter)
Product Dimensions (D x W x H)	44.8 cm x 60 cm x 84.5 cm
Capacity	9 Place Settings
Special Features	Aquastop safety hose, Start time delay (3/6/9/12h)
Color	White
Control Type	Touch
Material	Stainless Steel (Interior)
Noise Level	49 Decibels
Voltage	230 Volts
Operating Frequency	50 Hz
Number of Programs	6
Display Type	Touchscreen

Feature	Specification
Energy Efficiency Class	E (New EU Label)
Energy Consumption (Eco program)	0.704 kWh/cycle
Water Consumption (Eco program)	9 Liters/cycle
Program Duration (Eco program)	3:55 (h:min)

Produktdatenblatt				DE	
DELEGIERTE VERORDNUNG (EU) 2019/2017 DER KOMMISSION					
Name oder Handelsmarke des Lieferanten: Amica					
Anschrift des Lieferanten ⁽¹⁾ : Amica International GmbH; Lüdinghauser Str. 52, 59387 Ascheberg; Deutschland					
Modellkennung: GSP 14544-1 W				1100220	
Allgemeine Produktparameter:					
Parameter	Wert	Parameter	Wert		
Nennkapazität ⁽¹⁾ (ps)	9	Abmessungen in cm	Höhe	84,5	
			Breite	44,8	
			Tiefe	60	
EEI ⁽¹⁾	55,9	Energieeffizienzklasse ⁽²⁾	E ⁽³⁾		
Reinigungsleistungsindex ⁽¹⁾	1,13	Trocknungsleistungsindex ⁽²⁾	1,03		
Energieverbrauch in kWh pro Betriebszyklus im eco-Programm bei Kaltwasseranschluss. Der tatsächliche Energieverbrauch hängt von der jeweiligen Nutzung des Geräts ab.	0,704	Wasserverbrauch in Litern (pro Betriebszyklus) im eco-Programm. Der tatsächliche Wasserverbrauch hängt von der jeweiligen Nutzung des Geräts und vom Härtegrad des Wassers ab.	9		
Programmdauer ⁽¹⁾ (h:min)	3:55	Art	freistehend		
Luftschallemissionen ⁽¹⁾ (in dB(A) re 1 pW)	49	Luftschallemissionsklasse ⁽³⁾	C ⁽³⁾		
Aus-Zustand (W)	0,49	Bereitschaftszustand (W)	0,45		
Zeitvorwahl (W) (falls zutreffend)	1	Vernetzter Bereitschaftsbetrieb (W) (falls zutreffend)			
Mindestlaufzeit der vom Lieferanten angebotenen Garantie ⁽²⁾ :				12	
Weitere Angaben:					
Weblink zur Website des Lieferanten, auf der die Informationen gemäß Anhang II Nummer 6 der Verordnung (EU) 2019/2022 ⁽¹⁾ der Kommission zu finden sind: https://amica-group.de/					

(1)

Angaben für das eco-Programm.

(2)

Änderungen dieser Einträge gelten nicht als relevante Änderungen im Sinne des Artikels 4 Absatz 4 der Verordnung (EU) 2017/1369.

(3)

Wenn der endgültige Inhalt dieser Zelle in der Produktdatenbank automatisch generiert wird, darf der Lieferant diese Daten nicht eingeben.

(4)

Verordnung (EU) 2019/2022 der Kommission vom 1. Oktober 2019 zur Festlegung von Ökodesign-Anforderungen an Haushaltsgeschirrspüler gemäß der Richtlinie 2009/125/EG des Europäischen Parlaments und des Rates, zur Änderung der Verordnung (EG) Nr. 1275/2008 der Kommission und zur Aufhebung der Verordnung (EU) Nr. 1016/2010 der Kommission (siehe Seite 267 dieses Amtsblatts).

Image: EU Energy Label for Amica GSP 14544 W. Click to view detailed product information on EPREL.

WARRANTY INFORMATION

The Amica GSP 14544 W dishwasher comes with a minimum manufacturer's warranty of **12 months**. Please retain your proof of purchase for warranty claims. For detailed terms and conditions, refer to the warranty card included with your appliance or visit the official Amica website.

CUSTOMER SUPPORT

For further assistance, technical support, or to access additional resources, please visit the official Amica website:

[Amica Official Website](#)

You can also find more product information and support details on the product data sheet available via the EPREL database.

