

## Xoopar XBOY31007

# Xoopar Boy Bluetooth Speaker User Manual

Model: XBOY31007

## 1. INTRODUCTION

Thank you for purchasing the Xoopar Boy Bluetooth Speaker. This manual provides important information regarding the setup, operation, and maintenance of your new speaker. Please read this manual carefully before use to ensure proper operation and to maximize your listening experience.



Figure 1: Xoopar Boy Bluetooth Speaker (Black)

The Xoopar Boy Bluetooth Speaker is a compact and portable audio device designed for wireless music streaming. Its unique design and robust features make it an ideal companion for enjoying your favorite audio content on the go.

## 2. PACKAGE CONTENTS

Please check the package contents upon unboxing to ensure all items are present:

- 1 x Xoopar Boy Bluetooth Speaker
- 1 x Charging Cable (typically USB, not explicitly listed but implied for charging)
- 1 x User Manual (this document)



Figure 2: Product Packaging

### 3. PRODUCT FEATURES

The Xoopar Boy Bluetooth Speaker offers a range of features for an enhanced audio experience:

- Supports wireless music streaming via Bluetooth technology.
- Stereo audio input interface for connecting computers, digital music players, cell phones, and other audio devices.
- Built-in rechargeable lithium battery for portability and energy saving.
- High-quality audio decode chip for clear sound quality.
- Mini, portable size with durable Aluminum Alloy raw material construction.



Figure 3: Speaker in a typical usage environment



Figure 4: Available color variants of the Xoopar Boy Speaker

## 4. SPECIFICATIONS

Feature	Specification
Bluetooth Version	3.0
Rated Power	2x3W (6 Watts Max Output)
Receiving Range	≥10M (approx. 33 feet, no blocking)
Power Supply	DC 5V
Battery Type	Li-ion (built-in)
Operating Time	≥6 Hours
Charging Time	2 Hours
Product Dimensions (W x H x D)	118 x 94 x 120 mm (approx. 4.65" x 3.7" x 4.72")
Material	Aluminum
Connectivity Technology	Bluetooth
Audio Output Mode	Stereo
Control Method	App (implied, but typically also physical buttons)
Compatible Devices	MP3 Player, Laptop, Tablet, Smartphone

## 5. SETUP

### 5.1 Initial Charging

Before using your Xoopar Boy Bluetooth Speaker for the first time, it is recommended to fully charge the built-in battery. This ensures optimal battery life and performance.

1. Connect the provided charging cable to the charging port on the speaker.
2. Connect the other end of the charging cable to a DC 5V power source (e.g., a USB wall adapter, computer USB port).
3. The charging indicator light (if present) will illuminate, typically red, during charging.
4. Charging takes approximately 2 hours. The indicator light will change color or turn off when charging is complete.

## 5.2 Powering On/Off

- **To Power On:** Press and hold the Power button (location not specified, assume standard placement) for a few seconds until you hear an audible prompt or see an indicator light.
- **To Power Off:** Press and hold the Power button again for a few seconds until you hear an audible prompt or the indicator light turns off.

## 6. OPERATING INSTRUCTIONS

### 6.1 Bluetooth Pairing

To stream audio wirelessly, you need to pair the speaker with your Bluetooth-enabled device (smartphone, tablet, laptop, etc.).

1. Ensure the speaker is powered on and in pairing mode. Typically, the speaker will automatically enter pairing mode when first turned on or if it's not connected to a device. A blue indicator light might flash rapidly.
2. On your audio device, enable Bluetooth and search for available devices.
3. Select "Xoopar Boy" or a similar name from the list of found devices.
4. Once paired, the speaker will confirm with an audible sound, and the blue indicator light will typically stop flashing and remain solid.
5. You can now play audio from your device through the Xoopar Boy speaker.

*Note: The speaker has a receiving range of approximately 10 meters (33 feet) without obstructions. For optimal connection, keep your device within this range.*

### 6.2 Audio Playback

After successful pairing, control audio playback (play, pause, skip tracks, volume) directly from your connected Bluetooth device. The speaker itself may have limited controls for volume or track navigation, depending on its design.

### 6.3 Wired Connection (if applicable)

The speaker features a stereo audio input interface. If your device does not have Bluetooth or you prefer a wired connection, you can use a 3.5mm audio cable (not included) to connect your device to the speaker's AUX input port (if present).

## 7. MAINTENANCE

### 7.1 Cleaning

- Wipe the speaker with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.
- Avoid getting moisture into any openings.

## 7.2 Storage

- Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, charge the battery periodically (e.g., every 3-6 months) to maintain battery health.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Charge the speaker fully.
Cannot pair with Bluetooth device.	Speaker is not in pairing mode; Device's Bluetooth is off; Speaker is too far from device; Interference.	Ensure speaker is in pairing mode; Turn on Bluetooth on your device; Move speaker closer to device; Move away from other wireless devices.
No sound from speaker.	Volume too low; Device not connected; Incorrect audio source.	Increase volume on both speaker and device; Ensure successful Bluetooth connection; Check if AUX cable is properly connected if using wired.
Poor sound quality or intermittent connection.	Device too far; Obstructions; Low battery.	Move device closer to speaker; Remove obstructions; Charge the speaker.

## 9. SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures, humidity, or direct sunlight.
- Do not immerse the speaker in water or other liquids. It is not waterproof.
- Do not disassemble, repair, or modify the speaker yourself. Refer to qualified service personnel.
- Keep the speaker away from strong magnetic fields.
- Dispose of the battery and speaker responsibly according to local regulations. Do not dispose of batteries in fire.
- Avoid prolonged listening at high volumes to prevent hearing damage.

## 10. WARRANTY AND SUPPORT

Warranty information for your Xoopar Boy Bluetooth Speaker is typically provided at the time of purchase or included with the product packaging. Please retain your proof of purchase for warranty claims.

For technical support, troubleshooting assistance beyond this manual, or inquiries regarding warranty service, please visit the official Xoopar website or contact their customer service department. Contact details can usually be found on the manufacturer's website or product packaging.

*Legal Disclaimer: Buyers are responsible for any customs, duties, taxes, and brokerage fees to be paid to the courier or government. Please contact your local customs office for further inquiries. The manufacturer will not be responsible for any tariffs, duties, or other charges requested or required by destination countries.*

