

[Manuals.plus](#) /

> [Craftmade](#) /

> Craftmade Tempo 44 Inch Flush Mount Ceiling Fan with LED Light and Remote (Model TMPH44OB5) Instruction Manual

Craftmade TMPH44OB5

Craftmade Tempo 44 Inch Flush Mount Ceiling Fan with LED Light and Remote

Model: TMPH44OB5

INTRODUCTION

This manual provides detailed instructions for the safe installation, operation, and maintenance of your Craftmade Tempo 44-inch flush mount ceiling fan. Please read all instructions carefully before beginning installation and retain this manual for future reference.



Image: Craftmade Tempo 44 Inch Flush Mount Ceiling Fan with LED Light and Remote, Oiled Bronze finish. This image shows the complete fan assembly.

SAFETY INFORMATION

General Safety Precautions

- Ensure all electrical connections comply with local codes and ordinances.
- Disconnect power at the circuit breaker before installation or servicing.
- The fan must be mounted to a ceiling joist or support capable of supporting the fan's weight (18.6 lbs).
- Do not install on a sloped ceiling. This fan is designed for flush mount installation only.
- This fan is rated for indoor locations only.
- Ensure blades are clear of any obstructions during operation.

Proposition 65 Warning

This product may expose you to chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Motor Assembly
- 5 Reversible Walnut / Matte Black Plywood Blades
- Light Kit (16W LED 3000K, 1415 Lumens, 80CRI Dimmable Light)
- Optional Oiled Bronze Blank Light Lens Cover (for no-light configuration)
- Handheld Remote Control
- Wall Control
- Installation Guide
- Parts Assembly

SETUP AND INSTALLATION

Pre-Installation

- Turn off power at the circuit breaker.
- Ensure the mounting location can support the fan's weight (18.6 lbs).
- Confirm the ceiling is flat, as this fan cannot be mounted on a sloped ceiling.

Mounting the Fan

Follow the detailed steps in the included Installation Guide for secure mounting of the fan to the ceiling electrical box. Ensure all wiring connections are made correctly according to the provided diagrams.

Blade Attachment

Attach the five reversible plywood blades to the motor assembly. Ensure all screws are tightened securely.

Light Kit Installation

Install the LED light kit. If you prefer a no-light configuration, use the optional Oiled Bronze blank light lens cover instead of the light kit.

OPERATING INSTRUCTIONS

Power On

Restore power at the circuit breaker after installation is complete.

Remote and Wall Control

Your fan can be operated using either the handheld remote control or the included wall control. Both controls offer the following functions:

- **Fan Speed Control:** Select from 3 fan speeds (low, medium, high).
- **Reverse Fan Direction:** Change the direction of blade rotation for seasonal comfort (downward airflow for cooling, upward for heat circulation).
- **Light Dimming:** Adjust the brightness of the integrated LED light.

Refer to the specific instructions in your Installation Guide for pairing the remote control with the fan, especially if installing multiple fans in close proximity.

MAINTENANCE

Cleaning

To maintain the appearance and performance of your fan, clean it periodically. Always turn off power at the circuit breaker before cleaning. Use a soft, damp cloth to wipe down the fan housing and blades. Avoid using abrasive cleaners or solvents that could damage the finish.

Blade Balance

If the fan wobbles during operation, ensure all blade screws are tight. A blade balancing kit (not included) can be used to correct minor imbalances.

TROUBLESHOOTING

Fan Does Not Operate

- Check that power is supplied to the fan at the circuit breaker.
- Ensure all wire connections are secure.
- Verify the remote control batteries are functional and correctly inserted.
- Confirm the remote control is properly paired with the fan. Refer to the installation manual for pairing instructions.

Fan is Noisy

- Check that all screws on the motor housing and blade attachments are tight.
- Ensure the fan is securely mounted to the ceiling support.
- Verify that no wires are rubbing against the fan housing.

Light Does Not Work

- Check the light kit wiring connections.
- Ensure the LED light is properly seated.
- Verify the remote control batteries are functional.

SPECIFICATIONS

Feature	Detail
Brand	Craftmade
Model Name	Tempo Hugger 44"
Model Number	TMPH44OB5
Color	Oiled Bronze-walnut
Product Dimensions (D x W x H)	44"D x 44"W x 10.43"H
Item Weight	18.59 Pounds
Number of Blades	5
Blade Material	Engineered Wood
Number of Speeds	3
Wattage	72.00 W
Voltage	120 Volts
Light Type	LED (16W, 3000K, 1415 Lumens, 80CRI, Dimmable)
Control Method	Remote Control, Wall Control
Indoor Outdoor Usage	Indoor Only
Mounting Type	Ceiling Mount (Flush)
UPC	647881158606

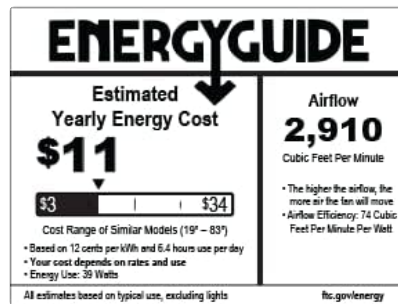


Image: Energy Guide label for Craftmade Tempo 44 Inch Ceiling Fan, indicating an estimated yearly energy cost of \$11 and airflow of 2,910 Cubic Feet Per Minute.

WARRANTY AND SUPPORT

Warranty Information

All products purchased have a 30-day replacement parts policy to ensure a fully working item. All products are covered under a 1-Year warranty when purchased on Amazon. The warranty period begins on the day the product is originally shipped. The warranty covers all items and conditions identified in the original manufacturer's warranty. Items specifically not covered by the warranty include loss and theft, water damage, customer abuse, and finish deterioration due to UV or coastal exposure.

Customer Support

For technical assistance or warranty claims, please contact Craftmade Customer Support at **(800) 486-4892**.

